Right choice for ultimate yield

LSIS strives to maximize customers' profit in gratitude of choosing us for your partner.

Programmable Logic Controller

XGR CPU Module

XGT Series

User's Manual

CPU XGR-CPUH/F

XGR-CPUH/T

XGR-CPUH/S

Expansion drive XGR-DBST


XGR-DBSF(S)

XGR-DBSH(S)

XGR-DBDT

XGR-DBDF

XGR-DBDH

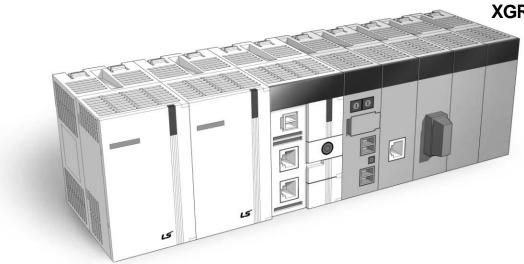



Safety Instructions

- Read this manual carefully before installing, wiring, operating, servicing or inspecting this equipment.
- Keep this manual within easy reach for quick reference.



Before using the product ...

For your safety and effective operation, please read the safety instructions thoroughly before using the product.

- Safety Instructions should always be observed in order to prevent accident or risk by using the product properly and safely.
- Instructions measures can be categorized as "Warning" and "Caution", and each of the meanings is as follows.

Warning

This symbol indicates the possibility of serious injury or death if some applicable instruction is violated



This symbol indicates the possibility of severe or slight injury, and damages in products if some applicable instruction is violated

Moreover, even classified events under its caution category may develop into serious accidents depending on situations. Therefore we strongly advise users to observe all precautions in a proper way just like warnings.

► The marks displayed on the product and in the user's manual have the following meanings.



/! Be careful! Danger may be expected.



/4\ Be careful! Electric shock may occur.

After reading this user's manual, it should be stored in a place that is visible to product users.

Safety Instructions for design process

Warning

- Please install a protection circuit on the exterior of PLC so that the whole system may operate safely regardless of failures from external power or PLC. Any abnormal output or operation from PLC may cause serious problems to safety in whole system.
 - Install protection units on the exterior of PLC like an interlock circuit that deals with opposite operations such as emergency stop, protection circuit, and forward/reverse rotation or install an interlock circuit that deals with high/low limit under its position controls.
 - If any system error (watch-dog timer error, module installation error, etc.) is detected during CPU operation in PLC, all output signals are designed to be turned off and stopped for safety. However, there are cases when output signals remain active due to device failures in Relay and TR which can't be detected. Thus, you are recommended to install an addition circuit to monitor the output status for those critical outputs which may cause significant problems.
- Never overload more than rated current of output module nor allow to have a short circuit. Over current for a long period time may cause a fire.
- Never let the external power of the output circuit to be on earlier than PLC power, which may cause accidents from abnormal output or operation.
- Please install interlock circuits in the sequence program for safe operations in the system when exchange data with PLC or modify operation modes using a computer or other external equipments Read specific instructions thoroughly when conducting control operations with PLC.

Safety Instructions for design process

I/O signal or communication line shall be wired at least 100mm away from a high-voltage cable or power line. Fail to follow this instruction may cause malfunctions from noise

Safety Instructions on installation process

- ▶ Use PLC only in the environment specified in PLC manual or general standard of data sheet. If not, electric shock, fire, abnormal operation of the product may be caused.
- ▶ Before install or remove the module, be sure PLC power is off. If not, electric shock or damage on the product may be caused.
- ▶ Be sure that every module is securely attached after adding a module or an extension connector. If the product is installed loosely or incorrectly, abnormal operation, error or dropping may be caused. In addition, contact failures under poor cable installation will be causing malfunctions as well.
- ▶ Be sure that screws get tighten securely under vibrating environments. Fail to do so will put the product under direct vibrations which will cause electric shock, fire and abnormal operation.
- ▶ Do not come in contact with conducting parts in each module, which may cause electric shock, malfunctions or abnormal operation.

Safety Instructions for wiring process

Warning

- Prior to wiring works, make sure that every power is turned off. If not, electric shock or damage on the product may be caused.
- After wiring process is done, make sure that terminal covers are installed properly before its use. Fail to install the cover may cause electric shocks.

∴ Caution

- ▶ Check rated voltages and terminal arrangements in each product prior to its wiring process. Applying incorrect voltages other than rated voltages and misarrangement among terminals may cause fire or malfunctions.
- ▶ Secure terminal screws tightly applying with specified torque. If the screws get loose, short circuit, fire or abnormal operation may be caused. Securing screws too tightly will cause damages to the module or malfunctions, short circuit, and dropping.
- ▶ Be sure to earth to the ground using Class 3 wires for FG terminals which is exclusively used for PLC. If the terminals not grounded correctly, abnormal operation or electric shock may be caused.
- ▶ Don't let any foreign materials such as wiring waste inside the module while wiring, which may cause fire, damage on the product or abnormal operation.
- Make sure that pressed terminals get tighten following the specified torque. External connector type shall be pressed or soldered using proper equipments.

Safety Instructions for test-operation and maintenance

Warning

- ▶ Don't touch the terminal when powered. Electric shock or abnormal operation may occur.
- Prior to cleaning or tightening the terminal screws, let all the external power off including PLC power. If not, electric shock or abnormal operation may occur.
- ▶ Don't let the battery recharged, disassembled, heated, short or soldered. Heat, explosion or ignition may cause injuries or fire.

Caution

- ▶ Do not make modifications or disassemble each module. Fire, electric shock or abnormal operation may occur.
- Prior to installing or disassembling the module, let all the external power off including PLC power. If not, electric shock or abnormal operation may occur.
- Keep any wireless equipment such as walkie-talkie or cell phones at least 30cm away from PLC. If not, abnormal operation may be caused.
- When making a modification on programs or using run to modify functions under PLC operations, read and comprehend all contents in the manual fully. Mismanagement will cause damages to products and accidents.
- Avoid any physical impact to the battery and prevent it from dropping as well. Damages to battery may cause leakage from its fluid. When battery was dropped or exposed under strong impact, never reuse the battery again. Moreover skilled workers are needed when exchanging batteries.

Safety Instructions for waste disposal

△ Caution

▶ Product or battery waste shall be processed as industrial waste.

The waste may discharge toxic materials or explode itself.

Revision History

Version	Data	Main contents	Revised location
V 1.0	'08. 6	First Edition	-
V 1.1	'08.7	1. Modifying contents	-
		(2) How to configure redundancy system	2-5
		(3) Performance specification	4-1,4-2
		(4) Scan Time	5-6,5-8
		(5) Program memory	5-28
		(6) I/O module skip function	6-19,6-20
		(7) Module changing wizard during RUN	6-21
		(8) Performance specification	7-1,7-3
		(9) Example of calculating consumption current/power	8-5
		(10) Caution in handling	11-5
		(11) Grounding	11-13
		2. Adding contents	-
		(1) XGR redundancy system configuration	1-3
		(2) Remote I/O system	2-13
		(3) Scan Time	5-8
		(4) I/O module skip	6-20
		3. Deleting contents	-
		(1) Max install-able module number in specification	7-1
V 1.2	'09.9	1. Modifying contents	-
		(1) Performance specification	4-2
		(2) redundancy parameter setting window	5-2, CH6
		(3) Flag	A-6, A-11
V 1.3	'09.9	1. Adding contents	
		 Contents on redundancy system communication operation setting (ONE IP Solution) 	6-18~20
		2. modifying contents	
		(1) Product list (add new products)	
		- XGR-DC32, XGR-DMMA	2-1
		- XGF-SOEA	2-3
		- XGL-EIPT	2-4

Revision History

Version	Data	Main contents	Revised location
V 1.4	'09.12	1. Adding contents	CH8.1, CH8.2, CH8.3
		(1) adding contents related to DC power	
V 1.5	'10.03	1. Adding contents	
		(1) Contents on reset/D.Clear	4-6
		(2) Contents on Cnet/FEnet module equipment	2-7
		(3) Contents on redundancy parameter	5-8~9
		(4) Warning flag	App-8
		(5) Smart Link wiring diagram and Event input module specifications	9-24~25
		2. Modifying contents	
		(1) Contents on parameter setting window	5-4, 6-1, 6-14~15
		(2) Contents on Fault mask setting	6-20
		(3) Module replacement	6-23~24
V 1.6	'10.10	1. Modifying contents	
		(1) Modifying contents	Ch3.1
		(2) Adding contents	Ch5.1.2
		(3) Adding modules	Ch5.1.4
		(4) Modifying contents on redundancy parameter	Ch5.1.4
		(5) Modifying contents on basic parameter	Ch6.7.1
V 1.7	'10.10	1. Modifying contents	
		(1) Overview	Ch1.1
		(2) System configuration	Ch2.1
		(3) Power module	Ch8.4.1
		(4) Base and expansion cable	Ch101.1
V 1.8	'10.10	1. Adding contents	
		(1) Adding contents on redundancy parameter	Ch5.1.4
		(2) Adding contents on redundancy parameter	Ch6.8.1
		(3) Adding contents on redundancy parameter	Ch6.9

Revision History

Version	Data	Main contents	Revised location
V 1.9	'11.06	1. Adding contents	
		(1) Adding module on Extension redundancy	1-1, 2-1, 7-2
		(2) Adding contents on Extension redundancy	1-3, 1-4, 2-8, 6-25,
			8-3, 10-2, 14-28
		(3) Adding contents on Flag	App-3/7/11/13
		(4) Adding optical single module	1-1, 2-1, 2-6, 4-1, 4-2, 7-1

 $[\]ensuremath{\,\%\,}$ The number of User's manual is indicated right part of the back cover.

[©] LSIS Co., Ltd 2008 All Rights Reserved.

About User's Manual

Thank you for purchasing PLC of LSIS Co., Ltd.

Before use, make sure to carefully read and understand the User's Manual about the functions, performances, installation and programming of the product you purchased in order for correct use and importantly, let the end user and maintenance administrator to be provided with the User's Manual.

The User's Manual describes the product. If necessary, you may refer to the following description and order accordingly. In addition, you may connect our website(http://eng.lsis.biz/) and download the information as a PDF file.

Relevant User's Manuals

Title	Description	No. of User's Manual
XG5000 User's Manual (for XGI/XGR)	It describes how to use XG5000 software, which it is applied to the IEC standard language, especially about online functions such as programming, printing, monitoring and debugging by using XGI/XGR series products.	10310000834
XGI / XGR Series Instructions & Programming	It is the user's manual for programming to explain how to use commands that are used PLC system with XGI CPU and XGR CPU.	10310000833
XGI-CPU User's Manual	It describes CPU specifications and technical terms for the XGT PLC system using a series of XGI-CPU.	10310000832

Chapter 1 Overview	1-1~1-8
1.1 About this User Manual	1-3 1-4
Chapter 2 System Configuration	2-1~2-14
2.1 Product List	2-5 2-5 2-7 2-8 2-8 2-8 2-10 2-13 2-13
Chapter 3 General Specifications	3-1
3.1 General Specifications	3-1
Chapter 4 CPU Module	4-1~4-8
4.1 Performance Specifications 4.2 Names and Functions of Parts 4.3 Battery 4.3.1 Battery specifications 4.3.2 Cautions for usage 4.3.3 Battery life 4.3.4 Replacement	4-3 4-7 4-7 4-7
Chapter 5 Program Constitution and Operation Method	5-1~5-33
5.1 Program Basics 5.1.1 Program Structure and Execution 5.1.2 Software Program Execution Methodology 5.1.3 Operation of instantaneous interrupt 5.1.4 Scan Time 5.2 Program Execution	5-1 5-2 5-5 5-6

5.2.1 Program Type	5-11
5.2.2 Program Execution	
5.2.3 Restart Mode	
5.2.4 Task Program	
5.3 Operation Mode	
5.3.1 Operation Mode	
5.3.2 RUN mode	
5.3.3 Stop Mode	
5.3.4 Debug Mode	
5.3.5 Switching Operation Mode	
5.4 Redundancy System Operation	
5.4.1 Redundancy System Operation	
5.4.2 Start-up of Redundant System	
5.5 Memory	5-31
5.5.1 Program memory	5-31
5.5.2 Data memory	
5.5.3 Data retain area setting	5-32
•	
Chanter C CDI I Madula Functions	64.624
Chapter 6 CPU Module Functions	0-1~0-24
6.1 Self-diagnosis Function	6-1
6.1.1 Scan watchdog timer	
6.1.2 I/O Module Check Function	6-3
6.1.3 Battery level check	6-3
6.1.4 Saving error log	
6.1.5 Troubleshooting	
6.2 Clock Function	
6.3 Remote Functions	
6.4 Forced On/Off Function of I/O	
6.4.1 Force I/O Setting	
6.4.2 The point of time of method of forced On/Off process	
6.5 Operation history saving function	
6.5.1 Error history	
6.5.2 Mode change history	
6.5.3 Shut down history	
6.5.4 System history	
6.6 External device failure diagnosis function	
6.7 Redundancy system operation mode	
6.7.1 Operation mode setting	
6.7.2 Data synchronization area setting	
6.8 Setting operation of communication	
6.8.1 Automatic master conversion	
6.8.2 Global status variable	
6.8.3 ONE IP Solution	
6.9 Fault Mask Function	
6.9.1 Applications and operations	
6.9.2 Fault mask setting	
6.9.3 Releasing fault mask	
6.10 I/O Module Skip Function	
6.10.1 Applications and operations	6-21
6.10.2 Setting and processing I/O data	
6.10.3 Releasing skip function	
6.11 I/O Base Skip Function	6-22

6.11.1 Purpose and outline of the operation	6-22
6.11.2 Setting method	6-22
6.11.3 Releasing skip function	6-22
6.12 Module Replacement Function during Operation	6-23
6.12.1 Module replacement in redundant system	6-23
6.12.2 Replacing I/O module in redundant system	6-23
6.12.3 Replacing base module in redundant system	
· · · · · · · · · · · · · · · · · · ·	
Chapter 7 Extension Drive Module	
7.1 Performance specifications	7-1
7.2 Identification and Function	
Chapter 8 Power Module	8-1~8-5
8.1 Type and Specification	Q.1
8.2 Parts' Names	
8.3 Selection	
8.4 Examples of Current Consumption/Power Calculations	
· ·	
Chapter 9 IO Module	9-1~9-25
9.1 Cautions for Selecting Modules	9-1
9.2 Digital Input Module Specifications	9-3
9.2.1 8 point DC24V input module(source/sink type)	9-3
9.2.2 16 point DC24V input module(source/sink type)	9-4
9.2.3 16 point DC24V input module(source type)	
9.2.4 32 point DC24V input module(source/sink type)	
9.2.5 32 point DC24V input module(source type)	9-7
9.2.6 64 point DC24V input module(source/sink type)	
9.2.7 64 point DC24V input module(source type)	
9.2.8 16 point AC110V input module	
9.2.9 8 point AC220V input module	
9.3 Digital Output Module Specifications	9-12
9.3.1 8 point relay output module	
9.3.2 16 point relay output module	
9.3.3 16 point relay output module(Surge Killer built-in type)	
9.3.4 16 point Triac output module	9-15
9.3.5 16 point transistor output module(sink type)	9-16
9.3.6 32 point transistor output module(sink type)	
9.3.7 64 point transistor output module(sink type)	
9.3.8 16 point transistor output module(source type)	
9.3.9 32 point transistor output module(source type)	
9.3.10 64 point transistor output module(source type)	
9.4 Digital I/O Combined Module Specifications	9-22
9.4.1 32 point(DC input transistor output) I/O combined module	
9.5 Applications of Smart Link	9-23
9.5.1 Modules accessible to Smart Link	
9.5.2 Smart Link connection	
9.5.3 Smart Link Wiring Diagram	
9.6 Event Input Module Specifications	4 <u>-</u> 75

9.6.1 Event Input Module (Source/Sink type)	9-25
Chapter 10 Base and Extension Cable	10-1~10-5
10.1 Specifications	10-1 10-1
10.1.4 Extension cable	10-3 10-4 10-4
Chapter 11 Installation and Wiring	11-1~11-13
11.1 Installation	11-111-311-811-1011-1111-11
Chapter 12 Maintenance	12-1~12-2
12.1 Repairs and Maintenance	12-1
Chapter 13 EMC Compliance.	13-1~13-4
13.1 Requirements Complying with EMC Specifications 13.1.1 EMC specifications 13.1.2 Panel 13.1.3 Cable 13.2 Requirements Complying with Low Voltage Direction 13.2.1 Specifications applicable to XGT series 13.2.2 Selection of XGT series PLC	13-1 13-2 13-3 13-4 13-4
Chapter 14 Troubleshooting	14-1~14-27
14.1 Basic Troubleshooting Procedure	14-2

14.2.2 Action when WAR. (Warning) LED is on	
14.Z.Z AUIUH WHEH WAR. (VValliliy) LED 15 UH	14-4
14.2.3 Action when ERR. LED is on.	14-8
14.2.4 Action when RUN/STOP LED is off	14-9
14.2.5 Acton when I/O module does not work properly	14-10
14.2.6 Action when writing program is not possible	
14.2.7 Action when Sync. cable is not installed properly	
14.2.8 When undesirable master switching occurs	
14.2.9 When newly added CPU does not join redundant operation	14-15
14.2.10 When failing to switch master	
14.2.11 When extension cable is disconnected	
14.2.12 When extension driver gets error	14-19
14.3 Troubleshooting Questionnaires	
14.4 Cases	
14.4.1 Trouble types and measures of input circuit	14-22
14.4.2 Trouble types and measures of output circuit	
14.5 Error Codes List	
14.5.1 Error codes during CPU operation	14-25
·	
Appendix 1 Flags List	App-1~App-18
Appendix 1.1 User Flag	App-1
Appendix 1.2 System Error Representative Flag	۸
Appendix 1.2 dystem Life itepresentative hay	App-2
Appendix 1.2 System Error Detail Flag	App-6
Appendix 1.3 System Error Detail Flag	App-6
Appendix 1.3 System Error Detail Flag Appendix 1.4 System Warning Representative Flag	App-6 App-8 App-10
Appendix 1.3 System Error Detail Flag	App-6 App-8 App-10 App-11 App-16
Appendix 1.3 System Error Detail Flag	App-6App-8App-10App-11App-16App-16
Appendix 1.3 System Error Detail Flag	App-6App-8App-10App-11App-16App-16
Appendix 1.3 System Error Detail Flag	
Appendix 1.3 System Error Detail Flag	

Chapter 1. Overview

1.1 About this User Manual

This User Manual describes the performance specifications and operation procedures of the redundancy system including the XGR-CPU, in addition to the configuration of communication system and the use of special module in relation to the redundancy system.

This User Manual provides the basic specifications of the CPU module, power module, I/O module, main/expansion base of redundancy and expansion drive module, which are applied to the basic system of redundancy (XGR).

Classification	Model Name
Redundancy CPU Module	XGR-CPUH/F, XGR-CPUH/T, XGR-CPUH/S
Expansion Drive Module	XGR-DBST, XGR-DBSF(S), XGR-DBSH(S)
Redundancy Power Module	XGR-AC12, XGR-AC22, XGR-AC13, XGR-AC23, XGR-DC42
I/O Module	XGI-aaa, XGQ-aaa
Redundancy Basic Base	XGR-M02P, XGR-M06P
Redundancy Expansion Base	XGR-E12P, XGR-E12H
Redundancy Expansion Drive Module	XGR-DBDT, XGR-DBDF, XGR-DBDH

For programming, see following manuals in addition to this User Manual;

- XG5000 User Manual (for XGI/XGR)
- XGI/XGR Instruction User Manual

For further information on the special and communication modules, see the manuals and technical data pertinent to each special module and communication modules.

- User Manuals of the special modules
- User Manuals of the communication modules

This User Manual contains following information.

Chapter	Subject	Description	
Chap. 1	Overview	Describes the configuration, product features, and glossaries.	
Chap. 2	System Configuration	Describes the product types and system configurations available for the XGR series.	
Chap. 3	General Specifications	Provides the common specifications of the modules used in the XGR series.	
Chap. 4	CPU Module Specifications		
Chap. 5	Configuration of program and operation method	Describes the performance, specification, and operation of the XGR-CPUH.	
Chap. 6	CPU Module Functions		
Chap. 7	Expansion driver module		
Chap.8	Power Module	Describes the specifications and use of the I/O module and power module,	
Chap. 9	IO Module	except the CPU module.	
Chap. 10	Base ·Expansion Cable		
Chap. 11	Installation and Wiring	Provides the guidelines for installation, wiring and precaution of the PLC system to secure system reliability.	
Chap. 12	Maintenance	Provides the items and methodology of maintenance for PLC system to prevent failure throughout the service life.	
Chap. 13	EMC Compliance	Provides the system construction and configuration in response to the EMC specification.	
Chap. 14	Troubleshooting	Describes various errors and faults which may occur in the system and countermeasures	
Append. 1	Flag List	Describes the types and contents of various flags.	
Append. 2	Dimensions	Provides the external size of the CPU, I/O module and base.	
Append. 3	GLOFA Compatibility		
Append. 4	Warranty		

Note

- 1) This User Manual does not describe the special and communication modules and programming. Refer related manuals for the information.
- 2) XGR CPU is a kind of XGT PLC system whose CPU type can be classified as follows;
 - ① XGK Series: the XGT PLC systems having the CPU using Master-K language(LS language)
 - 2 XGI Series: the XGT PLC systems having single CPU using IEC language
 - ③ XGR Series: the XGT PLC systems having redundant CPUs using IEC language

1.2 Configuration of the XGR Redundant System

XGR Redundancy System provides reliable solution for various types of redundancy systems required in diversified applications. The XGR Redundancy System is economical and user-convenient because the system makes use of the most resources of the XGI system, added with the components for redundancv.

Redundancy

- CPU module redundancy
- Power module redundancy
- Ethernet communication module redundancy

Modules for redundancy

- 2 redundant CPUs [optical, electrical]
- 5 types of power module [standard, large output] AC110V, AC220V, DC24V individual
- Redundant bases [2, 6 slots: 2, 6 communication modules can be installed]
- 3 types of expansion drive modules [per media class: optical, electrical, mixed]
- Expansion base [12 slots: according to consumption current]
- 3 types of redundancy expansion drive modules [per media: Optical, electrical, mixed]
- Redundancy expansion base [12 slots: according to consumption current]

CPU Module

- IEC 61131-3 language supported, ladder process rate of 42ns/command, 3MB (Approx. 128kstep) program capacity, 131,072 of I/O points
- 1Gbps optical communication for CPU synchronization
- Built-in I/O communication master
- Provides 2 types of CPU module according to the I/O communication media [optical, electrical]

Redundant system Network

- Expansion drive module
- Topology: ring [bus type operation activated in case of one error]
- Provides optical, electrical, and combined media
- Applied with 100Mbps class industrial Ethernet technology
- Max. available I/O points: 23,808 (31 stations x 12 slots x 64 points)

Programming Tool

- Integrated control of all the all XGT types with XG5000 XGK, XGI, XGB, XGR
- Convenient programming, various motoring function, diagnosis function, edit funtion
- Supports various IEC type languages: LD, ST, SFC, IL[Only view function]
- Supports communication parameter setting, frame monitoring function through XG-PD
- Supported with software packages per functionalities for motion, APM, temperature controller, etc.

1.3 Features of the XGR Redundancy system

XGR Redundancy System provides optimized solutions in various applications with its superb performance and convenience features.

High performance

- ✓ CPU process rate: 42ns / command
- ✓ High speed backplane
- ✓ Large capacity control points: max. 131,072 points
- ✓ Sufficient program capacity (max. 128ksteps)
- ✓ Sufficient data memory: 25MB
- ✓ Long data type (64bit) and high speed real number operation (single, double) provided
- ✓ Switching operation with minimum delay: if the master CPU fails, operation is switched to the backup CPU within 50ms

Minimum size implemented

- ✓ Compact panel can be implemented with the minimum size among the class
- ✓ CPU module: Width(55 mm) * Height(98 mm) * Depth(90 mm)
- ✓ Power module
 - 1) XGR-AC12/AC22: Width (55 mm) * Height (98 mm) * Depth (90 mm)
 - 2) XGR-AC13/AC23: Width (55 mm) * Height (98 mm) * Depth (110 mm)

Easy expansion using network

- ✓ Easy installation of expansion bases using network cable
- ✓ Up to 31 remote bases can be added
- ✓ Software program can be uploaded/downloaded via online access from expansion base
- ✓ Communication master module on expansion base enables the installation of smart I/O at anywhere

Improved maintenance maintain ace by system history, network ring configuration, etc.

- ✓ Provides system analysis data including the operation, error, and system histories
- ✓ Network ring configuration enables normal system operation even when a network cable fails
- ✓ Provides network monitoring and protocol monitoring functions
- If communication fails (smart I/O, etc.), the failed channel can be monitored (by monitoring the flag via HMI).
- ✓ Graphic display of system configuration
- ✓ Module Changing Wizard enables safe replacement of module during operation
- ✓ Base Changing Wizard enables safe replacement of base during operation

IEC 61131-3 (standard language) specification compliance

- ✓ Provides IEC standard LD, ST, SFC, IL(only view function)
- ✓ Provides IEC standard program structure and data type

Supports various communication functions

- ✓ Open network enables convenient interface with other products (Ethernet, Profibus, DeviceNet, RS-232C, RS-422/485, etc.)
- ✓ Supports various protocols for improved convenience
- ✓ Up to 24 communication master modules (12 high speed links, 8 P2Ps) can be mounted on one redundant system.
- ✓ Simple and east network diagnosis using network and communication frame monitoring function
- ✓ RAPIEnet module can be inserted on basic base.

Diverse I/O modules are provided for easy system configuration

- √ 8, 16, 32, and 64 point modules are provided (8/16 point modules for relay output)
- ✓ Single input, single output, mixed I/O module provided

Extended applications with enhanced analog function

- ✓ Analog modules can be connected to the slots of all the expansion bases (max. 250 output modules, 139 input modules)
- ✓ Supports various applications with insulated type analog and temperature module.
- ✓ Convenient use by special parameter settings and flags
- Strengthened debugging function by monitoring flags and data and changing the setting value through special monitor display window

Provides integrated programming & engineering environments

- ✓ Integrated control of all the all XGT types with XG5000 XGK, XGI, XGB, XGR
- ✓ Convenient programming, various motoring function, diagnosis function, edit funtion
- ✓ Supports various IEC type languages: LD, ST, SFC, IL[Only view function]
- \checkmark Supports communication parameter setting, frame monitoring function through XG-PD
- ✓ Supported with software packages per functionalities for motion, APM, temperature controller, etc.

Provides diversified additional function

- ✓ Battery backup and flash memory backup for software programs
- √ Various restart mode(warm, cold)
- √ Task program process
- ✓ Forced ON/OFF of I/O
- ✓ Clock
- ✓ Module changing wizard available during operation
- √ Fault mask function
- ✓ Module skip function
- ✓ Extensive operation history supported (system history)
- ✓ Detail error report supported (error history)
- ✓ LED indication of operation status
- Dot matrix indicator: display operation information and abnormal matters in texts.

PID Function

- ✓ Max. 256 loops supported
- ✓ Parameter setting using XG5000, convenient monitoring on loop status through Trend monitor
- ✓ Easy control parameter setting using improved auto-tuning function
- ✓ Provides various control modes including normal/reverse combination operation, 2 step SV PID control, cascade control, etc.
- ✓ Safety secured by diversified alarm functions including PV MAX, PV change, etc.

1.4 Glossary

This section provides the major terms and their definitions, used in this Manual.

Terms	Definition	Remark
Module	A standardized component having a specific function to constitute a system. E.g., I/O board designed to be inserted into base.	CPU module, power module, I/O module, etc.
Master CPU Module	The CPU module running the present software program. Automatically switched to backup CPU module when the operation is stopped and transfers the control	
Standby CPU Module	The control function of the master CPU module is transferred to this standby CPU module in case of failure, and this standby CPU module becomes the master CPU module.	
Redundant Basic Base	This base can accommodate the CPU module and Ethernet communication module. •Master CPU system: the redundant basic system whose CPU module is operating as the master. •Standby CPU system: the redundant basic base whose CPU module is operating as backup mode.	
Redundant Expansion Base	Expansion base where power module, I/O module, and special/communication module can be installed. (The communication module can be any module except the FEnet and RAPIEnet).	
Expansion Drive Module	The module for communication between bases. It also enables setting the base numbers (1~31) with a rotary switch	
Synchronous cable	1Gbps optical cable for connection between the CPU modules of a redundant system	
CPU redundancy	As a part of redundant system, the system is constructed to enable continuous operation when the master CPU module fails using a backup CPU module	
Power redundancy	A system constructed with redundant power modules to enable continuous system operation when a module of the base fails	
Unit	A module or a set of module which is the minimum unit of a PLC system operation. A PLC system comprises units and/or sets of units	Basic unit. Expansion unit
PLC System	A system consists of PLC and peripheral devices and can be controlled with user software program	
XG5000	A programming tool for developing software program, editing and debugging	
Module Changing Wizard	A software used for the replacement of CPU module during PLC operation. Power module, I/O module, some of the special modules, and base module can be replaced with this software	Replaceable special modules: A/D,D/A, HSC,RTD

Chapter 1. Overview

Terms	Definition	Remark
Cold Restart	Starting a PLC system and user program after initializing all data (variables and programs such as I/O image area, internal register, timer, counter, etc.) automatically or manually	
Warm Restart	Along with the function that notifies user-program about power OFF incidents, the user programs are restarted with holding previous data according to setting, after a power OFF.	
I/O Image Area	The internal memory area of the CPU module installed to maintain I/O status	
Cnet	Computer Network	
FEnet	Fast Ethemet Network	
Pnet	Profibus-DP Network	
Dnet	DeviceNet Network	
Rnet	Remote Network	
RTC	Real Time Clock. The generic IC with a built-in clock function	
Watchdog Timer	The timer which monitors the preset running time of a user program, and triggers alarm if the process fails to be completed within preset time	
Function	The operation units which do not store the operation result in the instructions, such as the 4 arithmetical and comparison operations, and output the results of the inputs immediately	
Function Block	The operation units which store the operation results in the instruction, such as timer and counter, and use the results over multiple scans	
Direct Variable	The variables used without declaring name and type. For example, I, Q, and M areas are direct variables.	%IX0.0.2 %QW1.2.1 %MD1234, etc.
Automatic Symbolic Variable	The variables used with names and type declared by user if declared as 'INPUT_0'=%IX0.0.2, 'RESULT'=%MD1234, 'INPUT_0' and 'RESULT' names can be used in the program instead of %IX0.0.2 and %MD1234.	
Task	The condition for a program start-up, such as fixed cycle task, internal contact point task, and initialization task	

Terms	Definition	Remark
Sink Input	The method wherein the current enters PLC input terminal from switch when the input signal is turned ON PLC SW Common	Z: input impedance
Source Input	The method wherein the current enters switch from PLC input terminal when the input signal is turned ON Common PLC Current SW	
Sink Output	The method wherein the current enters output terminal from load when the PLC output is ON PLC Output Contact Current Common	
Source Output	The method wherein the current enters from output terminal when the PLC output is ON PLC Common Current Current Contact	

The XGR Series offer various products for basic systems, computer communication and network systems. This Chapter describes the configuration method and features of each system.

2.1 Product List

The product line of the XGR Series is as follows.

(1) Products exclusive for redundancy

Product	Model	Description
Redundancy CPU Module	XGR-CPUH/F	 Max. I/O points: 23,808, program capacity: 3MByte (including UPLOAD) For optical communication (multi mode, max. distance: 2km)
	XGR-CPUH/S	 Max. I/O points: 23,808, program capacity: 3MByte (including UPLOAD) For optical communication (single mode, max. distance: 15km)
	XGR-CPUH/T	Max. I/O points: 23,808, program capacity: 3MByte (including UPLOAD)For electrical communication
Redundancy Basic	XGR-M02P	For mounting redundancy CPU module, power redundancyAvailable for 2 communication modules
Base	XGR-M06P	For mounting redundancy CPU module, power redundancyAvailable for 6 communication modules
Redundancy Expansion Base	XGR-E12P	For mounting I/O module, power redundancyAvailable for 12 I/O modules
Redundancy Expansion Driver Base	XGR-E12H	 For mounting I/O module, power redundancy Extension drive module redundancy Available for 12 I/O modules
	XGR-DBST	Communication module for XGR expansion base operation. Electrical media
	XGR-DBSF	 Communication module for XGR expansion base operation. Optical media (multi mode, max. distance: 2km)
Expansion Drive Module	XGR-DBSH	 Communication module for XGR expansion base operation. Electrical/optical media mixing (multi mode, max. distance: 2km)
	XGR-DBSFS	 Communication module for XGR expansion base operation. Optical media (single mode, max. distance: 15km)
	XGR-DBSHS	 Communication module for XGR expansion base operation. Electrical/optical media mixing (single mode, max. distance: 15km)
	XGR-DBDT	 Communication module for XGR expansion drive redundancy base operation. Electrical media
Expansion Drive Redundancy Module	XGR-DBDF	 Communication module for XGR expansion drive redundancy base operation. Optical media (multi mode, max. distance: 2km)
redundancy wedate	XGR-DBDH	 Communication module for XGR expansion drive redundancy base operation. Electrical/optical media mixing (multi mode, max. distance: 2km)
	XGR-AC12	• DC5V: 5.5A, AC110V input
Power Module	XGR-AC22	• DC5V: 5.5A, AC220V input
	XGR-AC13	• DC5V: 8.5A, AC110V input
	XGR-AC23	• DC5V: 8.5A, AC220V input
	XGR-DC42	DC5V: 7.5A, DC24V input

Product	Model	Description
Sync. Cable	XGC-F201 XGC-F301 XGC-F501	 LC type optical cable (multi core), length: 2 m LC type optical cable (multi core), length: 3 m LC type optical cable (multi core), length: 5 m
Dustproof module	XGR-DMMA	dustproof module for not used power module slot

(2) Common Products for XGT Series

(a) Digital I/O Module

Product	Model	Description
	XGI-D21A	DC 24V input, 8 points (current source / sink input)
	XGI-D22A	DC 24V input, 16 points (current source / sink input)
	XGI-D24A	DC 24V input, 32 points (current source / sink input)
	XGI-D28A	DC 24V input, 64 points (current source / sink input)
Digital Input Module	XGI-D22B	DC 24V input, 16 points (current source input)
	XGI-D24B	DC 24V input, 32 points (current source input)
	XGI-D28B	DC 24V input, 64 points (current source input)
	XGI-A12A	AC 110V input, 16 points
	XGI-A21A	AC 220V input, 8 points
	XGQ-RY1A	Relay output, 8 points (2A, single COM.)
	XGQ-RY2A	Relay output, 16 points (2A)
	XGQ-RY2B	Relay output, 16 points (2A), Varistor incorporated.
	XGQ-TR2A	Transistor output, 16 points (0.5A, sink output)
Digital Output Madula	XGQ-TR4A	Transistor output, 32 points (0.1A, sink output)
Digital Output Module	XGQ-TR8A	Transistor output, 64 points (0.1A, sink output)
	XGQ-TR2B	Transistor output 16 points (0.5A, source output)
	XGQ-TR4B	Transistor output 32 points (0.1A, source output)
	XGQ-TR8B	Transistor output 64 points (0.1A, source output)
	XGQ-SS2A	Triac output, 16 points (1A)
Digital I/O Mixed Module	XGH-DT4A	DC 24V input, 16 points(current source / sink input) Transistor output, 16 points (0.1A, sink output)
Anti-vibration Module	XGT-DMMA	Anti-vibration module for unused slots

(b) Process and Motion Control Modules

Product	Model	Description
A/D Conversion Module	XGF-AV8A	 Voltage input: 8channels DC 1 ~ 5V / 0 ~ 5V / 0 ~ 10V / -10 ~ +10V
	XGF-AC8A	 current input: 8 channels DC 4 ~ 20mA / 0 ~ 20mA
AVD Conversion Module	XGF-AD8A	Voltage/current input: 8 channels
	XGF-AD4S	Voltage/current input: 4 channels, insulated channels
	XGF-AD16A	Voltage/current input: 16 channels
	XGF-DV4A	 Voltage output: 4 channels DC 1 ~ 5V / 0 ~ 5V / 0 ~ 10V / -10 ~ +10V
	XGF-DC4A	current output: 4 channelsDC 4 ~ 20mA / 0 ~ 20mA
D/A Conversion Module	XGF-DV4S	Voltage output: 4 channels, insulated channel
D/A Conversion Module	XGF-DC4S	current output: 4 channels, insulated channel
	XGF-DV8A	 Voltage output: 8 channels DC 1 ~ 5V / 0 ~ 5V / 0 ~ 10V / -10 ~ +10V
	XGF-DC8A	current output: 8 channelsDC 4 ~ 20mA / 0 ~ 20mA
Thermocouple input Module	XGF-TC4S	Temperature (T/C) input, 4 channels, insulated channel
Resistance Temperature Detector	XGF-RD4A	Temperature (RTD) input, 4 channels
input Module	XGF-RD4S	Temperature (RTD) input, 4 channels, insulated channel
Temperature Control Module	XGF-TC4UD	 Control loop: 4 loops input(4 channels, TC/RTD/Voltage/current), output(8 channels, TR/current)
High Speed Counter	XGF-HO2A	Voltage input type (Open Collector type) 200KHz, 2 channels
Module	XGF-HD2A	Differential input type (Line Driver type) 500KHz, 2 channels
	XGF-PO3A	Pulse output(Open Collector type), 3 axes
	XGF-PO2A	Pulse output(Open Collector type), 2 axes
Positioning Module	XGF-PO1A	Pulse output(Open Collector type), 1 axis
Positioning Module	XGF-PD3A	Pulse output(Line Driver type), 3 axes
	XGF-PD2A	Pulse output(Line Driver type), 2 axes
	XGF-PD1A	Pulse output(Line Driver type), 1 axis
Motion Control Module	XGF-M16M	Exclusive net for motion (M-II) type, 16 axes
Event input module	XGF-SOEA	DC24V input, 32-point, Sequence of Event module

(c) Communication Modules

Product	Model	Description
	XGL-EFMF	Fast Ethernet(optical), Master 100/10 Mbps supported
FEnet I/F Module (optical/electrical)	XGL-EFMT	Fast Ethernet(electrical), Master 100/10 Mbps supported
	XGL-ESHF	Optical switch module for fast Ethernet
	XGL-EIMT	Communication module between PLCs, electrical media, 100 Mbps industrial Ethernet supported
RAPIEnet Communication Module	XGL-EIMF	Communication module between PLCs, optical media, 100 Mbps industrial Ethernet supported
	XGL-EIMH	Communication module between PLCs, electrical/optical mixed media, 100 Mbps industrial Ethernet supported
	XGL-C22A	Serial communicationRS-232C, 2 channels
Cnet I/F Module	XGL-C42A	Serial communication RS-422(485), 2 channels
	XGL-CH2A	Serial communication RS-232C 1 channel / RS-422(485) 1 channel
Rnet I/F Module	XGL-RMEA	 For Rnet Master I/F (Smart I/O communication supported) 1 Mbps base band For twisted cables
Profibus-DP I/F Module	XGL-PMEA	Profibus-DP master module
DeviceNet I/F Module	XGL-DMEA	DeviceNet master module
Ethernet/IP I/F Module	XGL-EIPT	EtherNet/IP (electricity) 100/10Mbps supported
Fnet I/F Module	XGL-FMEA	Fnet Master Module
Switching Hub Module	XGL-EH5T	• 10/100Mbps 5 –port switching hub module


Note

For the active coupler, optical converter, repeater and block type remote module, see the network related technical documents.

2.2 Redundancy System

2.2.1 Redundant System Configuration

The configuration of the basic system incorporating the redundant basic base and expansion bases connected with cables are shown below.

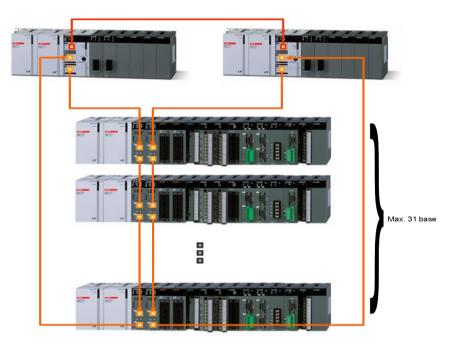

Classification	Description	
Basic base configuration	Constructed with 2 basic bases of the same structure.	
Extension base configuration	Constructed with 2 extension drive module of the same station number	
Max. extendable stacks	Expansion bases can be installed up to 31 stacks.	
Max. I/O modules	Up to 372 I/O modules can be installed in expansion bases.	
Max. I/O points	 16-point modules: 5,952 points 32-point modules: 11,904 points 64-point modules: 23,808 points 	
Max. expansion distance	Between bases Optical multi mode: 2 km Optical single mode: 15km Electrical: 100 m Total max length Optical multi mode: 62km (when installing 31 expansion modules) Optical single mode: 465km (when installing 31 expansion modules) Electrical: 3.1km (when installing 31 expansion modules)	

Classification	Description		
I/O number allocation for expansion bases	The beginning value of the I/O numbers of each base is determined by the base number setup in the expansion drive module. In the base, the I/O numbers are allocated by 64 (fixed) points per slot. Each slot is allocated with 64 points regardless of the installation and type of module. Different from the digital I/O modules, special modules do not use I/O number for control. They use U device and exclusive function block. An exemplary allocation of I/O numbers of a 12 slot base is shown below. Slot No. Dipput 33 4 5 6 7 8 9 10 11 Duput 32 1 pout 16 8 32 1 pout 16 9 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0		
I/O number of basic base	 Since communication module only can be installed on the basic base, I/O numbering is meaningless. Though the basic base does not use the I/O number, the same numbers (768 points) as that of a 12 lot expansion base are allocated. The basic base has the base No. of "0" located at the first digit of the I/O No. 		

Note

- (1)The redundant basic base has a fixed base No. of 0. Expansion bases are provided with switches for setting up base No.
- (2) The base modules installed with redundant CPU are available for the basic base only.
- (3) The redundant CPU is a CPU module which occupies 2 slots.
- (4) The type of module setup with I/O parameter must agree with that of the actual module to enable operation to start.


2.2.2 Redundancy of CPU system

A redundant system has the redundancy of power supply modules, CPU modules, basic base modules, and communication modules. On the basic base module of a redundant system, two identical power, CPU, and communication modules are installed. The two CPU modules are connected with a sink cable.

One of the two CPU systems functions as the master which is in charge of the operation and the other is the backup system which takes over the operation when the master system fails.

After correcting the failure, the previous master system can participate in the redundant operation as a backup system. Master and backup systems can be selected using software tool and key switch during redundant operation.

Use the switch on the CPU module to setup CPU-A and CPU-B. If the setting is duplicated with A or B, normal redundant operation cannot be achieved.

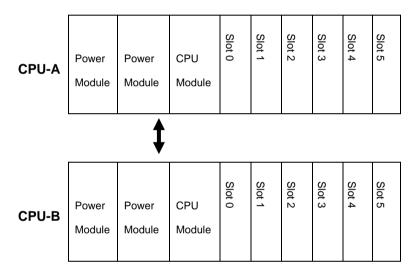

[Fig. 2.3.2] Slot configuration of duplicated basic base

The modules which can be installed on the basic base are as follows.

Modules		Type/Model
Main base	CPU Module	XGR-CPUH/T, XGR-CPUH/F
	Power Module	XGR-AC12, XGR-AC22, XGR-AC13, XGR-AC23
	Communication	FEnet I/F module, RAPIEnet I/F module, Cnet I/F module*1)
	Module	
	Base	XGR-M02P ^{*2)} , XGR-M06P
Expansion	Digital I/O	All types of digital I/O
base	Analog I/O	All types of analog I/O
	Communication	Pnet/Rnet/Dnet/Cnet I/F module
	Module	
*1) XGR CPU module V1.8 or above is needed.		
*4) VCD MOOD has is supported at VCEOOO \/2 C or shows		

*1) XGR-M02P base is supported at XG5000 V3.6 or above

Note

- (1) Redundant CPU cannot be installed on an expansion base module.
- (2) The O/S version of the two CPUs must be the same.
- (3) As shown in [Fig. 2.3.2], the modules on CPU-A: 0, 1, 2, 3, 4, 5 slots and CPU-B: 0, 1, 2, 3, 4, 5 slots must be of the same product type. If the CPU-A: 0 slot is installed with an XGL-EFMF(FEnet) module, the same module must be installed on the CPU-B: 0 slot.

2.2.3 Power Module Redundancy

The power modules of the basic and expansion base systems can have a redundancy.

The redundant power module enables continuous system operation without interruption when one of the two power modules fails to supply power.

Power system or power module failure can be repaired or the module can be replaced during operation without interruption.

2.2.4 Extension Drive Redundancy

Extension redundancy system consists of power module, extension drive module, redundancy extension base, redundancy cable. All modules except extension base modules are backed up by redundancy. One extension driver operates as master system and another operation as standby which gets the right when error occurs at master system. Master extension driver recovered from error gets stand-by and doesn't participate in an operation. When changing extension drive module during RUN mode, use "Base Skip".

Extension redundancy drive modules in the same extension base should have same station number. Extension redundancy drive module has to be mounted on the designated position of extension base

Master-standby status of extension driver is determined by operating status of CPU.


2.2.5 Expansion Base Communication Path Redundancy

Since the cable connection of the expansion bases are ring-structured, the system can be operated without interruption even when a cable fails, by using the other cable.

In normal ring operation mode, operation is performed using the path which is nearer to the master. When a cable fails, the system operation is maintained by line operation mode.

The failed cable can be replaced without interrupting the operation.

(1) Ring Operation Mode Dual ring method

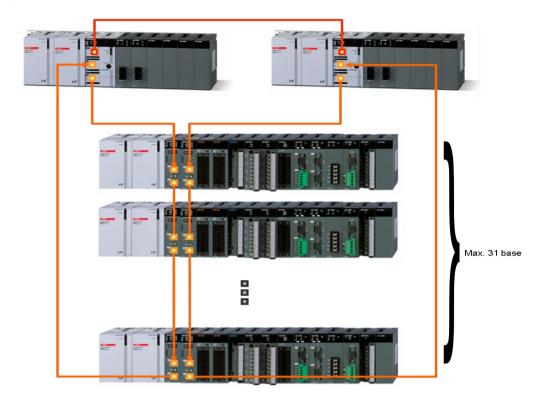


Note


- (1) Extension base system can be configured by dual ring method.
- (2) Diverse configuration is available but there is some limit. Refer to application note.
- (3) O/S version of both extension drivers should be same.
- (4) Switching of extension driver is same as that of CPU.
- (5) If there is error in extension base modules (digital/analog I/O, communication module in extension base), those are not backed up by redundancy.
- (6) You can use only one extension driver. But at this time, extension driver is not backed up by redundancy.
- (7) All extension drivers in the system need not be same.

2.2.6 Example of Redundant System Configuration

(1) Example of using electrical modules

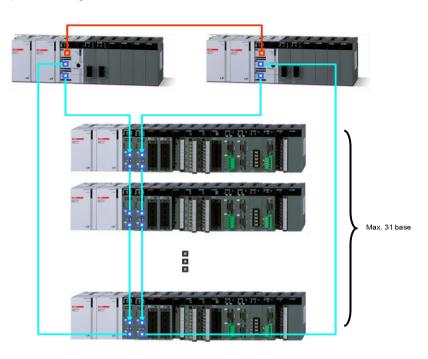


- (a) CPU-A module, CPU-B module: XGR-CPUH/T (b) Ext. drive modules of base 1,2,3: XGR-DBDT

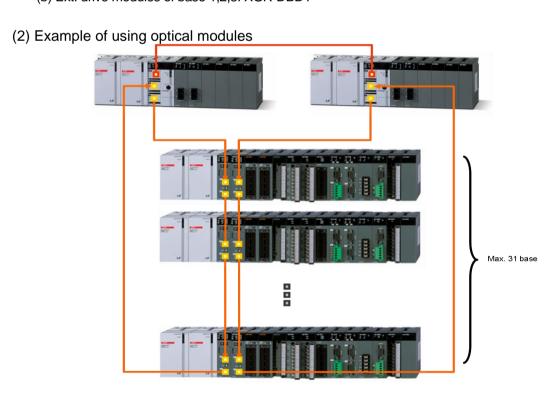

- (a) CPU-A module, CPU-B module: XGR-CPUH/F
- (b) Ext. drive modules of base 1,2,3: XGR-DBDF

(3) Example using mixed modules


In a system that electrical modules are already established where distance among the stations is too far or electrical noise is severe, the section can be replaced with optical modules to build an optical/electrical mixed module network without an additional converter.

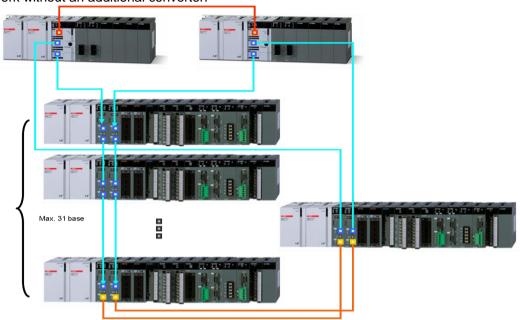

- (a) CPU-A module, CPU-B module: XGR-CPUH/T (b) Ext. drive modules of base 1,2,3: XGR-DBDT
- (c) Ext. drive modules of base 1,2,3: XGR-DBDH

(4) Example of using dedicated Ethernet for upper level HMI connection and between PLCs (Single ring)

The communication network between upper level systems, existing PLCs and the controllers from other suppliers can be constructed using an Ethernet communication module (FEnet). With XGT PLCs, a high speed and reliable system can be built using an industrial Ethernet module (RAPIEnet).

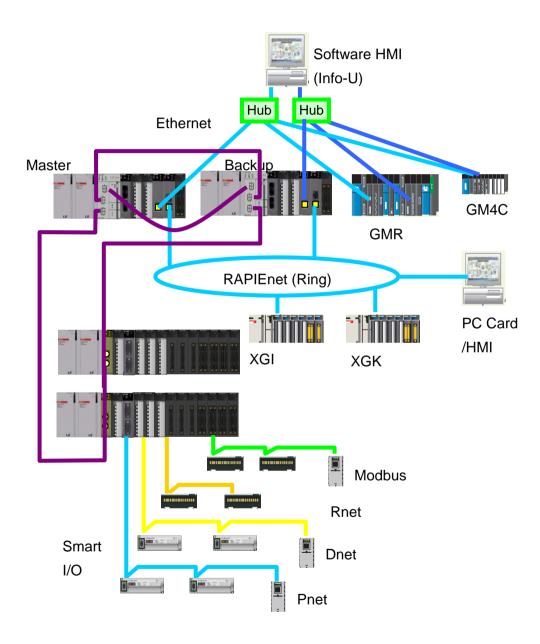

2.3 Network System

XGR Series support diversified network systems for flexible system configuration methodology.

For the communication between PLCs and upper level systems or between PLCs, Ethernet (FEnet, RAPIEnet) and Cnet are provided. For lower control network system, Profibus-DP, DeviceNet, and Rnet are provided.

2.3.1 Networking among Systems

Only FEnet and RAPIEnet communication modules are available for the redundant basic base. All communication modules except Ethernet communication module can be installed in the expansion base. Maximum 24 communication modules can be installed in the redundant basic base and expansion bases. Maximum number of modules limited by functionality are as follows;

Functionality	Maximum No. of Modules
Max. No. of modules for high speed link configuration	12
Max. No. of P2P ¹⁾ service modules	8
Max. No. of dedicated service (slave) modules	24

^{*}Note¹⁾: P2Pservice: 1 to 1 communication

2.3.2 Remote I/O System

For the control network systems of the I/O modules distributed across remote locations, Profibus-DP, DeviceNet, Rnet, Cnet, etc., are provided.

(1) I/O System Application by Network Type

Remote I/O modules are classified into base board type and block type (Smart I/O, etc.). Base board type may not be supported in certain network types.


No.	Network Type (Master)	Block-type Remote I/O (Smart IO)	Exttype Remote I/O
1	Profibus-DP	0	0
2	DeviceNet	0	0
3	Rnet	0	0
4	Cnet(MODBUS)	0	-

^{*} The above specifications can be changed for functional improvement. Please refer to the technical material of the network system for detail information.

(2) Block-type Remote I/O System

(a) System Configuration

Constructed with Profibus-DP, DeviceNet, Rnet and Cnet. Block-type remote I/O can be used regardless of the PLC series in the system. Profibus-DP and DeviceNet are developed in compliance with the international standard, therefore, they can be connected with other suppliers' products as well as our own.

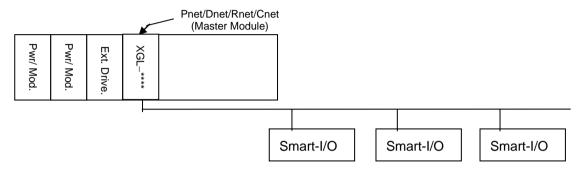

(b) I/O Allocation and I/O Numbering Scheme

- 1) available to allocate variable to remote IO by High Speed Link parameter
- 2) I, Q, M area of master can be designated as READ/WRITE area for the remote I/O area.
- 3) For smooth use of forced I/O setting function, it is recommended to use 'I' and 'Q' areas.
- 4) For the setting method of the high speed link parameters of module, see the technical documents of the network system.

Note

- (1) Remote station numbers and areas must be set-up without overlapping.
- (2) Input and output services, such as forced On/Off, are provided only when the inputs and outputs are allocated with I/O variables (%IW,%QW).
- (3) For SMART IO connected to master module, in case you set Read area(Q) and Save area(I) through XG-PD, forced I/O setting is available.

Chapter 3 General Specifications

3.1 General Specifications

Table 3.1 shows the general specifications of XGT series.

[Table 3.1] General specifications

	[Table 3.1] General specifications						
No.	Items	Specifications					Related standards
1	Ambient	0~55°C					
'	temperature			0~35 C			
2	Storage			–25∼+70°C	:		
	temperature			20 170 0			
3	Ambient		Ę	5 ~ 95%RH (Non-con	densing)		
4	humidity Storage humidity			5 ~ 95%RH (Non-con	idensina)		
	Storage Harrians			sional vibration	idei isii igj		
		Frequency		Acceleration	Amplitude	times	
		10 ≤ f < 57Hz	,	- Acceleration	0.075mm	uries	
	Vibration	$57 \le f \le 150Hz$		9.8m/s ² (1G)	0.075(1111)	_	
5	resistance	31 <u>3 1 3 1301</u> 2		nuous vibration		10 times each	IEC61131-2
	100.000.100	Frequency	Coriu	Acceleration	Amplitude	- directions	120011312
		10 ≤ f < 57Hz	,	_	0.035mm	— (X, Y and <i>Z</i>)	
		$\frac{10 \pm 1 \times 9112}{57 \le f \le 150Hz}$.9m/s²(0.5G)	-		
	a	Peak acceleration: 14		(0.00)		1	
6	Shock	• Duration: 11ms	, ,				IEC61131-2
	resistance	• Half-sine, 3 times each	n direction pe	r each axis			
		Square wave			L CIC atondord		
		Impulse noise		±1,500 V			LSIS standard
		Electrostatic		4121 (C	Contact discharge)		IEC61131-2
		discharge		- V VAF	on lact discribinge)		IEC61000-1-2
7	Noise resistance	Radiated					IEC61131-2,
		electromagnetic field noise		80 ~ 1,000 MHz, 10V/m			IEC61000-1-3
		lieid i loise	Segme	Power supply	Digital/anak	og input/output	
		Fast transient/bust	nt	module	_	ation interface	IEC61131-2
		noise	Voltage	2kV		1kV	IEC61000-1-4
8	Environment	Free from corrosive gasses and excessive dust					
9	Altitude	Up to 2,000 ms					
40	Pollution	·					
10	degree	2 or less					
11	Cooling	Air-cooling					

N0ote

- 1) IEC (International Electrotechnical Commission):
 - An international nongovernmental organization which promotes internationally cooperated standardization in electric/electronic field, publishes international standards and manages applicable estimation system related with.
- 2) Pollution degree:

An index indicating pollution degree of the operating environment which decides insulation performance of the devices. For instance, Pollution degree 2 indicates the state generally that only non-conductive pollution occurs. However, this state contains temporary conduction due to dew produced.

4.1 Performance Specifications


The performance specifications of the redundant CPU module are as follows.

Срепоннан			n u ic ic	edundant CPU module	Specifications		
	lte	em		XGR-CPUH/F	XGR-CPUH/S	XGR-CPUH/T	Remarks
Progra	Program operation method		od	Scan program: Reiterative operation, Fixed cycle scan Task program: Initialization, Cycle, Internal device			
I/C) Cont	rol system		Scan synchronous b	atch processing syste	m (refresh system).	Direct method by command is not supported.
Pr	ogram	ı language		LD (Ladder Diagram SFC (Sequential Fur IL (Instruction List, vie	•		
		Operator		18			
		Basic func	tion	130 types + real nu	ımber operation function	on	
No. o Instructi		Basic func	tion	41			
		Dedicated function blo		FB dedicated for sp	ecial module, FB for p	rocess control	
Opera	tion	Basic		0.042 µs / command	I		
Opera process		MOVE		0.112 µs / comman	d		
	speed (basic instruction) Real number operation		per	±: 0.602 \(\mu \sigma (S)\), 1.078 \(\mu \sigma (D)\) x: 1.106 \(\mu \sigma (S)\), 2.394 \(\mu \sigma (D)\) \(\div : 1.134 \(\mu \sigma (S)\), 2.660 \(\mu \sigma (D)\)		S: Single real number D: Double real number	
Progra	am me	mory capac	ity	3МВ			Including upload program
I/O	points	(installable)		23,808 points (31bas	ses * 12slots * 64points	s)	
Max. I/O	nemo	ry contact p	oint	l: 131,072, Q: 131,0)72		
	Input	variable(I)		16KB			
	Outp	ut variable(0	2)	16KB			
	Autor area(matic variab (A)	le	512KB (max. 256KB	retain settable)		
			M	256KB (max. 128KB	retain settable)		
	Direc	t variable	R	64KB * 2 blocks			64KB per block
Data memory			W	128KB			Same area with R
			F	4KB			System flag
			K	18KB (PID 256 loops	s)		PID flag
	Fla	g variable	L	22KB			High speed link flag
			Ν	42KB			P2P flag
			U	32KB (31 base, 16 sl	lot, 32channel)		Analogue refresh flag

Operation delay monitoring, memory fault, I/O fault, battery fault, power fault and etc

perauo ruday mo iioni ig, ma no y iduit, vo iduit, b		Specifications			Dament -
n	ltem -		XGR-CPUH/S	XGR-CPUH/T	Remarks
Т	Timer		 No point limit Time range: 0.001~ 4,294,967.295 second(1,193 hours) 		Occupying 20 bytes of automatic variable area per point
Co	ounter	No point limit Coefficient range : 6	4 bit expression range	e (-32,768 ~ +32,767)	Occupying 8 bytes of automatic variable area per point
	Total no. of programs	256			
	Initialization task	1(_int)			
Program structure	Fixed cycle task	32 (range: 0~31)			
	Internal device task	32 (range: 64~95)			Processed at scan END
Operat	ion mode	RUN, STOP, DEBUG			
Resta	art mode	Cold, Warm			
Self diagn	osis function	Operation delay monitori and etc	ng, memory fault, I/O faul	t, battery fault, power fault	
· ·	ction in case of er failure	Setting retain area in the Basic Parameter Retain setting of auto variable			
Max. exp	ansion base	31 stages			One base per stage
Max. length betwe	een expansion base	Optical (2km)	Optical (15km)	Electrical (100m)	
	Operation monitoring between CPU	Redundant monitorin	g by Sync. Line and rir	ng type I/O network	
	Data backup between CPU	1 G bps optical line, m			
	Data Sync. Method between CPU	Set in the Redundancy Parameter			
Redundancy performance	Delay in case of redundancy operation	Proportional to data which master transmits to backup - Max. 15ms - optimization available by user setting Basic 15ms + user designated amount (2kword) * 0.250ms/2kword			Refer to 5.1.4
	Master switching time	22ms			Refer to 5.1.4
	Operation delay in case of standby start	About 10% more than single operation scan time		Refer to 5.1.4	
Internal consum	ption current (mA)	1,310 mA		980 mA	
We	ght (g)	276 g		257 g	

4.2 Names and Functions of Parts

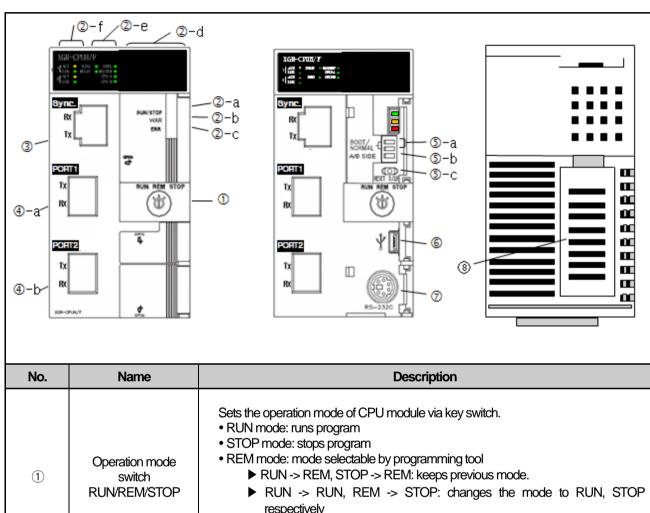

1	Operation mode switch RUN/REM/STOP	 REM mode: mode selectable by programming tool ▶ RUN -> REM, STOP -> REM: keeps previous mode. ▶ RUN -> RUN, REM -> STOP: changes the mode to RUN, STOP respectively ▶ In case operation mode is not REM, writing program and changing operation mode are not available by programming tool. (Monitoring and changing the data are available)
②-a	RUN/STOP LED	Shows the operation status of the CPU module. • Green light: 'RUN' mode • 'RUN' operation by mode switch (local run) • 'RUN' operation by programming tool with mode switch set as 'REM' (Remote run) • Red light: 'STOP' mode
		 ► 'STOP' operation by mode switch ► 'STOP' operation by programming tool with mode switch set as 'REM' (Remote stop)

No.	Name	Description
②-b	WAR. LED	On(yellow): displaying an warning Force I/O setting Skip I/O/Fault mask setting Run when Fuse error Run when I/O module error Run when special module error Run when communication module error Warning abnormal RTC data Warning existence of base which doesn't participate in the operation Abnormal operation stop warning Task collision warning Abnormal battery warning Warning detection of light error of external device High speed link setting warning P2P setting warning Fixed cycle error warning Abnormal base power module warning Abnormal base skip cancellation warning Abnormal base number setting warning Warning redundant configuration Warning OS version inconsistency Warning Ring topology configuration Off: No warning
②-c	ERR. LED	On(red): displays error makes the operation unavailable CPU configuration error Module type mismatch error Module detached error Fuse disconnection error Detection of heavy trouble of external device Basic parameter error Vo parameter error Program code error CPU abnormal end or malfunction Base power error Scan watchdog error Scan watchdog error Base information error Standby CPU run error Expansion base detached error Redundant parameter error Module insertion location error Expansion base no. overlapped error Redundant Sync. Error A/B side overlapped setting error Base abnormal configuration error

No.	Name	Description
②-d	Displaying operation status	 Displays operation status with 4 characters Normal operation Warning Error (Refer to XGR error code)
②-e	Displaying redundancy status	 Displays operation/installation status of CPU system. RED: On when redundant operation, Off when single operation MASTER: on; CPU operating as master, off; standby CPU CPU-A: on when CPU position designation switch (⑤-b) set as A CPU-B: on when CPU position designation switch (⑥-b) set as B
②-f	Displaying expansion network status	Displays communication status with expansion base • ACT On (yellow): relevant channel is operating • LINK On (Green): link of relevant channel is connected ▶ 1 indicates upper channel (④-a), 2 indicates lower channel (④-b). • RING On (Green): Expansion network is configured as Ring. • Ring Off: Expansion network is not established or configured as Line because part of Ring fails
3	Sync. connector	Data sharing and monitoring between two CPUS.

No.	Name	Desc	ription	
④-a ④-b	Connector for expansion connector	Connector used for connecting with expansion base For easy Ring configuration, two connector supported Two types, optical/optical, electrical/electrical		
⑤-a	BOOT/NORMAL switch	Used to download OS at first time • BOOT/NORMAL (right side): used for normal operation • BOOT/NORMAL (left side): used to download OS (OS download mode). Caution (1) BOOT/NORMAL switch always should be set to right side. (2) In case of setting to left side, system doesn't operate properly and It is not allowed for the user to use		
⑤-b	A/B side switch (CPU position designation switch)	Designates the logical position of CPU Left side means CPU position is set as A Right side means CPU position is set as B Two CPU should have a different position. (available to check in the programming tool) In case two PLC are set as same position, the lately started one cause "E101" error		
⑤-c	Reset/D. Clear switch	You can enable/disable Reset/D.Clear switt Operation Setup" 1. When Reset switch is enabled Operation move to left → return to center move to left → keep 3 seconds or above → return to center 2. When D.Clear switch is enabled Operation move to right → return to center: move to left → keep 3 seconds or above → return to center:	ch in "XG5000 → Basic Parameter → Basic Result Reset Overall reset Result General data area and retain area (M, Automatic variable) will be cleared. General data area, retain area (M, Automatic variable) and R area will be cleared.	
6	USB connector	Connector for connecting with peripheral (XG5000 etc.) (supports USB 1.1)		
7	RS-232C connector	Connector for connecting with peripheral (XG5000 etc.)		
8	Backup battery cover	Backup battery cover		

4.3 Battery

4.3.1 Battery specifications

ltem	Specifications
Nominal Voltage / Current	DC 3.0 V / 1,800 mAh
Warranty period	5 years(at ambient temperature)
Applications	Program/data backup, RTC operation in case of power failure
Туре	LiMnO2 Lithium Battery
Dimensions (mm)	φ 17.0 X 33.5 mm

4.3.2 Cautions for usage

- (1) Do not heat it up nor weld the electrode(it may reduce the life)
- (2) Do not measure the voltage with a tester nor short-circuit it(it may cause a fire).
- (3) Do not disassemble it without permission.

4.3.3 Battery life

The XGR-CPUH is designed to use it for 7 years and longer at any environment. However, the battery life varies depending on the duration of power failure, operation temperature range and etc.

If the battery voltage level is low, the CPU module generates a warning of 'Low Battery Level'. It can be checked by the LED of the CPU module, flag and error message in XG5000.

If it is occurred to a low battery level warning, please shortly change the battery.




Caution

In general, it generates the warning after 7 years from the purchase, but if the current is excessively discharged due to defective battery or leakage current, it may warn it earlier. If it warns shortly after replacing a battery, the CPU module may need A/S service.

4.3.4 Replacement

A battery used as a backup power for program and data in case of power failure needs replacing regularly. The program and data is kept by the super capacity for about 30 minutes even after removing the battery, but it needs urgently replacing it as soon as possible.

Replace a battery in accordance with the following steps.

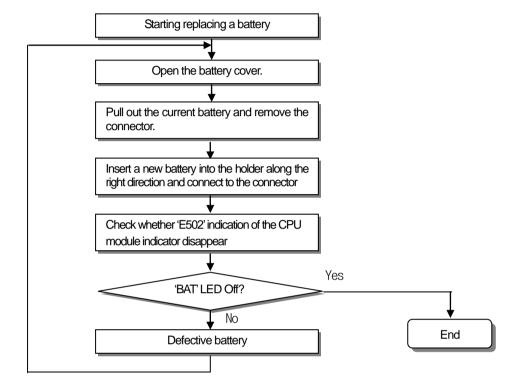


5.1 Program Basics

5.1.1 Program Structure and Execution

The program for the XGR PLC is made out with XG5000, compiled into an executable program, and transmitted to PLC for execution.


- (1) The programs can be classified into scan programs and task programs. The scan programs are executed at every scanning, and the task programs are executed by a task.
 - Scan program: the program executed every scan repeatedly
 - Task program: the program executed by task
- (2) A scan program runs from the first to the last step registered in the project in the registered order, and terminates the scanning (END). The entire process is referred to as "1 scan.'
- (3) This process methodology which runs a program from the beginning to the end and then runs the entire process again, is called 'cyclic operation method.'
- (4) Before starting the operation of a scan program, the status of the input module is read and saved in the input image area, and the status of the output image area is outputted to the output module when the operation of the scan program is completed. This process is called 'I/O Refresh.'
- (5) XGR PLC series is based on the cyclic operation method. In the operation process, input or output status is not entered directly, but the operation is executed by I/O refreshing by scan unit basis. To this end, the statuses of the input and output contact points are stored in the memory area of the PLC. This area is called image area.

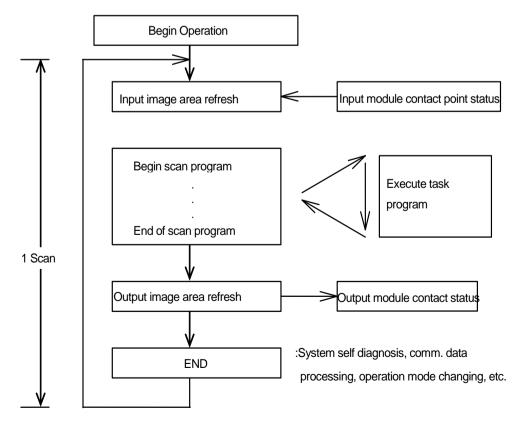

5.1.2 Program Execution Methodology

(1) Cyclic Operation Method (Scan)

A program scan is an operation cycle of a program from the first step to the end step. In a cyclic operation, the first step is restarted after the end step of the previous scan has been completed. The table below shows this process by step.

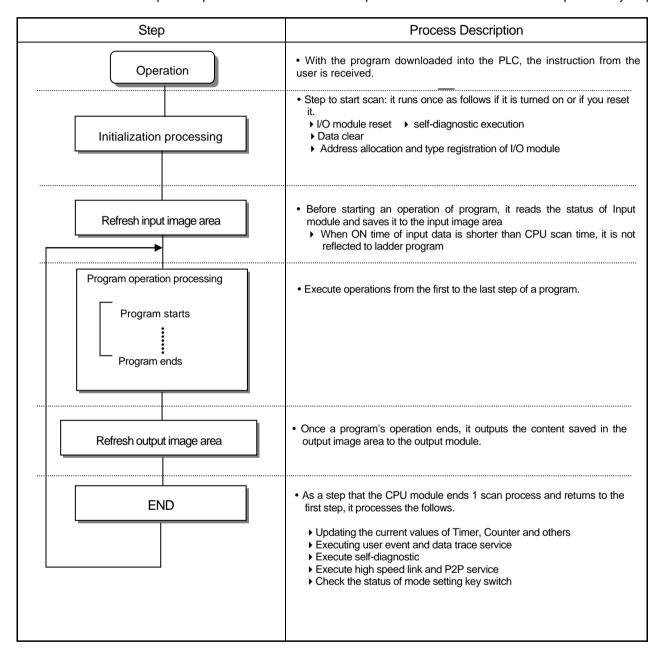

Note

The synchronization between the data of the master CPU and standby CPU begins after the start-up of the standby CPU. See 5.3 Operation Mode for the details of redundant operation.


5-2

(2) Interrupt Operation Method (Fixed Cycle Task Program)

In the interrupt operation method, if it is required to execute a task program with priority during scan program operation, the current scan program operation is interrupted and the task program is executed. When the task program operation is completed, the system returns to the previous scan program operation.

An interrupt signal instructs the CPU to execute a task program with priority.

A typical interrupt operation is the fixed cycle interrupt operation. In this method, the interrupt signals are generated at the times preset by the user to execute task programs. After the completion of a task program, the system returns to the scan program.

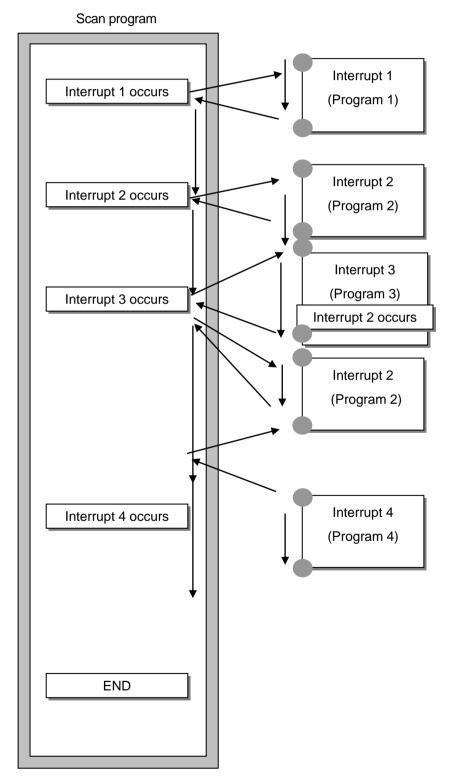


(3) Constant Scan

Constant scan is an operation method which repeats the execution of a basic scan program at fixed cycle time. In case that the fixed cycle time is longer than the time required for executing the scan program, the system waits for the remaining time, and restarts the scan program at the beginning of the next cycle time. Therefore, different from the fixed cycle task program, the program can be executed matching the I/O refreshing and synchronization. In such case, the scan time is indicated excluding the waiting time.

On the contrary, if the fixed cycle time is setup shorter than the time elapsed for the scan program execution, the ' CONSTANT ER' flag is turned 'ON' and the operation is executed with the time during which the operation can be executed.

The constant scan can be setup with the basic parameters of the XG5000.

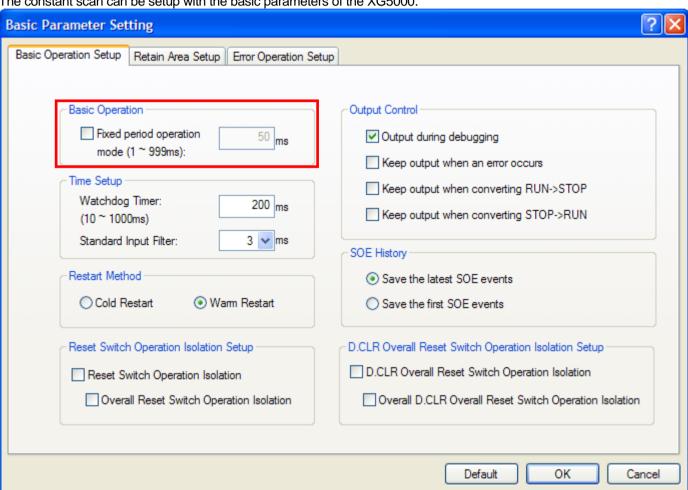

Note

When configured for a constant scan operation, the scan time is indicated as follows.


The maximum and current scan times are indicated with the scan times setup with the fixed cycle operation parameters, and the minimum scan time indicates the actual time elapsed for the program execution deducted with the waiting time.

5.1.3 Operation of instantaneous interrupt

The CPU module detects instantaneous interruption when the voltage of input power supplied to the power module is lower than the nominal value.


If the CPU module detects instantaneous interruption, it processes operation as follows.

(1) In case of instantaneous interruption within 20ms occurs

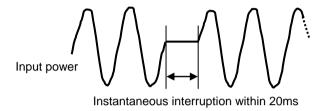


(2) In case of instantaneous interruption over 20ms occurs

- (a) It stops an operation with the output at the moment of instantaneous interruption maintained.
- (b) It resumes the operation once the interruption is removed
- (c) The output voltage of power module is maintained within the specified value.
- (d) Even though an operation stops due to instantaneous power failure, timer measurement and interrupt timer measurements still work normally.

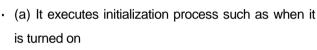

(b) In a redundant CPU operation, the system triggers CPU switch-over.

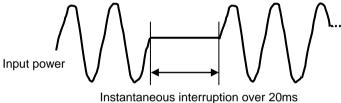

- (3) If the system has a redundant power, the operation will be one of followings;
 - (a) Instantaneous power interruption in one of two power modules which have been in operation;
 - the other power module keeps operation, without interrupting PLC operation.
 - (b) Instantaneous power interruption in both power modules by shorter than 20ms;
 - the modules operate as described in Clause 1) above.
 - (c) Instantaneous power interruption in both power modules by longer than 20ms;
 - the modules operate as described in Clause 2) above.

Note

(1) What is instantaneous interruption?

It means the status that the power supply voltage specified in the PLC is out of the allowable variance range and falls, and especially, a short term interruption(several ms ~ dozens of ms) is called instantaneous interruption.

(2) CPU switching

In a redundant CPU operation, if a power interruption longer than 20ms occurs in all the power modules of the master CPU, the operation is switched over to the standby CPU. For the details of redundant operation, see 5.3 Operation Mode.

5.1.4 Scan Time

The time required to complete all steps from the first step (0 step) to last step, that is, a time taken for one control operation is called 'scan time.' It is directly related to the control performance of the system.

(1) Operation and performance of XGR


The major factors which influence scan time are program operation time, I/O data process time, communication service time, and the data synchronization between the master and standby CPUs. By utilizing the hardware relay method for the data exchange between expansion drive modules, the data communication performance of the XGR is greatly improved. In addition, the scan time is greatly reduced by MPU's ladder program execution and the paralleled execution of the I/O data scanning by bus controller.

In a single CPU operation, the scan process times of CPU are as follows.

Item	Content to be processed	time
Process time of scan program	Scan program+ Task program	42ns per 4 byte of execution program
Process time of basic base	Module process	Communication module: within 200 μ s per one
	Communication service	Within 500 μ s per one service
	Every expansion base	Within 300 ⊭s per one base
	Module process	Digital I/O: within 10 \(\mu \sigma \) per one Special module: within 30 \(\mu \sigma \) Communication module: within 150 \(\mu \sigma \)
Process time of Expansion base	Communication service	Within 1000 ⊭s per service
Dase	PUT/GET instruction process	Different according to data ~ 0.5 kbyte: 800 \(\mu \sigma \) or less ~ 1 kbyte: 2.5 \(\mu \sigma \) or less ~ 4 kbyte: 8 \(\mu \sigma \) or less ~ 8 kbyte: 15 \(\mu \sigma \) or less
Process time of system	Basic O/S process routine, module error check, Fault mask, I/O skip etc.	Different according to setting environment In case of normal operation, within 4ms

(2) Calculation of scan time (Single CPU operation)

The CPU module executes controls along the following steps. A user can estimate the control performance of a system that the user is to structure from the following calculation.

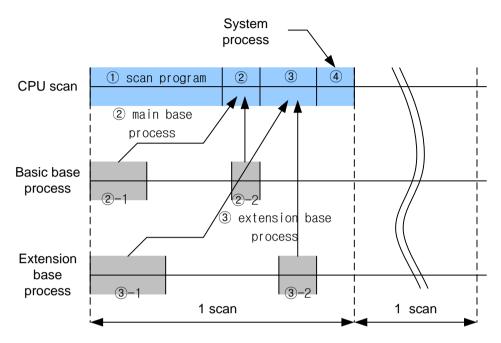

Scan time = 1) scan program process + 2) basic base process + 3) expansion base process + 4) system process

- ① Scan program process = program size/4 x 0.042 (usec)
 - (For correct scan time calculation, add the execution speed of the applied instructions.)
- 2 Basic base process
- 2-1. module process: processes refresh data of module in basic base
- Communication module: 200 μ s or less per one
- 2-2. communication service process: executes HS, P2P service
 - 500 μ s or less per one service
- 3 Expansion base process
- 3-1. module process: processes refresh data of module in basic base
 - Process time per expansion base: 300 μ s or less per expansion base
 - Digital I/O: 10 \(\mu \sim \) or less per one
 - Special module: 30 μ s per one
 - Communication module: 150 \(\mu \sigma \) or less per one
- 3-2. Communication service process and PUT/GET instruction process: executes HS, P2P service and PUT/GET instruction set by user
 - Communication service process: 1000 μ s or less per service
 - PUT/GET instruction process

~ 0.5 kbyte: 800 \(\mu \sigma \) or less ~ 1 kbyte: 2.5 \(\mu \sigma \) or less ~ 4 kbyte: 8 \(\mu \sigma \) or less ~ 8 kbyte: 15 \(\mu \sigma \) or less

- System process: executes system internal process includig basic O/S process routin, battery check, module error check, I/O skip, forced I/O, loader service etc.
 - different according to the environment In case of normal 4ms or less

Example

CPU(program 32KB) + 6 32-point I/O modules + 6 analog modules (total PUT/GET size 1000byte) + 4 communication modules (two in basic base, other two in expansion base, one communication service setting for each module) What is the scan time of above system (the number of expansion base is 2)

Scan time(μ S) = ladder process time + basic base process time + expansion base process time + system process time = $(32768/4 \times 0.042) + (200 \times 2 \text{(two communication modules)} + 500 \times 2) + (300 \times 2 \text{(expansion base)} + (10 \times 6) + (30 \times 6) + (150 \times 2) + 1000 \times 2 + 2500 \text{(PUT/GET)}) + (4000)$

- = 11384 µs
- = 11.4 ms

(3) Scan time monitor

In an actual XGR CPU operation, the actual scan time can be obtained by monitoring following data.

(1) Scan time is saved into the following flag(F) areas.

_SCAN_MAX : max. value of scan time(unit of 0.1ms)

_SCAN_MIN: min. value of scan time(unit of 0.1ms)


_SCAN_CUR: current value of scan time (unit of 0.1ms)


_SCAN_MAX, _SCAN_MIN value can be initialized using _SCAN_WR flag.

If the _SCAN_MAX is larger than WDT (Watch Dog Timer) value, a system error occurs. The WDT time can be setup with the basic parameters.

(4) Scan Time in Redundant Operation

In redundant operations, compared with single CPU operation, the scan time substantially increases due to the system data sharing between the CPUs. The scan time also varies according to the data volume setup by the user in the redundancy parameter setting area. The increase in the scan time by data volume is as follows.

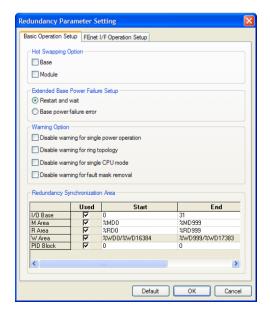

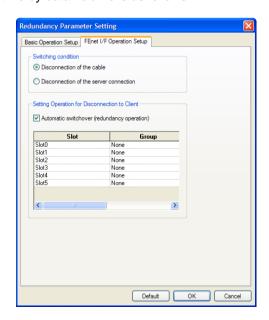

Redundancy parameter	Contents	Operation
Hot swapping	Base	Though base error occurs in normal RUN mode, system except that base operates. And if that base is restored, it operates normally.
option	Module	Though module is disabled, module detachment error doesn't appear. If that module is enabled, it operates normally.
Expansion base	Restart and wait	When two power modules of expansion base are off, system goes to WAIT mode (Ebxx)
power failure setup	Base power failure error	When two power modules of expansion base are off, CPU error appears
	Disable warning for single power operation	Disables warning message when one between two power modules in expansion base is off
Maraing antion	Disable warning for line Topology	Disables warning message when becoming line topology
Warning option	Disable warning for Single CPU Mode	Disables warning message when becoming Single CPU Mode
	Disable warning message for fault mask removal	Disables warning message when fault mask is removed.
	Disconnection of the cable	When the cable is disconnected, it is instantly switched. (within 1s)
Communication operation setting	Disconnection of the server connection	Master automatic switchover (redundancy operation) → When Master/Standby is acting as FEnet server, if the cable of the Master is disconnected, Standby becomes Master.

- (a) Redundant CPU system data: share basic data, e.g., system flag, communication flag, etc. (2.8ms)
- (b) Redundancy parameter setting data: synchronization time in each area is as follows;

I/Q base: 1ms/32 bases

M area: approx. 250 μ s per 2 kwords. Approx. 16 ms for synchronizing 128kword

R area: approx. 1.5ms per 2 kword. Approx. 12ms for max. 16 kword synchronization. (When 2 kword in R area is transmitted, 2 kword in W area are also transmitted; total 4 kword are transmitted)

PID Area: 016.7 μ s required for each PID setting one loop. When max. 8 blocks are synchronized, approx. 4ms is required.

Automatic variable area: 32KB → 2.5ms required

Example

CPU(program 32KB) + 6 32-point I/O modules + 6 analog modules (total PUT/GET size 1000byte)

+ 4 communication modules(two in basic base, other two in expansion base, one communication service for each one module) what is the scan time of above system? (Two expansion bases, synchronizes M area 2kword and PID 2 blocks)

Redundancy Run scan time = single Run scan time + time for synchronizing redundancy data

- = Single Run scan time + redundancy system data+ I/O base + synchronizing M area and PID area
- = 11.4ms + 2.8ms + 1ms + 0.25ms + 0.5 x 2
- = 16.45

(5) Delay Time at Entering Redundancy Operation

When a redundant CPU is added to single CPU operation, the scan time of the current scan cycle is increased temporarily, for the standby CPU to be initiated to enter redundancy operation mode. Since the data synchronization is carried out by 10% equivalent to the scan time of single operation, the scan time during the data synchronization increases by about 10% compared with single operation.




Caution

- (1) When the standby CPU is activated to change the system from single operation to redundant operation, the scan time increases for a short time to synchronize the program and data from the master CPU to the standby CPU.
- (2) It should be noted that, during single mode operation, including when the standby CPU is not in operation, data is not synchronized between the master CPU and standby CPU. Therefore, the data may differ from each other CPU.

5.2 Program Execution

5.2.1 Program Type

The programs for the XGR PLC can be classified as presented in the chart below, according to their conditions of execution. Total 256 programs can be used.

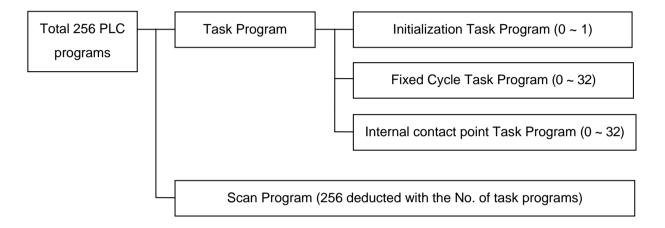

5.2.2 Program Execution

(1) Task Program

(a) Initialization Task Program

The initialization task programs are used for system initialization when starting PLC operation in cold or warm restart

During the execution of an initialization task program, the system operation status information flag _INIT_RUN is turned to ON.

The initialization task program executes cycle operation including I/O refresh until the _INIT_DONE flag is ON.

(b) Fixed Cycle Task Program

Fixed cycle task programs are executed in repetition at the cycle setup in the task.

(c) Internal Contact Point Task Program

The internal contact point task programs are executed when such events as rise, fall, transition, on, or off of the internal contact points occur.

The point of time of execution is determined by the condition of event occurrence after the completion of scan program.

(2) Scan Program

In order to process the signals which are repeated regularly in each scan, the operation is executed from the first (0) step to the last step in the sequential order.

In case that a condition of interrupt execution is met by the fixed cycle task or interrupt module during the execution of scan program, the current program is suspended, and the respective task (interrupt) program is executed. The occurrence of an event of internal contact point program is checked when the scan program has been completed.




Caution

- Of the initialization tasks, the first scan On/Off is executed for the first scan only, and not executed from the next scan until the completion of _INIT_DONE.
- The above mode applies when the master CPU is started from stop state. Since the standby operates according to the status of the master, restart mode does not apply.
- For manual reset switch activation in redundant operation, please take care of followings; Activating the reset switch of the master CPU will restart the entire system, but activating the reset switch of the standby CPU will restart the standby CPU only.
- When activating the Run/Stop switch during redundant operation, please take care of following; If you activate Stop switch of CPU operating as master, CPU operating as master will become Stop mode and standby CPU will operates as master

5.2.3 Restart Mode

The restart mode sets up the method of initializing variables and the system at the start-up of PLC operation. Restart mode has two types; cold and warm restart, which can be set up in the basic parameters of the XG5000.

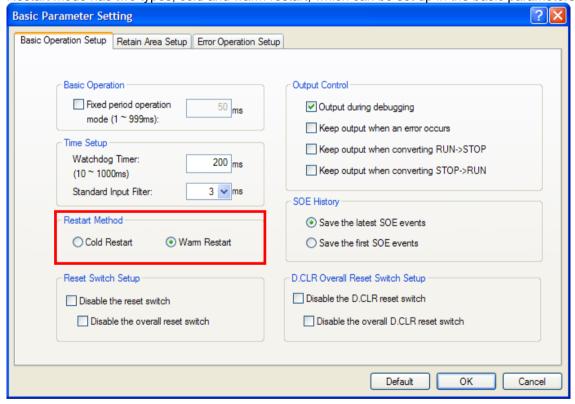

When the standby CPU starts up, it executes the initialization according to the restart mode and receives the program and data backup from the master. When set up in flash operation mode, it receives the flash data backup from the master too.

When the standby CPU is switched to master CPU during operation, it is not a restart, therefore, no further action is taken

The conditions of the execution of the restart modes are as follows.

(1) Cold restart

- (a) All data is reset (deleted) to "0." Here, the 'all data' means the M area, R area, and automaton variables. The flag area, such as PID, which does not belong to this category is not deleted.
- (b) Only the variables whose initial values are set up are reset to the initial values.
- (c) Even though the parameter is set up to warm restart mode, at the first running after changing the program to be executed, the following program will be executed with cold restart mode.
- (d) Pressing the manual rest switch for 3 seconds (same as the overall reset of the XG5000), the system will start in cold restart mode regardless of the set up restart mode.

(2) Warm restart

- (a) The data which was set up to maintain previous value will maintain the previous value. The data which has user defined initial value will be reset to the initial value. Other data will be deleted to "0."
- (b) When set up in warm restart mode, too, the first run, after an interruption by program download or error, will be started in cold restart mode.
- (c) When set up in warm restart mode, if the data is abnormal (data was not maintained during a power failure), the system will be started in cold restart mode.
- (d) Pressing the manual reset switch for less than 5 seconds during power-on, same as the reset instruction in the XG5000, if the setting is warm restart mode, the operation will begin in warm restart mode.

Data initialization according to the restart modes are as follows.

The variables related with restart mode are default, retain, and initialization variables. The method of initializing the variables in the execution of restart mode is as follows.


Mode Variable	Cold	Warm
Default	Initialize to '0'	Initialize to '0'
Retain	Initialize to '0'	Maintain the previous value
Initialization	Initialize to user defined value	Initialize to user defined value
Retain & Initialization	Initialize to user defined value	Maintain the previous value

5.2.4 Task Program

This section describes the programming and configuration of the task programs with XG5000 which is the programming software of the XGR.

(1) Programming Task Programs

(a) In the project window of the XG5000, select the PLC to which the task is added. Click the right button of mouse, and select [Add Item]-[Task].

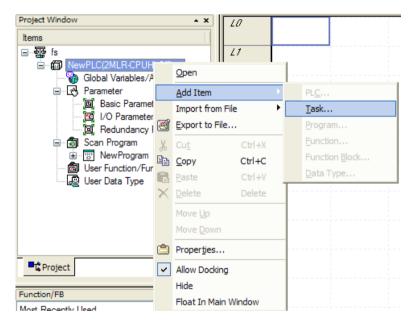


(b) In the Task dialog box, set up the task to be added, and click Confirm button.



Note

External contact point task is not supported in the XGR PLC Series, and will be developed in the near future.

(c) The configured task will be displayed as shown in the window below. For detail configuration, see the User Manual of the XG5000.

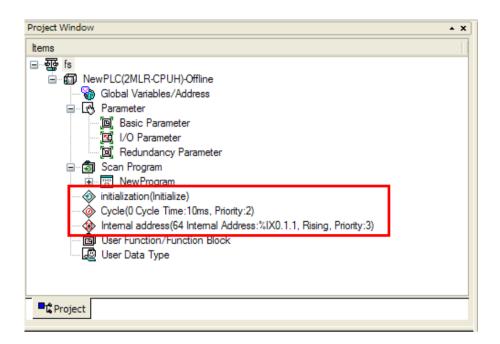

(2) Task Types

The below table summarizes the types and functions of tasks.

Type Spec.	Initialization	Cycle time	Internal address
Number	1	32	32
Start-up condition	When entering RUN mode, prior to starting scan program	Cycle time (settable up to 4,294,967.295 seconds at the unit of 1ms)	Conditions of internal device designation
Detection/exec ution	Execute until the flag _INIT_DONE is ON	Cyclically execute at the predefined interval.	Checks and Executes after completing scan program
Detection delay time	-	Delayed as long as 0.2ms to the max.	Delayed as long as the max. scan time.
Execution priority		Setting 2 ~ 7 levels (level 2 is the highest priority)	Setting 2 ~ 7 levels (level 2 is the highest priority)
Task number	-	Assigning it between 0~31 so that it is not duplicate	Assigning it between 64~95 so that it is not duplicated

(3) Processing method of task program

It describes the common processing method and cautions of task program

(a) Features of task program

- Task program does not reiteratively be processed like a scan program and instead, it is executed only when the execution conditions occur. Make sure to remember this when creating a task program.
- For instance, if a task program with 10 seconds of fixed cycle is used with a timer and counter, the timer may have an error of 10 seconds maximum while the counter checks every 10 seconds, any counter input changed within 10 seconds is not counted.

(b) Execution priority

- If several tasks to execute are waiting, it processes from the highest priority task program. If there are several tasks of same priority, they are processed by the order which is occurred.
- The task priority is applied to only each task.
- Please set the priority of task program considering program features, importance level and urgency demanding execution.

(c) Process delay time

The delay of task program processing occurs due to the following factors. Make sure to consider them when setting a task or creating a program.

- Task detection delay(please refer to the details of each task)
- Program execution delay due to the execution of preceding task program

(d) Correlation between scan program and task program in the initialization

Fixed Cycle task and internal contact point task does not operate while initialization task program is working.

Since scan program has a low priority, if a task occurs, it stops a scan program and executes a task program. Therefore, if tasks frequently occur during one scan, a scan time may increase unreasonably. A special attention should be paid when setting the conditions of task.

- (e) Protection from task program of a currently running program
 - If program execution continuity is lost by executing a higher priority program, you can partially protect the task program from being executed, for a problematic part. At the moment, a program can be protected by application function commands of 'DI (task program operation disabled)' or 'El(task program operation enabled)'
 - Insert the application function command, 'DI' into the beginning position of a section to be protected and the application function command, 'EI' to the position to cancel it. Initialization task is not affected by the application function commands of 'DI' and 'EI'.


Note

(1) If task program priority is duplicate set, a program works according to the creation order.

(4) Cycle Time Task Program

(a) Setting up cycle task

The window below shows the setting up of a fixed cycle task. In order to set up a fixed cycle task, enter task name, priority, and task number for task control, and select Fixed Cycle radio button in the Condition of Execution, and enter the cycle time of execution.

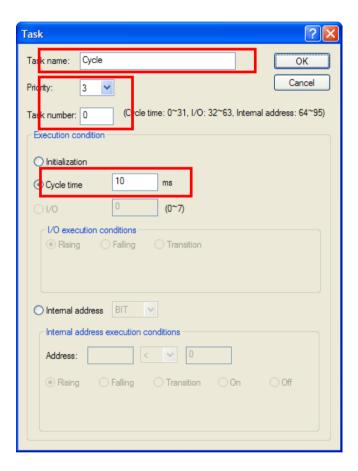

(b) Fixed cycle task processing

• Execute a fixed cycle task program at a pre-defined interval.

(c) Cautions for using a fixed cycle task program

- •If a same task program is to be executed when a fixed cycle task program is in operation or waiting for execution, a new task is ignored.
- Only for a moment when the operation mode is RUN, a timer requiring executing a fixed cycle program is counted. Any interruption time is ignored.
- Remember that several fixed cycle task programs are to be executed simultaneously when setting the execution cycle of a fixed cycle task program.

If using 4 fixed cycle task programs of which cycle is 2, 4, 10 and 20 seconds respectively, it may have simultaneous execution of 4 programs every 20 seconds, probably causing a longer scan time.

Caution


- (1) Note that if the total time length during which cycle time task are executed simultaneously is longer than the specified time length when several cycle time tasks occur simultaneously, a short cycle time task may not be successfully executed.
- (2) The only cycle time task of which cycle is longer than scan cycle can be guaranteed for the fixed cycle.

(5) Internal device task

Bit and Word device can be set as execution condition for task.

(a) Task setting

In order to set up an internal device task, set task name, priority, and task number, Internal Device, the type of device and the condition of start up (Rising, falling, transition, on and off)

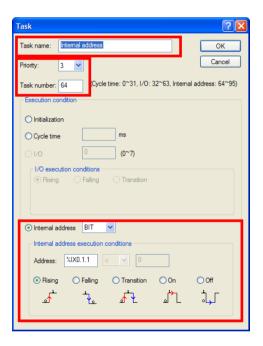

(b) Internal Device Task Handling

After the completion of scan program by CPU module, the internal device task program will be executed if starting condition is met according to the priority.

Caution

Internal address task program is executed at the moment when a scan program is completely executed. Therefore, although a scan program or task program generates the execution conditions of internal address task program, it is not immediately executed and instead, it is executed at the moment when a scan program is executed completely. Therefore, if the execution conditions of internal address task occur and disappear within a scan program, a task is not executed because it is not detected at the moment when the execution conditions are surveyed.

(6) Task processing in instantaneous interruption

When resuming operation due to a long instantaneous interruption, ignore any waiting task and tasks that occur during the interruption and process the only tasks from the moment of starting operation. If an interruption is within 20ms, a task that was waiting is executed once the interruption is removed. Any fixed cycle interrupt task that is duplicated during the interruption is ignored.

(7) Verification of task program

After creating a task program, verify it in accordance with the followings.

(a) Is the task set properly?

If a task occurs excessively or several tasks occur simultaneously in a scan, it may cause longer scan time or irregularity If a task setting can not be changed, check the max. scan time.

(b) Is the task priority well arranged?

A low priority task program may not be processed in a specified time due to a delay from a higher priority task program. The case may be, since the next task occurs with a preceding task delayed, it may cause task collision. The priority should be set in consideration of urgency of task, execution time and etc.

(c) Is the task program created as short as possible?

A longer execution time of task program may cause a longer scan time or irregularity. In addition, it may cause task program collision. Make sure to set the execution time as short as possible(especially, create a fixed cycle task program so that it could be executed within 10% of the shortest task cycle among several tasks.)

(d) Doesn't the program need to be protected against the highest priority task during the execution of program?

If a different task breaks into a task program execution, it completes a current task and then, operates from a task with the highest priority among waiting tasks. In case it is prohibited that a different task breaks into a scan program, it can be protected by using 'DI'/'EI' application functional commands. It may cause a trouble while processing a global parameter process commonly used with other program or a special or communication module.

(8) Program configuration and example of processing

First of all, register task and program as follows.

• Registering a task :

```
T_SLOW (fixed cycle : = 10ms, Priority := 3)

PROC_1 (internal contact : = M0, Priority := 5)
```

• Registering a program :


Program --> P0 (scan program)

Program --> P1 (operating by task T_SLOW)

Program --> (operating by task PROC_1)

Then, if the program execution time and the occurrence time of external interrupt signal are same,

- Execution time of each program: P0 = 21ms, P1 = 2ms and P2 = 7ms, respectively
- PROC_1 occurrence: During a scan program, the program is executed as follows.

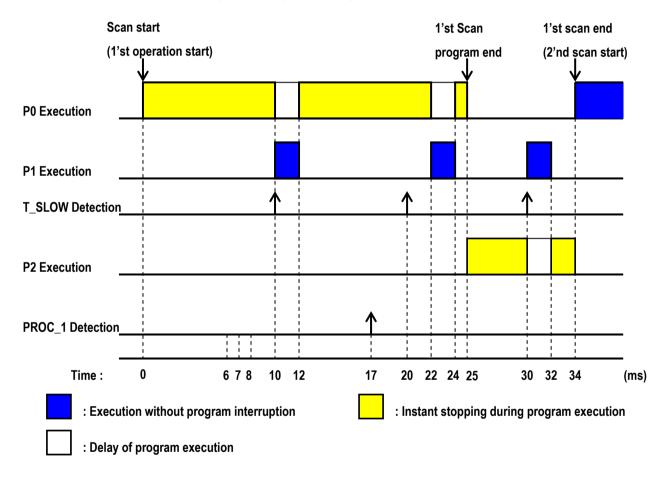

• Processing by time period

Time(ms)	Processing
0	Scan starts and the scan program P0 starts operation
0~10	Program P0 is executed
10~12	P0 stops due to the execution request for P1 and P1 is executed
17	Execution request for P2
12~20	P1 execution is complete and the suspended P0 resumes
20~24	P0 stops due to the execution request for P1 and P1 is executed
24~25	As P1 execution is complete, the suspended P0 is completely executed.
25	Check the execution request for P2 at the moment when scan program(P0) is
	complete and execute P2.
25~30	Execute program P2
30~32	P2 stops due to the execution request for P1 and P1 is executed
32~34	As P1 execution is complete, the suspended P2 is completely executed.
34	Start a new scan(P2 execution starts)

5.3 Operation Mode

5.3.1 Operation Mode


(1) Program Execution Mode

Program execution mode is the status of program execution by the CPU module. There are three modes; Run, Stop, and Debug. The operational status of each mode may vary by the status of the redundant operation.

It describes the operation process at each operation mode.

5.3.2 RUN mode

It executes a program operation normally.

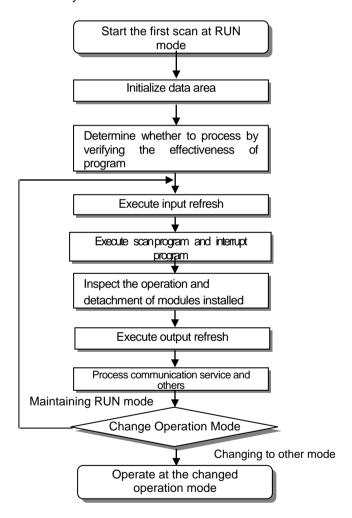

- (1) Process of switching to Run mode
 - (a) When the PLC module is switched to the Run mode, the data area is initialized.
 - According to the set up restart mode (cold, warm)
 - (b) Check the program validity to judge the possibility of execution.
- (2) Operation process

Execute I/O refresh and program operation.


- (a) Execute the interrupt program by detecting the operation conditions of interrupt program.
- (b) Inspect the operation and detachment of modules installed.
- (c) Process communication service and other internal operations.
- (d) Synchronize the data between the master and standby CPUs.

5.3.3 Stop Mode

It stops with no program operation. Program can be transmitted through XG5000 only at remote STOP mode.

(1) Process in mode switching

When switched to the Stop mode, the output images are processed in two ways according to the basic parameter setting, as shown below.

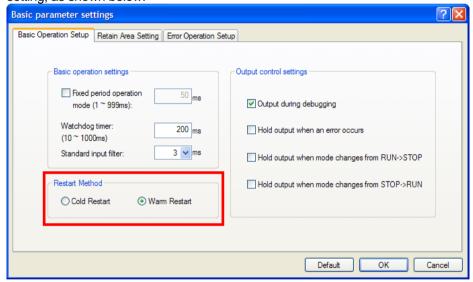

- (a) When set up to maintain output in Run → Stop switching
 When the mode is switched from Run to Stop operation, the output image area maintains the results of the last operation, and carries out output refreshing.
- (b) When the output is released from maintenance at switching from Run to Stop When the mode is switched from Run to Stop operation, the output image area is deleted and output refreshing is carried out.
- (2) Operation process
 - (a) Execute I/O refresh.
 - (b) Inspect the operation and detachment of modules installed.
 - (c) Process communication service and other internal operations.

5.3.4 Debug Mode

As a mode to find any error from a program or trace an operation procedure, the mode can be changed only from STOP mode. In the mode, a user can verify a program while checking the program execution and data.

- (1) Processing when a mode is changed
 - (a) At the beginning when the mode is changed, initialize the data area.
 - (b) Clear the output image area and execute input refresh.
- (2) Operation process
 - (a) Execute I/O refresh.
 - (b) Debugging operation depending on the settings.
 - (c) After completing debugging operation to the end of the program, it executes output refresh.
 - (d) Inspect the operation and detachment of modules installed.
 - (e) Process communication service and other internal operations.
- (3) Conditions of debug operation

There are four types of debug operation conditions and if reaching the break point, it is possible to set a different type of break point.

Operation condition	Description	
Stepwise execution of operation(step over)	Upon an operation command, it executes a unit of operation and stops	
Execution according to the designation of break point	Once a break point is designated in a program, it stops at the designated point	
Execution according to the status of contact	If designating the contact area to monitor and the status(read, write, value), it stops when the designated operation occurs at the pre-defined contact.	
Execution according to the designated scan frequency	Once designating the scan frequency to operation, it stops after operating as many as the scan frequency designated.	



- 1. Debug mode is only available in single system.
 - (1) To use debug mode, turn off the power of standby CPU and so that the system runs in single.
 - (2) Convert to remote stop mode by mode key switch.
- 2. During debug mode, the user can't change mode by mode switch.
- (4) Operation method
 - (a) Set the debug operation conditions at XG5000 and execute the operation.
 - (b) The interrupt program can be set by enabled/disabled at the unit of each interrupt. (For the details of operation, please refer to Chapter 12 Debugging in the user's manual of XG5000)

5.3.5 Switching Operation Mode

(1) How to change an operation mode

An operation mode can be changed as follows.

- (a) Mode change by the mode key of the CPU module
- (b) Change by accessing the programming tool(XG5000) to a communication port of CPU
- (c) Change of a different CPU module networked by XG5000 accessed to a communication port of CPU
- (d) Change by using XG5000, HMI and computer link module, which are networked.
- (e) Change by 'STOP' command while a program is operating.

(2) Type of Operation Mode

(a) Changing program execution mode with mode key the method of changing operation mode using mode key is as follows.

Mode Key Position	Operation Mode		
RUN	Local RUN		
STOP	Local STOP		
STOP → REM	Remote STOP		
$REM \rightarrow RUN$	Local RUN		
$RUN \rightarrow REM$	Remote RUN		
REM → STOP	Local STOP		

(b) Changing remote operation mode

Changing remote modes can be done with the operation mode switch at 'Remote Allowed: REM.'

Mode Key Position	Mode change	Mode change by XG5000	Change by computer communication, etc.
	$Remote\:STOP\toRemote\:RUN$	0	○(review)
	Remote STOP \rightarrow DEBUG	0	X
REM	$Remote\:RUN\toRemote\:STOP$	0	0
IXLIVI	Remote RUN \rightarrow DEBUG	X	X
	$DEBUG \to Remote \; STOP$	0	0
	$DEBUG \to Remote \; RUN$	X	X

Caution

If changing the remote 'RUN' mode to 'RUN' mode by switch, the PLC is continuously operating without suspension.


Editing during RUN is possible in the 'RUN' mode by switch, but the mode change by XG5000 is restricted. Make sure to change it only when the mode change is not remotely allowed.

5.4 Redundancy System Operation

5.4.1 Redundancy System Operation

(1) Redundant operation mode

A redundant system has data synchronization (SYNC) cable between CPUs. Each CPU module has a key switch for operation mode setting. The key switches look as shown below:

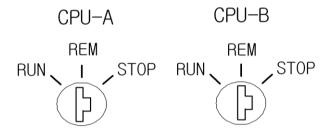

The operation statues of redundancy system can be classified as flows according to the installation, power supply, whether dada communication cable is connected between the CPUs, and the operation mode of each CPU.

Data sync. Cable between CPUs	Current operation status	Operation mode of CPU-A(B)	Operation mode of CPU-B(A)	Description
	Single operation	RUN	STOP	Only CPU-A or CPU-B is operating in redundant operation mode. Same single CPU operation.
Connected	Redundant operation	RUN	RUN	In redundant operation mode, CPU-A and CPU-B are set up as master and standby to perform redundant operation.
	Operation stopped	STOP	STOP	CPU-A and CPU-B are set up as master and standby to perform redundant operation, but the operation is stopped.
Not connected	Single operation	RUN/STOP	-	The operation is same as a single CPU operation.

Caution

When a standby CPU is added to a system operating with a single CPU (master) for redundant operation, the additional (standby) CPU must be installed in accordance with following procedures for uninterrupted operation of the PLC.

With the power of the standby-side base OFF, construct a same module as the master-side base.

Install the standby CPU in the CPU mounting slot. And set the A/B side switch in Standby CPU differently from Master CPU

Connect the CPUs with the data synchronization cable (Sync cable) and expansion cable.

Confirm that the cables are correctly connected, turn the power of the standby base ON.

Turn the operation mode switch to Local Run mode, so that the standby CPU is incorporated in the redundant operation.

The standby CPU must be incorporated in the redundancy system operation to be able to run the same programs as those of the master CPU.

(Take care that, if the standby CPU has not been participating in the redundant operation, its program may differ from that of the master CPU.)

- (2) Changing redundant operation mode
 - (a) According to the change of the CPU operation mode with mode key or by XG5000, the operation mode of the redundant system is changed as follows.

	Mode Change		Description
Current Status Master Operation Standby Operat		Standby Operation	
Single Operation	$RUN \to STOP$	STOP status is maintained	When the master is changed to STOP state, the operation is stopped
(RUN/STOP)	(No change: RUN)	→ RUN	Changing the standby to Run mode, the operation is changed to redundant operation.
Redundant	→ STOP	(No change: RUN)	If the master is changed to STOP, the standby becomes master in single operation status.
Operation (RUN/RUN)	(No change: RUN)	→ STOP	If the standby is changed to STOP, the master operates in single operation mode.
Operation Stop (STOP/STOP) → RUN (No change: RUI		(No change: RUN)	The one, A or B, that enters RUN mode first gets the operation control and becomes the master in single operation status.

- (3) Changing master in redundant operation
 - (a) Conditions for automatic master switching
 - 1) Master CPU power supply failure
 - 2) Master CPU stopped due to failure in program execution
 - 3) Module removal/replacement error in the master CPU's basic base
 - 4) Master CPU failure (CPU excluded)
 - 5) Module on an expansion base is removed (isolated)
 - 6) A system error in the master CPU (abnormal termination of CPU, scan watchdog error)
 - (a) Conditions for manual master switching
 - 1) Master CPU's mode key switch is set to Stop
 - 2) Switched to Stop mode by the XG5000 connected with the master CPU
 - 3) Execution of master switching instruction via XG5000 online access
 - 4) Master/standby switching instruction (MST_CHG) is executed
 - 5) Master/standby switching flag (_MASTER_CHG) is executed.
 - (c) Conditions that do not switch master
 - 1) One of two power supply fails
 - 2) Master fails when the standby has been failed
 - a) If the same failure is identified, the operation is stopped.
 - b) When en error is detected in the module in which error mask has been set up, the master is not switched.
 - 3) When the standby CPU is not in Run operation state

5.4.2 Start-up of Redundant System

- (1) Programming
 - (a) Conduct programming with XG5000. (For details, see 'XG5000 User Manual'.)
 - (b) Transmit the program

Transmit the program with XG5000.

(2) Starting methods

Following methods are available for starting-up PLC;

(a) Starting with local key:

Download the program in remote mode (REM), set the front key to 'RUN'

(b) Starting with XG5000:

Set the front key on the CPU module to 'REM,' select RUN on the XG5000's online menu.

(c) Starting by power ON:

When the power is turned ON with the front key set to RUN or if the system was in Remote RUN mode before power OFF, the system can be started by power ON.

(d) Restarting with reset key:

Restarting with reset key has two methods; Reset and Overall Reset

- 1) Reset: activated by pressing the reset button on the front of the CPU module less than 3 seconds. 'RST' will appear on the indicator panel of the CPU. This is the same as power ON/OFF.
- Overall Reset: activated by pressing the reset button on the CPU module for more than 3 seconds. 'RSTC' will appear on the indicator panel of the CPU. When the button is released, the system will be restarted in cold restart.

(3) Beginning the first operation

The procedures of system setting-up and starting-up for the first time operation of a redundant system are as follows.

- (a) Prepare the program bocks suitable for the purpose, in as independent forms as possible
- (b) In the redundancy parameters, set up the data synchronization area.
- (c) When the programming is completed, compile it and carry out debugging.
- (d) Using the XG5000 program tool, access CPU communication port and download the program
- (e) Switch CPU-A or B to RUN mode using the mode switch key or XG5000.
- (f) Switch the CPU which is not the master to RUN mode to set it to the standby CPU
- (g) Stop the CPU-A to check normal operation of the standby CPU-B.

(4) Participating in operation

When the standby CPU participates in the operation while the master CPU is in operation, the standby CPU is synchronized with the master CPU in following procedures.

- (a) CPU initialization
- (b) Checking the redundant components
- (c) Transfer non-variable data to the master
- (d) Transfer variable data from the master
- (e) Check synchronization with the master CPU
- (f) Participate in the operation at the same time as the master CPU

Note

- (1) For the redundant operation mode setting and parameter setting, see '6.7 Redundant System Operation Mode'
- (2) (a), (b), and (c) are processed separately with delay time less than approximately 50ms at every scan of the master.
- (3) (d), (e), and (f) must be processed within one scan of the master, with the delay time not exceeding 50ms. (If the volume of the variables used exceeds the standard variable value, the delay time may exceed 50ms. For further information, see '5.1.4 Scan Time')
- (5) Procedures of participating in standby operation

Detail procedures of participating in standby operation are as follows.

- (a) Power ON
- 1) Check that the master is in operation
- 2) Standby entering mode
- 3) CPU self diagnosis
- 4) Transfer program from the master (store in RAM and memory module)
- (b) Checking redundant system components
- 1) Check switching I/O access
- 2) Receive and check switching I/O module information from the master
- 3) Scan the redundant I/O module information installed in the standby-side
- 4) Compare with the I/O parameters
- (c)Transfer non-variable data from the master
- 1) Receive the flag from the master (executed by being divided into multiple scans as necessary)
- 2) After confirming that the flag status has not been changed, proceed to (4)
- (d) Receive the variable data from the maser
- 1) User data area and a part of system buffer
- (e) Check synchronicity with the master
- 1) All the operation data in the CPU is synchronized
- (f) Participate in the operation at the same time as the master
- 1) Conduct redundant operation from the input refreshing
- (6) Operation according to starting status
 - (a) Normal start-up

The master CPU module checks system configuration at power ON. In case of late power on of the expansion base, the base being check appears on the front indicator panel and wait for power on.

- In 'STOP' mode, wait for 10 seconds and switched to Stop mode.
- 1) The first operation after program modification begins in cold restart.
- 2) When the system had been shut-down normally, the restarting will be performed according to the set-up parameters, including mode key, XG5000, power OFF and reset.
- 3) To cold-restart a system set up in warm restart mode, use reset key or the Overall Reset function of the XG5000.
- 4) If the system was stopped due to an error in operation, the restarting method will be determined by the type and release method of the error (see 'Chapter 13. Program Troubleshooting').
- (b) When I/O skip has been set up
- 1) Since the I/O module set up with skip is excluded from the operation in the restarting, failure check, etc., are not conducted, and included in the operation normally when the skip is released during operation. For detail information, see '9.2 I/O Skip' and '9.3 Module Replacement during Operation.'

- (c) When failure mask has been set up
 - 1) Since the modules set up with failure mask are included in the operation in the restarting, failure check, etc., are conducted. However, even if module type disagreement error occurs in the initial phase of the restart, the operation is continued. For further information, see '9.1 Failure Mask.'
 - 2) When the entire bases are set up with mask, if the power of the respective base is off, the CPU waits for power on in waiting mode.

5.5 Memory

The CPU module contains two types of memory that can be used by a user. One is the program memory to save a user program created to construct a system and the other one is the data memory to provide a device area to save the data during operation.

5.5.1 Program memory

The storage capacity and data area type of the program memory are as follows.

Item(area)		Capacity	Remark
Whole memory area		25MB Whole memory capacity	
	Program Memory		Include Upload
	System Memory Data Memory		System data and parameter area
			Device memory, Flag, System area
	Flash Memory	16MB	For flash operation mode

5.5.2 Data memory

The storage capacity and data area type of the data memory are as follows.

	Item(area)	Capacity	
Whole	data memory area	2MB	
S	System area :		
•	I/O data table	770KB	
• Fo	orcible I/O table	TIONS	
• F	Reserved area		
	System flag	4KB	
	Analogue image flag	8KB	
Flag area	PID flag	16KB	
	High speed link flag	22KB	
	P2P flag	42KB	
Inpu	t image area(%l)	16KB	
Outpu	t image area(%Q)	16KB	
	R area(%R)	128KB	
Direct p	arameter area(%M)	256KB	
Symbolic	parameter area(max.)	512KB	
	Stack area	256KB	

5.5.3 Data retain area setting

If the data necessary for operation or the data that occur during operation are to be kept for use even when the PLC stops and resumes operation, the default(auto.) parameter retain is to be used. Alternatively, a part of the M area device may be used as the retain area by parameter setting.

The following table summarizes the features of retain settable device.

Device	Retain setting	Feature		
Auto variable	User-defined	Retain settable if adding a parameter to the auto parameter area		
M	User-defined	Retain settable into internal contact area by parameter		
K(PID)	X	Contact that is kept as contact status in case of interrupt		
F	X	System flag area		
U	Not retained	Analogue data register (retain not settable)		
1	Not retained	High speed link/P2P service status contact of communication		
(V1.1 or above)		module(retained)		
N	Χ	P2P service address area of communication module(retained)		
R	Χ	Exclusive flash memory area(retained)		
W	X	Exclusive flash memory area(retained)		

Note

- (1) K, L, N and R devices are basically retained.
- (2) K, L and N devices can be deleted in the memory deletion window of PLC deletion, an online menu of XG5000.
- (3) For details of directions, please refer to the 'Online' in the user's manual of XG5000.

(1) Data initialization by restart mode

There are 3 restart mode related parameters; default, initialization and retain parameter and the initialization methods of each parameter are as follows in the restart mode.

Mode Parameter	Cold	Warm	
Default	Initializing as '0'	Initializing as '0'	
Retain	Initializing as '0'	Maintaining the previous value	
Initialization	Initializing as a user-defined value	Initializing as a user-defined value	
Retain & initialization	Initializing as a user-defined value	Maintaining the previous value	

(2) Operation in the data retain area

Retain data can be deleted as follows.

- D.CLR switch of the CPU module
- RESET switch of the CPU module (3 seconds and longer: Overall Reset)
- RESET by XG5000 (Overall Reset)
- Deleting memory at STOP mode by XG5000
- Writing by a program (recommending the initialization program)
- Writing '0' FILL and etc at XG5000 monitor mode

D.CLR clear does not work at RUN mode. To do it, after make sure to change to STOP mode. In addition, the default area can be also initialized when clearing by D.CLR switch.

When instantaneously operating D.CLR, the only retain area is deleted. If maintaining D.CLR for 3 seconds, 6 LEDs blink and at the moment, if the switch returns, even R area data are also deleted.

For the maintenance or reset(clear) of the retain area data according to the PLC operation, refer to the following table.

Item	Retain	M area retain	R area		
Reset	Maintaining the previous Maintaining the previous value		Maintaining the previous value		
Over all reset	Initializing as '0'	Initializing as '0'	Maintaining the previous value		
DCLR	DCLR Initializing as '0'		Maintaining the previous value		
DCLR (3sec) Initializing as '0'		Initializing as '0'	Initializing as '0'		
STOP→RUN	Maintaining the previous value	Maintaining the previous value	Maintaining the previous value		

When STOP->RUN, in case it is set as Cold Restart, Retain Auto variable is initialized In case it is set as Warm Restart, Retain Auto variable is maintained.

Note

The terms and definitions for 3 types of variables are as follows.

- (1) Default variable: a variable not set to maintain the initial/previous value
- (2) Initialization(INIT) variable: a variable set to maintain the initial value
- (3) Retain variable: a variable set to maintain the previous value

(3) Data initialization

Every device memory is cleared up as '0' at the status of memory deletion. The data value may be assigned initially depending on a system and at the moment, the initialization task should be used.


6.1 Self-diagnosis Function


- (1) The self-diagnostic is the function that the CPU module diagnoses any trouble of the PLC system.
- (2) It detects any trouble when turning on the PLC system or any trouble is found during the operation, avoid the system from malfunctioning and taking preventive measures.

6.1.1 Scan watchdog timer


WDT(Watchdog Timer) is the function to detect any program runaway resulting from abnormal hardware/software of PLC CPU module.

(1) WDT is a timer used to detect an operation delay from abnormal user program. It can be set in the basic parameter of XG5000.

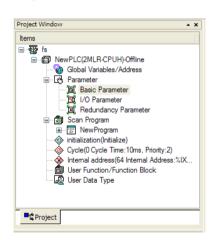

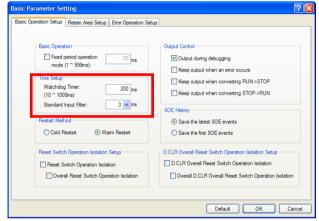

- (2) WDT monitors any scan overtime during operation and if it detects any overtime delay, it immediately suspends the PLC operation and turns off every output.
- (3) If it is expected that programming a specific part(using FOR ~ NEXT command, CALL command and etc) may have an overtime delay of scan watchdog timer while executing a user program, you can clear the timer by using 'WDT' command. The 'WDT' command restarts from 0 by initializing the overtime delay of scan watchdog time(for the details of WDT command, please refer to the chapter about commands in the manual).
- (4) To release a watchdog error, turn it on again, operate manual reset switch or change the mode to STOP mode.

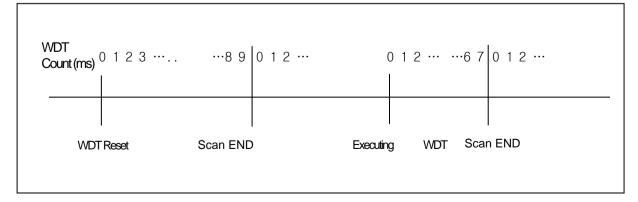

Caution

- (1) The setting range of the watchdog timer is 1 ~ 999ms(1ms step), and the initial value is 200ms.

 (2) If the cycle is set too short, scan watchdog time error may occur if the scan time is elongated by communication traffic overload, etc. It is recommended to set the cycle sufficiently longer that _SCAN_MAX

6.1.2 I/O Module Check Function

This function checks the I/O module when entering Run mode or during PLC operation

- (1) When entering Run mode, check if a module disagrees with the parameter setting or in failure (E030)
- (2) Check if the I/O module is isolated or failed during operation (E031)

If an abnormality is detected, the error indicator lamp (ERR LED) turns on, error number is indicated on the status indicator, and the CPU stops operation.

6.1.3 Battery level check

The function monitors battery level and detects, if any, low battery level, warning a user of it. At the moment, the warning lamp (BAT) on the front of the CPU module is On. For the details of measures, please refer to "4.3.3 Battery Life".

6.1.4 Saving error log

The CPU module logs, if any, errors so that a user can easily analyze the error and take corrective measures.

It saves each error code to the flag area.

Note

The results of self-diagnostic check are logged in the flag area.

For the details of self-diagnostic and troubleshooting against errors, please refer to 14.5 Error Codes List during CPU Operation of Chapter 13. Troubleshooting.

6.1.5 Troubleshooting

(1) Types of trouble

A trouble occurs mainly by the breakage of PLC, system configuration error and abnormal operation results. 'Trouble' can be categorized by 'heavy fault mode' at which the system stops for the purpose of the system safety and light fault mode' at which the system warns a user of a trouble and resumes operation.

The PLC system may have a trouble by the following causes.

- Trouble in the PLC hardware
- System configuration error
- · Operation error while a user program is operating
- Error detection resulting from a fault external device

(2) Operation mode when a trouble is found

If a trouble is detected, the PLC system logs the trouble message and stops or resumes operation depending on a trouble mode.

(a) Trouble in the PLC hardware

If heavy fault that the PLC may not properly work, such as CPU module, power module and others occurs, the system stops. However, the system resumes operation in case of light fault such as abnormal battery.

(b) System configuration error

It occurs when the hardware structure of PLC is not same as defined in the software. At the moment, the system stops. This occurs at module type disagreement error, module isolated error, or when the I/O mounted on the PLC differs from the I/O set up in the XG5000.

(c) Operation error while a user program is operating

In case of numerical operation error as a trouble occurring while a user program is operating, error flag(_ERR) and error latch flag(_LER) are displayed and the system resumes operation. If an operation time exceeds the overtime delay limit or the built-in I/O module is not controlled, the system stops.

Note

Error latch flag is maintained as long during a scan program if an error occurs in scan program. Every time a command is executed, error flag is cleared and set just after a command generating an error is executed.

(d) Error detection resulting from a fault external device

It detects a fault of external device; in case of heavy fault, the system stops while it just displays a fault of the device and keeps operating in case of light fault.

Note

- (1) If a fault occurs, the fault number is saved into the flag(_ANNUM_ER).
- (2) If light fault is detected, the fault number is saved into the flag(_ANNUM_WAR).
- (3) For further information about the flags, please refer to Appendix 1. Flags List.
- (5) Error detection in redundant operation

Nonconformity of redundancy parameter is detected by the redundancy parameter error flag (_DUPL_PRM_ER), and data communication error during redundant operation is detected by the redundancy synchronization error flag (_DUPL_SYNC_ERR). If an error occurs, the system stops. In addition, the status information on the current redundancy system configuration is provided with the redundancy Configuration warning error flag (REDUN WAR). If this error is detected, the system displays the status but continues operation.


6.2 Clock Function

The CPU module contains a clock element (RTC), which operates by the backup battery even in case of power-off or instantaneous interruption.

By using the clock data of RTC, the time control for the operation or trouble logs of the system is available. The present time of RTC is updated to the clock-related F device per scan.

(1) Read from XG5000/Setting

Click 'PLC RTC' in the online mode, 'PLC Information.'

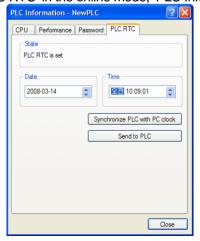

It displays the time from the PLC RTC. If it displays the present time incorrectly, a user can fix it up by transferring the right time after manually setting the time or performing "Synchronize PLC with PC clock" method to transmit the time of PC clock connected to the PLC.

(2) Clock reading by Flag

It can be monitored by flags as follows.

Flags	Examples	Size	F area	Description
_RTC_TIME[0]	16#08	BYTE	%FB12	Current time [year, last two digits]
_RTC_TIME[1]	16#02	BYTE	%FB13	Current time [Month]
_RTC_TIME[2]	16#23	BYTE	%FB14	Current time [Date]
_RTC_TIME[3]	16#14	BYTE	%FB15	Current time [Hour]
_RTC_TIME[4]	16#16	BYTE	%FB16	Current time [Minute]
_RTC_TIME[5]	16#17	BYTE	%FB17	Current time [Second]
_RTC_TIME[6]	16#06	BYTE	%FB18	Current time[day]
_RTC_TIME[7]	16#20	BYTE	%FB19	Current time [hundred year]

(3) Clock data modified by program

A user also can set the value of clock by using a program.

It is used when setting the time manually by external digital switches or creating a system to calibrate a clock periodically on network.

Input a value into the below flag area and use the '_RTC_TIME_USER' function block. The time data is updated in scan END.

Flags	Examples	Size	F area	Description
_RTC_TIME_USER[0]	16#08	BYTE	%FB3860	Current time [year, last two digits]
_RTC_TIME_USER [1]	16#02	BYTE	%FB3861	Current time [Month]
_RTC_TIME_USER [2]	16#23	BYTE	%FB3862	Current time [Date]
_RTC_TIME_USER [3]	16#14	BYTE	%FB3863	Current time [Hour]
_RTC_TIME_USER [4]	16#16	BYTE	%FB3864	Current time [Minute]
_RTC_TIME_USER [5]	16#17	BYTE	%FB3865	Current time [Second]
_RTC_TIME_USER [6]	16#06	BYTE	%FB3866	Current time[day]
_RTC_TIME_USER [7]	16#20	BYTE	%FB3867	Current time [hundred year]

Alternatively, instead of using function blocks, it is also possible to enter clock data into the above area and turn on '_RTC_WR' in order to input the time.

- (a) No input is allowed unless time data is entered in a right format (However, even if the day of the week data is not correct, it is set without error detected)
- (b) After writing the clock data, check whether it is rightly set by monitoring Reading Clock device.

(4) How to express the day of the week

Number	0	1	2	3	4	5	6
Day	Sunday	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday

(5) Time error

The error of RTC varies depending on the operating temperature. The following table shows the time error for a day.

Operating temp.	Max. error (sec/date)	Ordinary (sec/date)
0 °C	- 4.67 ~ 1.38	-1.46
25 °C	- 1.64 ~ 2.42	0.43
55 °C	- 5.79 ~ 0.78	-2.29



Caution

- (1) Initially, RTC may not have any clock data.
- (2) When using the CPU module, first make sure to set the accurate clock data.
- (3) If any data out of the clock data range is written into RTC, it does not work properly. i.e.) 14M 32D 25H
- (4) RTC may stop or have an error due to abnormal battery and other causes. The error is released if a new clock data is written.
- (5) For further information of how to modify the clock data, please refer to the description of XGI commands
- (6) In the sybchronization of the master and backu CPUs, time difference may occur between the master and backup.

6.3 Remote Function

The operation mode of the CPU can be changed by communication, in addition to the key switch on the module. For remote operation, set the key switch of the CPU module to REM (remote) position>

(1) Types of remote operation

- (a) Operation by connecting to XG5000 via USB or RS-232C port installed on the CPU module
- (b) Operate by connecting XG5000 via the USB port on the expansion drive module
- (c) Other PLC networked on the PLC can be controlled with the CPU module connected to XG5000.
- (d) The PLC operation is controlled by HMI software and other applications through the dedicated communication.

(2) Remote RUN/STOP

- (a) Remote RUN/STOP is the function to execute RUN/STOP remotely with the dip switch of the CPU module set to REMOTE and the RUN/STOP switch set to STOP.
- (b) It is a very convenient function when the CPU module is located in a place hard to control or in case the CPU module is to run/stop from the outside.

(3) DEBUG

- (a) DEBUG is the function to control DEBUG with the dip switch of the CPU module set to REMOTE and RUN/STOP switch set to STOP.
- (b) It is a very convenient function when checking program execution status or data in the debugging operation of the system.

(4) Remote Reset

- (a) Remote reset is the function to reset the CPU module remotely in case an error occurs in a place not to directly control the CPU module.
- (b) Like the switch control, it supports 'Reset' and 'Overall Reset.'

Note


For the further information about remote functions, please refer to the 'Online' part in the user's manual of XG5000.

(5) Flash memory operation mode

(a) What is the flash operation mode? It means that the system operates by the backup program in flash in case the program in ram is damaged. If selecting "Flash Memory Operation Mode", it starts operation after program in flash moves to the program memory of the CPU module when the operation mode is changed from other mode to RUN mode or when restarting. (b) Flash Memory Operation Mode Setting

Check the operation mode setting by using 'Online → Set Flash Memory ... → 'Enable flash memory run mode' and click 'OK.'

Once pressing it, it shows a dialogue box stating "Saving flash memory program ..." and copies the program from user program area to flash.

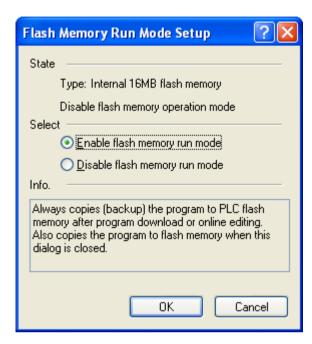



Caution

- (1) The default is 'Flash Memory Operation Mode deselected'.
- (2) Flash memory operation mode is maintained as 'On' as long as it is not 'Off' by XG5000.
- (3) Flash memory operation mode can be changed, irrespective of RUN/STOP mode.
- (4) Flash memory operation mode can be set by the online menu of XG5000 when executing flash 'operation mode setting' after program debugging is complete with the flash memory operation mode off.
- (5) If modifying during RUN with 'flash memory operation mode' set, the changed program may be applied only when it restarts as long as the program is successfully written in flash memory. Note that if the PLC restarts before a program is saved into flash memory, a program that is saved in advance, instead of the changed program, works.
- (6) If flash memory operation mode is changed from 'disabled' to 'enable', flash memory operation mode is applied as long as the flash memory writing is complete. In case the PLC restarts before completing program writing, "Flash memory operation mode" is released.

(c) Flash memory operation method

If restarting the PLC system or changing its operation mode to RUN, it works as follows depending on the flash operation mode setting.


Flash memory operation mode setting	Description	
On	If program memory data are damaged because flash memory and program memory are different or battery voltage is low, it downloads the program saved in flash memory to program memory.	
Off	CPU understands that flash memory does not have any program and operates by the program saved in RAM.	

6.4 Forced On/Off Function of I/O

The forcible I/O function is used to forcibly turn on or off I/O area, irrespective of program execution results.

6.4.1 Force I/O Setting

(1) Click [Online]-[Force I/O] on XG5000.

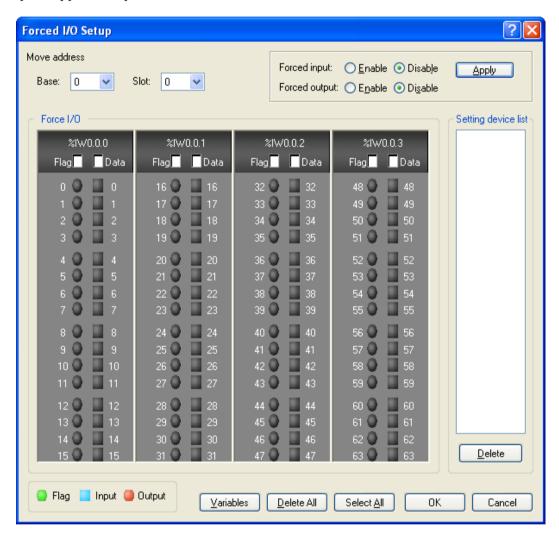

- (a) To set forcible I/O, select the flag of a contact to set and the data checkbox
- (b) To set "1", select the flag and data of a bit and then, select a flag.
- (c) To set "0", select a flag only, not the data corresponding to the bit.
- (d) If selecting 'forcible input or output enabled', the setting is applied and it works accordingly.

For further directions, please refer to the user's manual of XG5000.



- (1) Forcible I/O setting is available only in local I/O module.
- (2) It can not be set in remote I/O module(smart I/O module).
- (3) If forcible I/O is set, "CHK LED" is On.
- (4) The forcible I/O set by a user is maintained even though a new program is downloaded.

6.4.2 The point of time of method of forced On/Off process

(1) Forcible input

'Input' replaces the data of a contact set by Forcible On/Off from the data read from input module at the time of input refresh with the forcibly set data and updates input image area. Therefore, a user program can execute operation with actual input data and forcibly set data.

(2) Forcible output

'Output' replaces the data of a contact set by Forcible On/Off from the output image area data containing operation result at the time of output refresh with the forcibly set data and outputs to an output module after completing user program operation. Unlike input, the data in output image area is not changed by forcible On/Off setting.



Caution

Cautions for using forcible I/O

- (1) It works from the time when input/output are set to 'enable/disable' respectively after setting forcible data.
- (2) Forcible input can be set even though actual I/O module is not installed.
- (3) The previously set On/Off setting data are kept in the CPU module, despite of power off \rightarrow on, operation mode change, program download or manipulation by reset key. However, it is deleted if overall reset is executed.
- (4) Forcible I/O data are not deleted even in STOP mode.
- (5) To set new data from the first, release every setting of I/O by using 'overall reset'.

6.5 Operation history saving function

There are four types of operation logs; Error log, Mode change log, shut down log and System log. It saves the time, frequency and operation of each event into memory and a user can conveniently monitor them through XG5000. Operation log is saved within the PLC unless it is deleted by XG5000.

6.5.1 Error history

It saves error log that occurs during operation.

- (1) Saving error code, date, time and error details.
- (2) Saving logs up to 2,048
- (3) Automatically released if memory backup is failed due to low battery level and etc

6.5.2 Mode change history

It saves the change mode information and time if an operation mode is changed.

- (1) Saving the date, time and mode change information.
- (2) Saving up to 1,024.

6.5.3 Shut down history

Saving power On/Off data with it's time data.

- (1) Saving On/Off data, date and time.
- (2) Saving up to 1.024.
- (3) History of master and standby power is indicated respectively.

6.5.4 System history

It saves the operation log of system that occurs during operation.

- (1) Saving the date, time and operation changes
- (2) XG5000 operation data, key switch change information
- (3) Instantaneous interruption data and network operation
- (4) Saving up to 2,048



Note

- (1) The saved data are not deleted before it is deleted by selecting a menu in XG5000.
- (2) If executing Read All in case logs are more than 100, the previous logs are displayed.

6.6 External device failure diagnosis function

It is the flag that a user detects a fault of external device so that the suspension/warning of a system could be easily realized. If using the flag, it can display a fault of external device, instead of creating a complex program and monitor a fault position without XG5000 and source program.


- (1) Detection/classification of external device fault
 - (a) The fault of external device is detected by a user program and it can be divided into heavy fault(error) that requires stopping the PLC operation and light fault(warning) that only displays fault status while it keeps operating.
 - (b) Heavy fault uses '_ANC_ERR' flag and light fault uses '_ANC_WB' flag.
- (2) If a heavy fault of external device is detected
 - (a) If a heavy fault of external device is detected in a user program, it writes the value according to error type defined in a system flag, '_ANC_ERR' by a user. Then, with _CHK_ANC_ERR flag On, it checks at the completion of a scan program. At the moment, if a fault is displayed, it is displayed in '_ANNUN_ER' of '_CNF_ER', which is the representative error flag. Then, the PLC turns off every output module(depending on the output control setting of basic parameter) and it has the same error status with PLC fault detection. At the moment, P.S LED and CHK LED are On, besides ERR LED.
 - (b) In case of a fault, a user can check the cause by using XG5000 and alternatively, check it by monitoring '_ANC_ERR' flag.
 - (c) To turn off ERR LED, P.S LED and CHK LED, which are On by heavy fault error flag of external device, it is necessary to reset the PLC or turn it off and on again.

■ Example



- (3) If a light fault of external device is detected
 - (a) If a light fault of external device is detected in a user program, it writes the value according to warning type defined in '_ANC_WAR' by a user. Then, with _CHK_ANC_WAR On, it checks at the completion of a scan program. At the moment, if a warning is displayed, '_ANNUN_WAR' of '_CNF_WAR', which is the representative error flag of system is On. At the moment, P.S LED and CHK LED are On.
 - (b) If a warning occurs, a user can check the causes by using XG5000. Alternatively, a user can check the causes by directly monitoring '_ANC_WAR' flag.
 - (c) With _CHK_ANC_WAR OFF, P.S LED and CHK LED are off and the display, '_ANNUN_WAR' of '_CNF_WAR' is reset.


■ Example

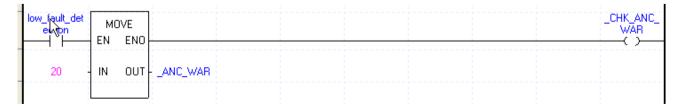

6.7 Redundancy system operation setting

For redundant system operation, redundancy parameters have to be set up.

Redundanct parameter configuration is classified into the operation mode setting and data synchronization area setting. The default setting has no data synchronization area. Be careful that, if the data synchronization area is not set up, the data of the master CPU is not synchronized to the standby CPU.

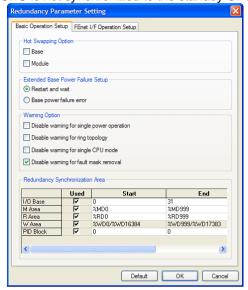


Different from other parameters, the dredundancy parameters can be written during running.

However, the redundancy parameters cannot be automatically dpwnloaded during running writing. From the XG5000 online writing, select the redundancy parameters only and download them.

6.7.1 Operation mode setting

(1) Single CPU operation mode

If the system is operation with master CPU only, without standby, redundancy system configuration warning occurs. To configure XGR system with a single CPU, select the 'Disable the warning message for Single CPU Mode' check box to prevent the warning display.

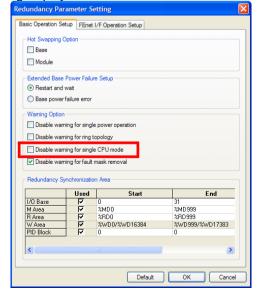


Caution

It is recommended to configure the XGR system in redundant CPU system. If the redundant system is configured with single CPU, the system stops if the CPU module fails. To prevent system interruption, set up the system in redundant CPU configuration

(2) Error handling in power cut-off of expansion base

In a redundant XGR system configured wuth multiple extensin bases for enhanced system reliability and diversity, in case of detach (powr off) of expansion base(s), the user can select whether to consider it as error or CPU restarts the system and watis until exension base in problem paricipate in operation again.

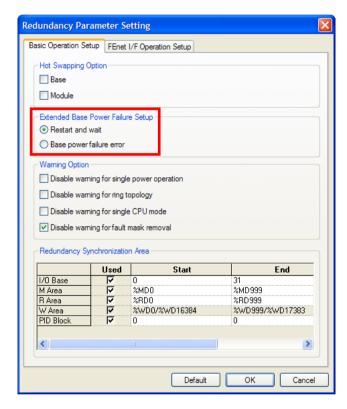

a) If the check box "Restart and wait" is selected;


As the default setting, in case of a problem in an expansion base, the system is restarted and the CPU module waits until the base in failure is normalized. The base in failure is indicated with "Ebxx" in the CPU indicator panel.

When the failed base is restarted normally and returns to the system, the CPU module restarts in the same manner as the initial start-up and carry out normal operation.

b) If the check box "Extended Base Detach Error" is selected;

In case of failure of an expansion base, other modules operate in accordance with the error process setting in the basic parameter settings.

If the basic parameter was set to maintain output under error occurrence, other modules maintain the last output.

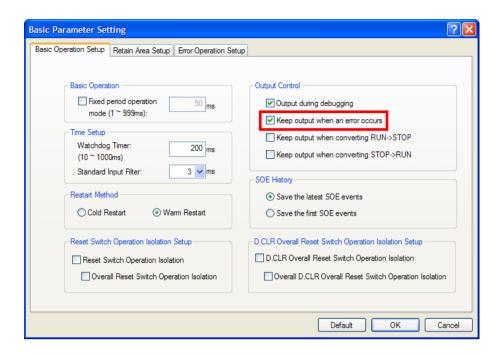

6.7.2 Data synchronization area setting

(1) M area setting

Setting can be made by 1 kbyte step within 1 ~ 256 kByte range.

Initial value: %MW0~%MW2000 Change in Start End method

(2) I/Q: setting by base unit

Setting can be made in base unit.

Initial value is 31 bases (error message if the setting value is less than the number of installed bases)

(3) PID: setting by block (max. 8 blocks)

For the synchronization area of the PID area, 32 PID areas are allocated for each block

- Initial value: 0 block

(4) R(W): set R only, and automatic setting for W

Synchronization area for R(W) area


- Initial value: %RW0~%RW2000(%WW0~%WW2000, %WW32768~%WW34768)



- (1) The M area retain can be set up in the "Basic Parameter Setting." For details, see "5.5.3 Data Retain Area Setting."
- (2) When the master/standby CPUs are performing redundant operation, followings are automatically synchronized.
 - (a) L (high speed link flag), N(P2P parameter setting) device area
 - (b) F (system flag area) device area (however, individual flag areas are not synchronized).
 - (c) U (special module refresh area) device area (however, only installed modules are synchronized).
- (3) If a variable value has been changed during monitoring by XG5000, it applies to the respective areas of the master and standby CPUs, regardless of the data synchronization area setting.

6.8 Setting operation of communication

Here you can set operation when FEnet module's cable is disconnected. According to setting, master CPU and Standby CPU are switchted automatically when FEnet module is disconnected.

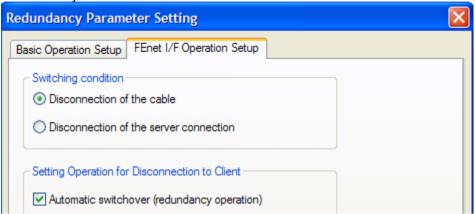

6.8.1 Automatic master switchover

(1) Automatic master switchover setting

When the cable of FEnet set as server or server connection is disconnected, you have to check the Automatic switchover for automatic master switchover. This setting is applied in case of redundancy operation

(2) Detail option

Here sets the condition for automatic master switchover through detail option. This means setting the group for each FEnet module installed at main base. Each module can be set as same group or not. When automatic master switchove setting and detail option setting is done, if the following two conditions are met, master switchove occurs.

- (a) All master base FEnet module belonging to one group are disconnected and
- (b) At least one standby base FEnet module belonging to the above group is under normal connection status

For example, In case you set slot 1 and slot 2 as group 1, slot 3 and slo4 as group 2 and slot 5 as group3, master switchover occurs under the following three conditions. (We assumes that FEnet modules on standby base are normal connection status)

- (a) Slot 1 and slot 2 are disconnected or
- (b) Slot3 and slot4 are disconnected or
- (c) Slot 5 is disconnected


(3) Adding switchover condition items

- -Cable disconnection: When the cable (media) is disconnected at the FEnet module, switchover is done within 1s by updating the flag instantly.
- Server disconnection: through the cable (media) is disconnected at the FEnet module, switchover is not done during connection wait time.

(But, when connection wait time is set as more than 5s, switchover is done within max. 6s)

6.8.2 Global status variable

After installing FEnet module, you can check the server connection status of FEnet module and physical cable connection status through Global variable at XG5000. In order to monitor global variable, register relevant variable at Variable Monitoring Window after executing [Edit]-[Register Special/Communication Module Variable] in XG5000. And these variables can be used at user program

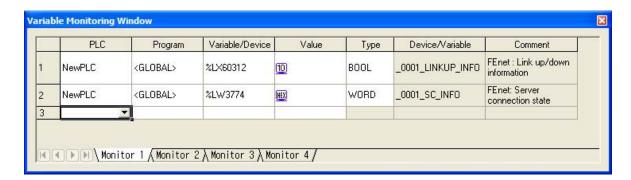

(1) Sever connection status variable

Sever connection status variable indicates connection status of each client connected to server. Each bit indicates each client status in order of connection to server and if bit is on, it is normal connection status. Each bit indicates status of each client in the order as connected and if it's ON, its normal connection.

(2) Link up/down information variable


Link up/down information variable indicates physical cable connection status of relevant FEnet module. If variable is on, it means normal connection and if variable is off, it means disconnection or detachment

6.8.3 ONE IP Solution

You can connect to the master base FEnet module of XGR redundancy system with one IP regardless of master switchover through One IP Solution. For this, in case of master switchover, master base FEnet module and standby FEnet module change each other's IP address

(1) IP setting

You set IP of FEnet module at standard setting window after registering FEnet module at XG-PD. If you check ONE IP Solution of standard setting window, ONE IP Solution function will be activated. Unlike when ONE IP Solution is not used, you can set only one IP address (For how to set IP address when ONE IP Solution is not activated, refer to FEnet user manual). When using ONE IP Solution, IP address should be even number. That IP address becomes IP address of master base FEnet module and master base FEnet module's IP address + 1 becomes IP address of standby base FEnet module

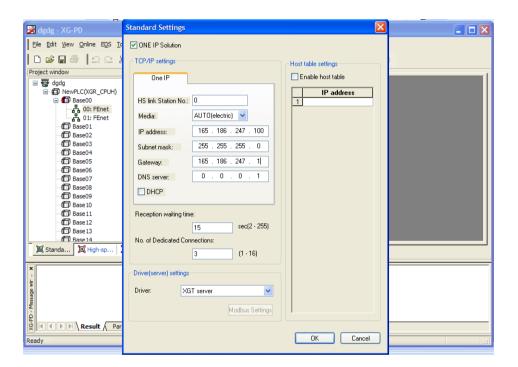

(2) IP change

If you use ONE IP Solution, in case of master switchover caused by error, communication disconnection, master base and standby FEnet modules change each other's IP address. For this, after master switchover, individual module reset is conducted.

(1) Individual module reset should be complete after master switchover so let no master switchover occurs again within 3 second (time for completing individual module reset) after master switchover.

6.9 Fault Mask Function

6.9.1 Applications and operations

- (1) Fault mask helps a program keep operating even though a module is in trouble during operation. A module designated as fault mask normally works until a fault occurs.
- (2) If an error occurs on a module on which fault mask is set, the module stops working but the entire system keeps working.
- (3) If a fault occurs in a module during operation, the CPU module sets the error flag and "PS LED" on the front is "On." The error is displayed when accessing to XG5000.

6.9.2 Fault mask setting

- (1) Fault mask can be set by the online menu of XG5000. For the details, please refer to the user's manual of XG5000.
- (2) Fault mask setting by a program is not available. You can monitor the fault mask flag with program. (Refer to appendix1. flag list)

6.9.3 Releasing fault mask

Fault mask is released only by the following methods.

- (1) Releasing the setting in the online menu of XG5000
- (2) Releasing by overall reset
- (3) Automatically releasing in case memory backup is failed due to low battery level and other causes

Note that the fault mask is not released even in the following cases.

- (1) Power Off→On
- (2) Operation mode change
- (3) Program download
- (4) Reset key(released only when it is pressed for 3 seconds and longer)
- (5) Data clear

- (1) If releasing fault mask with error flag in the CPU module not cleared although the causes of an error are eliminated, the system stops. Please check the state of error flag before releasing fault mask flag.
- (2) To remove an error flag, release it after setting I/O skip in the respective module. For details, see [XG5000 online help desk >>I/O Skip.
- (3) In case of XGR-CPU V1.8 or above, if you don't set fault mask, warning message appears when connecting CPU via XG5000. In case of XGR-CPU V1.8 or above, "Warning for fault mask removal" option is added at Redundancy parameter.

6.10 I/O Module Skip Function

6.10.1 Applications and operations

During operation, the I/O module skip function excludes a designated module from the operation. For the designated module, the data update and fault diagnostics of I/O data stops as soon as being designated. It is available when temporarily operating it with the fault excluded.

6.10.2 Setting and processing I/O data

- (1) It can be set at the unit of I/O module. (For further information about setting, please refer to the user's manual of XG5000)
- (2) Input(I) image area suspends input refresh, so it maintains the value set before skip setting. However, even in the case, the image manipulation by forcible On/Off is still effective.
- (3) The actual output of output module is Off when setting the skip function but it changes depending on a user program's operation, irrespective of skip setting. After the skip setting, the output value of output module can not be controlled by forcible On/Off.
- (4) The skip function is identically executed even when using I/O function.

6.10.3 Releasing skip function

The I/O module skip function is released only by the method of setting.

- (1) Releasing by the online menu of XG5000
- (2) Releasing by overall reset
- (3) Automatically releasing in case memory backup is failed due to low battery level and other causes

Note that the fault mask is not released even in the following cases.

- (1) Power Off→On
- (2) Operation mode change
- (3) Program download
- (4) Reset key(released only when it is pressed for 3 seconds and longer)
- (5) Data clear



If any fault is found in a module when releasing the skip function, the system may stop. Before releasing the skip function, make sure to release the skip with fault mask set and check the operation of a module.

6.11 Base Skip Function

6.11.1 Purpose and outline of the operation

Base skip is the function to exclude the designated base from operation during an operation. The excluded base stops all functions from the skip. This function is useful to continue operation by excluding a failed base or replace the base.

6.11.2 Setting method

• This setting can be done for each base.

6.11.3 Releasing skip function

Base skip can be released by following methods only.

- Selecting XG5000's [Online >> I/O Skip Setting] menu
- Release by Overall Reset
- Automatic release at backup memory lost by battery voltage drop, etc.

Note that followings do not release the failure mask;

- power Off \rightarrow On.
- operation mode change,
- program download,
- reset key operation (however, released if pressed for 3 seconds or longer), and
- data clear




- (1) When expansion driver is detached, all modules in base are automatically initialized.
- (2) When expansion driver is detached, digital output module operates as set in Output control settings of Basic parameter.
- (3) When expansion driver is detached, analog output module operates as set in Output type setting
- (4) For more detail, refer to each module's user manual.

6.12 Module Replacement Function during Operation

A module can be replaced during operation in the redundant system. There are two methods. First, use "Hot swapping option" function of [table 5.1.4] redundancy parameter described in Chapter 5. Check the "How swapping option" and download only "Redundancy parameter" to PLC during RUN mode. Then replace base and module. Second, use "Online -> Module changing wizard or Base changing wizard"

Warning

- (1) The special modules which can be normally replaced are A/D, D/A, TC, and RTD. HSC and APM modules can be replaced but the previous data cannot be maintained.
- (2) Some communication modules (XGL-PMEA, XGL-DMEA) can be connected as long as network is set(using Sycon software).
- When replacing a module, align the bottom of the base and the holding part of a module before inserting it. A wrong insertion may cause 'system down.'

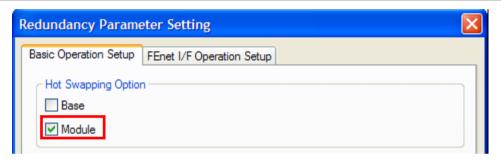

6.12.1 Module replacement in redundant system

CPU module, power module, I/O module, a certain special modules, and the base module can be replaced during redundant operation. For safety purpose, this Manual provides the methods using the Module Replacement Wizard, Base Replacement Wizard. And "Hot swapping option" in redundancy parameter is also available to replace the module.


6.12.2 Replacing I/O module in redundant system

To replace a module in the base in redundant operation, change the main base to backup operation status and cut-off the power. If the Module Replacement Wizard is used, the I/O and internal data of the module is lost. (If you use "Hot swapping option", you can change in RUN mode)

To replace a module, users can use XG5000's [Online >> Module Replacement Wizard] function. For details, see XG5000 User Manual [Online >> Module Replacement Wizard].

Caution

Replacement of the main base (base 0) using the XG5000's [Online >> Module Replacement Wizard] function is available only during single CPU operation.

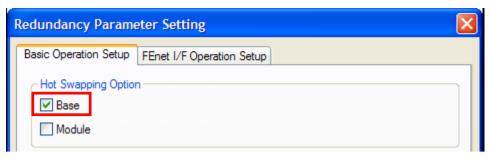

6.12.3 Replacing base module in redundant system

Bases can be replaced in redundant operation. For a line-configured system, the last base only can be replaced. For a ring-configured system, all the bases of the 1-31 bases which are participating in the operation can be replaced.

For safety purpose, this Manual provides XG5000's [Online >> Base Replacement Wizard] function. For further details, see XG5000 User Manual [Online >> Base Module Replacement Wizard]. (If you use "Hot swapping option", you can change in RUN mode)


- (1) In this process, only one base can be replaced at a time for safety reason.
- (2) The main base cannot be replaced during operation.
- (3) Ring configuration: available to change all extension bases
- (4) Line configuration: available to change last extension base because of line configuration

Chapter 7 Expansion Drive Module

7.1 Performance specifications

		Specification			
	Items	100BASE-FX (multi)	100BASE-FX (single)	100BASE-TX	
	Transmission Method	Base band			
	Max. Expansion distance between nodes	2km		100m	
Transmission Specification	Max. Number of nodes	31			
ansmi	Max. Protocol size	1,516 byte			
- ⁻	Communication access method	CSMA/CD			
	Frame error check method	CRC $32 = X^{32} + X^{26} + X^{23} +, + X^2 + X + 1$			
	Cable	Multi Mode Fiber	Single Mode Fiber	FTP/STP/SFTP	
lion	Transmission speed	100Mbps			
Communication Media	Flow control	Full Duplex			
Comr	Communication port	2 port			
	Auto Crossover	Cross / Direct Cable is supported (Recommend : Cross cable)			
Network	Topology	Ring, Line			
Conversion	Ring → Line(Bus)	10ms			
Conw	Line(Bus) → Ring	500ms			
uo	Dimensions(mm)	98(H) X 27(W) X 90(D)			
Basic Specification	Current consumption (mA)	DBSF(S): 850 mA / DBSH(S): 660 mA / DBST: 490 mA DBDF: 770 mA / DBDH: 674 mA / DBDT: 359 mA			
Š	Weight (g)	DBSF(S): 102 g / DBSH(S): 101 g / DBST: 99 g DBDF: 100 g / DBDH: 98 g / DBDT: 98 g			

7.2 Identification and Function

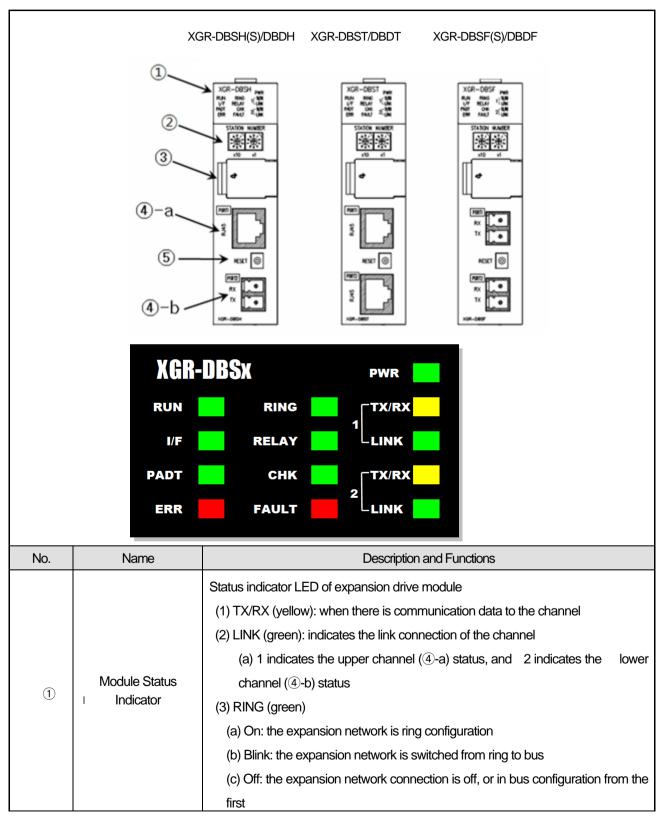

	(4) RELAY (green)	
	(a) On: the module neighboring the two channels are connected and conducts	
	as a data relay	
	(b) Off: the module neighboring the two channels are connected and does not	
	conduct as a data relay	
	(5) CHK (green)	
	(a) On: indicates CPU's WAR LED	
	(b) Blink: station No. in the expansion network conflict (other station numbers)	
	(6) FAULT (red)	
	(a) On: network station No. conflict (self station No.)	
	(b) Blink: frame error occurred	
	(7) RUN (green)	
	(a) On: CPU operation mode is RUN	
	(b) Blink: expansion drive is in wait state for CPU recognition	
	(c) Off: CPU operation mode is STOP	
	(8) I/F (green)	
	(a) Blink: in normal I/F with expansion manager	
	(b) Off: I/F with expansion manager unavailable	
	(9) PADT On (green): on in PADT connection (10) ERR On (red): CPU operation mode is ERR	
Base Setting Switch	Switch for setting expansion base No.	
	(1) x10 for 10 digit setting, x1 for 1 digit setting	
	(2) Max. 31 bases can be set up	
	(3) Error LED on at station No. conflict or setting more than 31 station numbers	
USB Connector	Connector for peripheral devices (XG5000 etc.) (USB 1.1 supported)	
Expansion Network Connector	Connector for expansion base connection.	
	(1) 2 connectors are provided for ring connection without additional switching device	
	(2) Optical-optical, electrical-electrical, and optical-electrical models are provided	
	to enable network construction using mixed electrical/optical	
Expansion Drive Module Reset Switch	Pressing this switch will trigger module reset operation.	
	(1) Used to reset module only.	
	(2) Make sure to skip the module before conducting module reset	
	(3) Take care that resetting without skip setting of the respective base will cause module isolation error.	
	USB Connector Expansion Network Connector Expansion Drive	

Chapter 8 Power Module

This chapter describes the selection, type and specifications of power module.

8.1 Type and Specification

We provide diverse types according to input voltage and output capacity. Select right module according to environment and system.


	Item	XGR-AC12	XGR-AC22	XGR-AC13	XGR-AC23	XGR-DC42
	Rated input voltage	110 VAC	220 VAC	I10 VAC	220 VAC	24 VDC
	Input voltage range	85V~132VAC	176V~264VAC	85V~132VAC	176V~264VAC	19.2 ~ 28.8 VDC
	Input frequency	50/60 Hz (47 ~ 63 Hz)			-	
	Max. input power	110 VA / 42 W		176 VA/72 W		-
Input	Inrush current	20A peak and lower (within8 ms)			80A peak and lower	
	Efficiency	65% or higher				1
	Input fuse	Built in(not replaceable by a user) - AC power: 250V/3.15A (Time-lag Type) UL approved - DC power: 125V/10A (Time-lag type) UL approved				
	Allowed instantaneous interruption	Within 20 ™s				
	Output voltage	5VDC (±2%)				
0	Output current	5.5A		8.5A		7.5A
Output	Output power	27.5W @ 55°C		46.75W @ 55°C		37.5W @ 55°C
	Over current protection	6.0 A ~ 13.0 A 9.3 A ~ 17.0 A			9.0 A~17.0 A	
	Purpose	RUN contact (refer to 8.2)				
Delevi	Rated switching voltage/current	24VDC, 0.5A				
Relay Output	Min. switching load	5VDC, 1 mA				
	Response time	Off—On/ On—Off: 10 ^{ms} and lower/12 ^{ms} and lower				
	Life	Mechanical life: 20 million and more times, electrical life: rated switching current: 100 thousand and more times				
Voltage status display		LED On when output voltage is normal				
Specification of cable		0.75 ~ 2 mm ²				
Available damped terminal		RAV1.25-3.5, RAV2-3.5				
Dimension (WxHxDmm)		55 x 95 x 90 55 x 95 x 110				
Weight		326g	382g	334g	384g	417g
Applied base and install position		Power part of basic/expar	nsion base	Power part of expansion base Power part of basic/expansion		Power part of basic/expansion base

Note

- (1) Allowable instantaneous interruption time
 - (a) The time that the normal output voltage is maintained(normal operation) when AC110/220V/DC24V input voltage is less than rating value (AC 85/176V/DC 19.2V)
- (2) Over current protection
 - (a) If a current over the rated level is allowed on 5VDC circuit, an over current protective system cuts off the circuit, suspending the system.
 - (b) If there is any overcurrent, the system should be restarted after eliminating the causes such as low current capacity, short-circuit and etc.

8.2 Parts' Names

It describes the names and applications of parts of the power module.

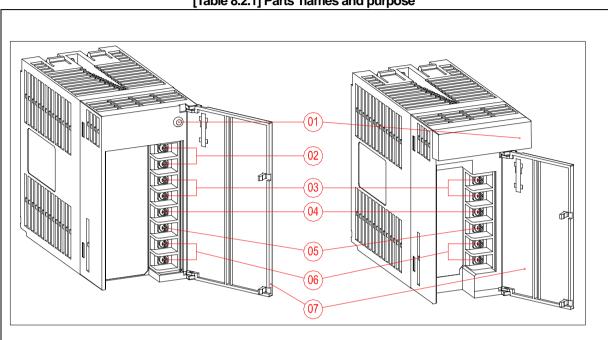

[Table 8.2.1] Parts' names and purpose

No.	Name	Purpose
1	Power LED	5VDC Power display LED
2	NC	Not used
3	RUN Terminal	Displaying RUN state of a system (1) On when CPU is normal RUN mode. (2) Off when the stop error of CPU occurs. (3) It is Off when the mode of CPU turns to STOP.
4	FG Terminal	Functional Grounding terminal for reliability of system operation.
5	LG Terminal	Grounding terminal of power filter
6	Power input Terminal	Power input terminal (1) XGR-AC12, XGP-AC13: 110VAC connection (2) XGR-AC22, XGP-AC23: 220VAC connection (3) XGR-DC42 : DC 24V connection
7	Terminal cover	Terminal unit protection cover

8.3 Selection

The selection of power module is determined by the current that input power voltage and power module should supply to the system, that is, the sum of current consumption of digital I/O module, special module and communication module that are installed on a same base with the power module.

If it exceeds the rated output capacity of power module, the system does not properly work.

Select a power module by considering the power current of each module when structuring a system.

[Table 8.3.1] Current consumption by modules


	_	Consumption			Consumption
ltem	Name	current (Unit: mA)	ltem	Name	current (Unit: mA)
	VCD CDI ILI/T	000		XGF-AV8A	420
CPU module	AGR-CPUH/I	960		XGF-AC8A	420
	XGR-CPUH/F	1,310	Analog input module	XGF-AD4S	610
E a service all a	XGR-DBST	550		XGF-AD8A	420
•	XGR-DBSF	550	Surpersonal	330	
module	XGR-DBSH	550	S50	190 (250)	
	XGI-D21A	20		XGF-DC4A	190 (400)
	XGI-D22A	30	Analog output	XGF-DC4S	200 (220)
DO40/04)/: 1	XGI-D22B	30	module	XGF-DV8A	147 (180)
DC12/24V input module AC110V input module AC220V input module Relay output module Transistor output module	XGI-D24A	50		XGF-DC8A	243 (300)
	XGI-D24B	50		XGF-DV4S	200 (150)
	Name Current (Unit: m/A)	60	High speed counter	XGF-HO2A	270
	XGI-D28B	60	module	XGF-HD2A	330
AC110V input module	XGI-A12A	30		XGF-PO3A	400
AC220V input module	XGI-A21A	20		XGF-PO2A	360
·	XGQ-RY1A	250		XGF-PO1A	340
	XGQ-RY2A	500		XGF-PD3A	860
	XGQ-RY2B	500		XGF-PD2A	790
	XGQ-RY2B 500 XGQ-TR2A 70		XGF-PD1A	510	
Transistor output	XGQ-TR2B	70	Docitioning models	XGF-PO4H	430
	XGQ-TR4A	130	Positioning module	XGF-PO3H	420
module	XGQ-TR4B	130		XGF-PO2H	410
	XGQ-TR8A	230		XGF-PO1H	400
	XGQ-TR8B	XGI-D28B 60 module XGI-A12A 30 module XGI-A12A 20 module XGI-A21A 20 module XGI-A21A 20 module XGQ-RY1A 250 module XGQ-RY1A 250 module XGQ-RY2A 500 module XGQ-RY2A 500 module XGQ-RY2A 500 module XGQ-RY2A 500 module XGQ-RY2B 500 module XGQ-RY2B 500 module XGQ-RY2B 500 module XGQ-TR2B 70 module XGQ-TR2B 70 module XGQ-TR4B 130 module XGQ-TR4B 130 module XGQ-TR8A 230 module		XGF-PD4H	890
Trice output module	VCO 9934	200	Positioning module XGF-P01A XGF-P03A XGF-P02A XGF-P01A XGF-P04H XGF-P03H XGF-P02H XGF-P01H XGF-P03H XGF-P03H	850	
mac output module	AGQ-SSZA	300		XGF-PD2H	600
I/O modulo	VCH DT4A	110		XGF-PD1H	520
I/O module	XGH-D14A	110	DTD 'con the control to	XGF-RD4A	450
	XGL-EFMF	640	RTD input module	XGF-RD4S	783
FEnet I/F module (Optical/Electricity)	XGL-EFMT	410		XGF-TC4S	610
	XGL-ESHF	1,200	Event input module	XGF-SOEA	700
PAPIEnet I/E Module				XGF-M16M	640
I AI ILIGUII MOGUIE	XGL-EIMT	335	Analog I/O module	XGE-AH6A	770
	XGL-EIMH	400	A lalog / O Hibbale	701 -71 IUA	110

ltem	Name	Consumption current (Unit: mA)	ltem	Name	Consumption current (Unit: mA)
Ethernet/IP I/F module	XGL-EIPT	400	Dnet I/F module	XGL-DMEA	440
	XGL-C22A	330	FDEnet I/F module	XGL-EDMF	410
Cnet I/F module	XGL-C42A	300	FDENELI/F Module	XGL-EDMT	410
	XGL-CH2A	340	Pnet I/F module	XGL-PMEA	560
Rnet I/F module	XGL-RMEA	410	-	-	-

⁽⁾ means the current consumption for external DC24V.

8.4 Example of Current Consumption/Power Calculations

It describes which power module should be used for the XGR system with the following module.

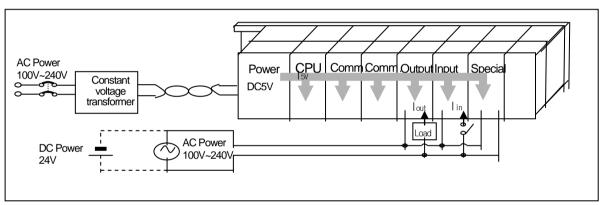

[Figure 8.4.1] Example of use of power module

8.4.1 In case of basic base

Though you equip all modules that consume maximum current, it is not higher than 5.5A. So consider input voltage and select XGR-AC12 or XGT-AC22

[Table 8.4.1] Consumption current/power calculation of basic base

Туре	Name	No. of equipment	Consumption current (5V)
CPU module	XGR-CPUH/F	1	1.31A
Basic base	XGR-M02P	1	0.2A
	XGR-M06P	1	0.2A
FEnet module	FEnet module XGL-EFMF 6		0.61A
Consumption	current (Total) / F	Power (Total)	$1.31A + 0.61A*6 = 4.97A / 4.97 \times 5V = 24.85W$

8.4.2 In case of expansion base

Calculate the consumption current of module equipped at expansion base and select 5.5A or 8.5A

[Table 8.4.2] Consumption current/power calculation of basic base

		noumparon ou	renipower calculation of basic base
Туре	Name	No. of equipment	Consumption current (5V)
Expansion drive module	XGR-DBSF	1	0.65A
Expansion base	XGB-E12RP	1	0.21A
Input module	XGI-D24A	2	0.05A
Output module	XGQ-RY2A	6	0.5A
A/D conversion module	XGF-AD4S	2	0.61A
Profibus-DP	XGL-PMEA	2	0.56A
Consumption of	urrent (Total) / Pov	wer (Total)	0.65A + 0.21A + 0.05A*2 + 0.5A*6 + 0.61A*2 + 0.56A*2 = 6.30A $/6.30A \times 5V = 31.50 \text{ W}$

Since total of consumption current (5V) is 6.17A, use one among XGR-AC13, XGP-AC23 according to input voltage. If power module is less than a necessary capacity, reliability of system is not guaranteed.

Note


If efficiency of power module is applied to power (5V), the user can estimates the maximum input power of PLC system. Ex) Total of consumption power (5V) / Power module efficiency (Min.) = 100 W / 0.65 % = 154 W


Chapter 9. I/O Module

9.1 Cautions for Selecting Module

It describes the cautions when selecting digital I/O modules used for the XGI series.

- (1) There are two digital input types; current sink input and current source input Since the wiring method of external input power varies in a DC input module, it should be selected considering the specifications of input connectors.
- (2) The max. simultaneous input point varies depending on a module type. That is, it may be different, depending on input voltage and ambient temperature. Please review the specifications of input module to apply before use.
- (3) In case of an application for highly frequent switching or inductive load switching, the relay output module may have a shorter life, so it needs a transistor module or triac output module, instead of it.
- (4) If an output module operates an inductive load(L), the max. On/Off frequency should be limited to On per 1 second and Off per 1 second, each.
- (5) In case a counter timer using DC/DC converter is used as a load in an output module, setting the average current may cause a trouble because it may have inrush current in case of On or a certain cycle during operation. Therefore, if using the foresaid load, it is necessary to connect resistance or inductor parallel to load or alternatively use a module of which max. load current is large.

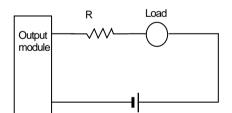


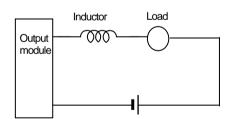

(6) A fuse in an output module can not be replaced. That's why it is intended to prevent external wiring from being damaged when the output of a module is short-circuited. Therefore, the output module may not be protected. If an output module is destructed in any other fault mode save for short-circuit, a fuse may not work.

(7) The following figure shows the relay life of relay output module.

It also shows the max. life of relay used for relay output.

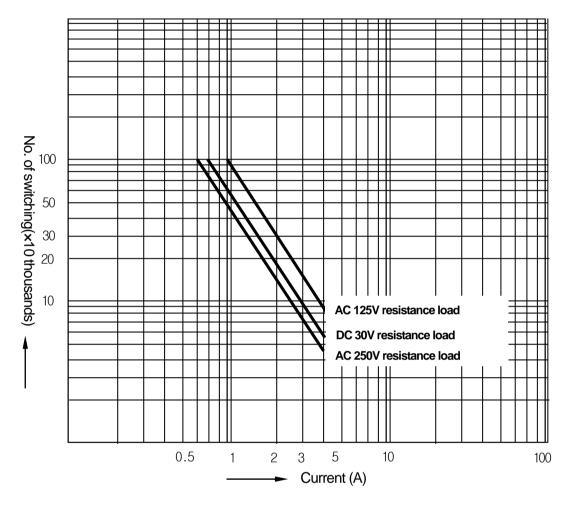

(8) A clamped terminal with sleeve can not be used for the XGI terminal strip. The clamped terminals suitable for terminal strip are as follows(JOR 1.25-3:Daedong Electricity).



- (9) The cable size connected to a terminal strip should be 0.3~0.75 mm² stranded cable and 2.8 mm thick. The cable may have different current allowance depending on the insulation thickness.
- (10) The coupling torque available for fixation screw and terminal strip screw should follow the table below.

Coupling position	Coupling torque range
IO module terminal strip screw(M3 screw)	42 ~ 58 N⋅cm
IO module terminal strip fixation screw(M3 screw)	66 ~ 89 N⋅cm

(11) Transistor output module(XGQ-TR4A, XGQ-TR8A) supports terminal protector function. Thermal Protector is the function to prevent overload and overheat.

9.2 Digital Input Module Specifications

9.2.1 8 point DC24V input module (source/sink type)

Module type DC Input module								
Spec.	71-		XGI-D21A					
Input point		8 points						
Insulation method		Photo coupler insulation						
Rated input voltage		DC24V						
Rated input current		Approx. 4 mA						
Voltage range		DC20.4~28.8V (5% and lower ripp	ole rate)					
Input derating		None						
On voltage / On curre	ent	DC19V and higher / 3 mA and high	her					
Off voltage / Off curre	ent	DC11V and lower / 1.7 mA and lov	wer					
Input resistance		Approx. 5.6 kΩ						
Response time	Off → On	1ms/3ms/5ms/10ms/20ms/70ms/10 Initial value:3ms 1ms/3ms/5ms/10ms/20ms/70ms/10						
	$On \rightarrow Off$	Initial value:3ms	ooms (occus) or	O i didirictor)				
Withstand voltage		AC560V rms/3 Cycle (altitude 200	0m)					
Insulation resistance		$10\mathrm{M}\Omega$ and higher by Insulation ohr	mmeter					
Common method		16 point/ COM						
Suitable cable size		Stranded cable between 0.3~0.75 m² (2.8mm and smaller outer dia.)						
Suitable clamped ten	minal	R1.25-3 (Sleeve built-in clamped terminal is not available)						
Current consumption	n(mA)	20mA						
Operation display		LED On with Input On						
External connection	method	9 point Terminal strip connector (M	13 X 6 screws)					
Weight		0.1 kg						
	Circuit dia	ngram	Terminal	Contact				
			block TB1	0	-			
			TB2	1	-			
			TB3	2]			
			TB4	3				
_			TB5	4	01			
	Photocou	nler 🕈 🗡	TB6	5 6	02			
0TB1	R + +	pier	TB8	7	1			
	<u>"</u>] [-] .	-}},	TB9	COM	03			
/	⊌ ;▼	<u>₹ \</u>	120		04			
7 TB8		Internal			05			
твэ твэ		circuit						
сом					.			
DC24V								
'т	erminal block no.				COM			
					{			

9.2.2 16 point DC24V input module (source/sink type)

Snoo	Module type	D	C Input module							
Spec. Input point		XGI-D22A 16 points								
Insulation metho		Photo coupler insulation								
Rated input volta		DC24V								
Rated input curre	-	Approx. 4 mA								
Voltage range	31 IL	DC20.4~28.8V (5% and lower ripp	• •							
Input derating		None	ne rate)							
	ou urrount		hor							
On voltage / On o		DC 19V and higher / 3mA and high								
Off voltage / Off of	current	DC 11V and lower / 1.7mA and lov	wer							
Input resistance	Γ	Approx. 5.6 kΩ 1ms/3ms/5ms/10ms/20ms/70ms/	100mg (Sathy C	DI I Doromoto	rl					
Deemones time	Off → On	Initial value:3ms	TOOMS (Set by C	ru raiametei)					
Response time	$On \rightarrow Off$	1ms/3ms/5ms/10ms/20ms/70ms/ Initial value:3ms	100ms (Set by C	PU Paramete	r)					
Insulation withsta	and voltage	AC560V rms/3 Cycle (altitude 200	0m)							
Insulation resista	nce	10 MΩ and higher by Insulation ohr	mmeter							
Common metho	d	16 point/ COM								
Suitable cable siz	ze	Stranded cable between 0.3~0.75	mm² (2.8mm and	smaller outer o	dia.)					
Suitable clamped	d terminal	R1.25-3 (Sleeve built-in clamped to	erminal is not ava	ilable)						
Current consump	otion(mA)	30mA								
Operation display	у	LED On with Input On								
External connect	ion method	18 point Terminal strip connector (M3 X 6 screws)							
Weight		0.12 kg	•							
	Circuit	diagram	Terminal block	Contact						
			TB1	0						
			TB2	1]					
			TB3	2						
			TB4 TB5	3 4	00 100					
	Pho	otocoupler 🕈 👇	TB6	5						
<u>0TB1</u>	R	→ `	TB7	6	03 (1)					
] }	4++	TB8	7	05 00 00					
15	P	<u> </u>	TB9	8						
15 TB16	<u>≥</u>	Internal	TB10	9						
TB17		circuit	TB11	10						
ÇOM		L	TB12	11						
DC24V	T	la sa a	TB13 TB14	12 13	13 10 20					
L	— Terminal bloc	k no.	TB15	14	15 75 52					


TB15

TB16 TB17 TB18 14 15 COM

NC

9.2.3 16 point DC24V input module (source type)

	Module type	D	C Input module						
Spec.			XGI-D22B						
Input point		16 points							
Insulation metho	d	Photo coupler insulation							
Rated input volta	ige	DC24V	DC24V						
Rated input curre	ent	Approx. 4 mA	Approx. 4 mA						
Voltage range		DC20.4~28.8V (5% and lower rippl	e rate)						
Input derating		None							
On voltage / On o	current	DC 19V and higher / 3mA and high	er						
Off voltage / Off of	current	DC 11V and lower / 1.7mA and low	er er						
Input resistance		Approx. 5.6 kΩ							
Off → On		1ms/3ms/5ms/10ms/20ms/70ms/100ms (Set by CPU Parameter) Initial value:3ms							
Response time	$On \rightarrow Off$	1ms/3ms/5ms/10ms/20ms/70ms/1 Initial value:3ms	00ms (Set by CF	PU Parameter	r)				
Insulation withsta	and voltage	AC560V rms/3 Cycle (altitude 2000)m)						
Insulation resista	nce	10 MΩ and higher by Insulation ohm	nmeter						
Common metho	d	16 point/ COM							
Suitable cable siz	ze	Stranded cable between 0.3~0.75	nm² (2.8mm and s	smaller outer o	dia.)				
Suitable clamped	d terminal	R1.25-3 (Sleeve built-in clamped te	rminal is not ava	ilable)					
Current consump	otion(^{mA})	30mA							
Operation display	у	LED On with Input On							
External connect	ion method	18point Terminal strip connector (M	13 X 6 screws)						
Weight		0.12 kg							
	Circuit	diagram	Terminal						
-					1				

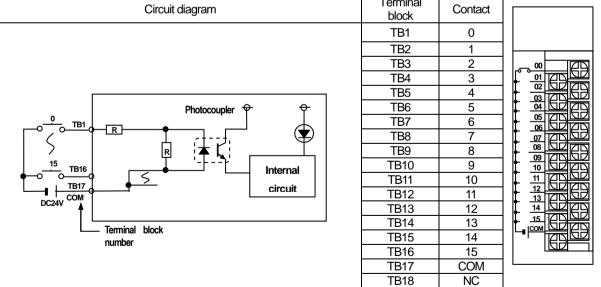

9.2.4 32 point DC24V input module (source/sink type)

	Module type		DC II	nput mod	dule				
Spec.	,,	XGI-D24A							
Input point		32 points							
Insulation method	Insulation method Photo coupler insulation								
Rated input volta	ge	DC24V							
Rated input curre	ent	Approx. 4 mA							
Voltage range		DC20.4~28.8V (5% and lower ripple rate)							
Input derating		Refer to the below derating level							
On voltage / On o	current	DC 19V and higher / 3mA ar	nd higher						
Off voltage / Off of	current	DC 11V and lower / 1.7mA a	nd lower						
Input resistance		Approx. 5.6 kΩ							
Response time	$Off \rightarrow On$	1ms/3ms/5ms/10ms/20ms/7 Initial value:3ms			-		•		
	$On \rightarrow Off$	1ms/3ms/5ms/10ms/20ms/7 Initial value:3ms			у СРО Р	arameter	·)		
Insulation withsta	Insulation withstand voltage AC560V rms/3 Cycle (altitude)								
Insulation resista	nce	10 MΩ and higher by Insulation	on ohmme	eter					
Common method	d 	32points / COM							
Suitable cable siz	ze	0.3 mm²							
Current consump	otion(mA)	50mA							
Operation display	/	LED On with Input On							
External connect	ion method	40point connector							
Weight		0.1 kg	1	Т Т		T T			
	Circuit diag	ram	No	Contact	No	Contact		~	
Г			B20	0	A20	16		00	١
0B20_1	Photoco	upler 🕈 🖁	B19	1	A19	17	B20 B19	0 0	A20
	R	-} <u>F</u>	B18	2	A18	18	B18	0 0	A19 A18
	₽į≠	* [B17 B16	3 4	A17	19 20	B17	0 0	A17
31 A05	<u> </u>	Internal	B15	5	A16 A15	21	B16	0 0	A16
<u> </u>			B14	6	A14	22	B15	0 0	A15
ii i COM		circuit	B13	7	A13	23	B14	0 0	A14
DC24V / L	Connector number		B12	8	A12	24	B13 B12	0 0	A13 A12
100		T T 1	B11	9	A11	25	B11	0 0	A11
90		 	B10	10	A10	26	B10	0 0	A10
		DC28.8V	B09	11	A09	27	B09	0 0	A09
On rate(%) ⁸⁰ / ₇₀				12	A08	28	B08 B07	0 0	A08 A07
				13	A07	29	B06	0 0	A07 A06
60			B07 B06	14	A06	30	B05	0 0	A05
50			B05	15	A05	31	B04	0 0	A04
40 🗀	40 20 20		B04	NC	A04	NC	B03 B02	0 0	A03 A02
0	10 20 30 Ambient		B03	NC	A03	NC	B01	0 0	A02 A01
Derating leve	ATIDIGIT	willp.	B02	COM	A02	COM		<u> </u>	
			B01	COM	A01	COM			

9.2.5 32 point DC24V input module (source type)

	Module type	DC Input module								
Spec.			Х	GI-D24E	3					
Input point		32 points	32 points							
Insulation method	d	Photo coupler insulation								
Rated input volta	ge	DC24V								
Rated input curre	ent	Approx. 4 mA								
Voltage range		DC20.4~28.8V (5% and lov	DC20.4~28.8V (5% and lower ripple rate)							
Input derating		Refer to the below derating	level							
On voltage / On o	current	DC19V and higher / 3 mA a	nd higher							
Off voltage / Off of	current	DC 11V and lower / 1.7mA	and lower							
Input resistance		Approx. 5.6 kΩ								
	Off → On	1ms/3ms/5ms/10ms/20ms/ Initial value:3ms	70ms/100i	ms (Set b	y CPU P	arameter)				
Response time	$On \rightarrow Off$	1ms/3ms/5ms/10ms/20ms/ Initial value:3ms	70ms/100i	ms (Set b	y CPU P	arameter)				
Insulation withsta	ınd voltage	AC560V rms/3 Cycle (altitud	de 2000m)							
Insulation resista	nce	10 MΩ and higher by Insulati	on ohmme	eter						
Common method	b	32 points / COM								
Suitable cable siz	ze	0.3 mm²								
Current consump	otion(mA)	50mA	50mA							
Operation display	/	LED On with Input On								
External connect	ion method	40point connector								
Weight		0.1 kg								
	Circuit diag	jram .	No	Contact	No	Contact				
_		1	B20	0	A20	16				
0 P20	Photoco	oupler 🕈 👇	B19	1	A19	17	B20	0 0	A20	
- B20 B20	R +	-, - 	B18	2	A18	18	B19	0 0	A19	
151	向		B17	3	A17	19	B18	0 0	A18	
31 405	<u></u>	_ \	B16	4	A16	20	B17	0 0	A17	
B02	<u> </u>	□ Internal	B15	5	A15	21	B16 B15	0 0	A16 A15	
DC24V COM	 -	circuit	B14	6	A14	22	B14	0 0	A14	
DC24V			B13	7	A13	23	B13	0 0	A13	
	Connector numb	er -	B12	8	A12	24	B12	0 0	A12	
100			B11	9	A11	25	B11	0 0	A11	
90	 	 	B10	10	A10	26	B10	0 0	A10	
80		DC28.8V	B09	11	A09	27	B09	0 0	A09	
On rate(%) ⁸⁰ / ₇₀				12	A08	28	B08 B07	0 0	A08 A07	
·				13	A07	29	B06	0 0	A06	
60	 	 	B07 B06	14	A06	30	B05	0 0	A05	
50	 	- 	B05	15	A05	31	B04	0 0	A04	
40			B03	NC	A03	NC	B03	0 0	A03	
0	10 20 3	0 40 50 55 °C	B03	NC	A04 A03	NC	B02	0 0	A02	
Derating level	Ambient	temp.	B03	COM	A03 A02	COM	B01		A01	
Dordaniy level										
			B01	COM	A01	COM				

9.2.6 64 point DC24V input module (source/sink type)


Spec.	odule type						module	<u> </u>				
-		64 po	XGI-D28A 64 points									
Input point Insulation method	· ·	Photo coupler insulation										
Rated input voltage		DC24V										
Rated input current		Approx. 4 mA										
Voltage range			DC20.4~28.8V (5% and lower ripple rate)									
Input derating On voltage / On current			Refer to the below derating level									
Off voltage / Off current		1	DC 19V and higher / 3mA and higher DC 11V and lower / 1.7mA and lower									
Input resistance			x. 5.6 k		TIIA aliu	OWEI						
input resistance	Off → On	1ms/3		/10ms/20	Oms/70m	s/100ms	(Set by 0	CPU Par	rameter)			
Response time	On → Off	1ms/3		/10ms/20	0ms/70m	s/100ms	(Set by 0	CPU Par	rameter)			
Insulation withstand volta	ge				altitude 20	000m)						
Insulation resistance				her by In:	sulation o	hmmete	r					
Common method	32poi	nt / COM	1									
Suitable cable size	0.3 mm	2										
Current consumption(mA)	60mA	60mA										
Operation display		LED	LED On with Input On (32point LED on by switching)									
External connection meth	nod	40poi	nt conne	ctor × 2								
Weight		0.15 kg										
Circuit dia	agram	No	Contact	No	Contact	No	Contact	No	Contact			
		1B20	0	1A20	16	2B20	32	2A20	48			
0 1B20 Photocoup		1B19	1	1A19	17	2B19	33	2A19	49			
		1B18	3	1A18	18	2B18	34	2A18	50	B20	0 0	A20
31 1A05	Internal	1B17 1B16	4	1A17 1A16	19 20	2B17 2B16	35 36	2A17 2A16	51 52	B19 B18	0 0	A19 A18
1B02 □ COM	circuit	1B15	5	1A15	21	2B15	37	2A15	53	B17 B16	0 0	A17
DC24V DC24V		1B14	6	1A14	22	2B14	38	2A14	54	B15	0 0	A16 A15
Connector number	A & Switching	1B13	7	1A13	23	2B13	39	2A13	55	B14 B13	0 0	A14 A13
	B° circuit	1B12	8	1A12	24	2B12	40	2A12	56	B12	0 0	A12
A: displaying P00	1	1B11	9	1A11	25	2B11	41	2A11	57	B11 B10	0 0	A11
100 B: displaying P32	2~P63	1B10	10	1A10	26	2B10	42	2A10	58	B09	0 0	A10 A09
0n 80 0n 70		1B09	11	1A09	27	2B09	43	2A09	59	B08 B07	0 0	A08 A07
On 711		1B08	12	1A08	28	2B08	44	2A08	60	B06	0 0	A06
40	DC28.8V	1B07	13	1A07	29	2B07	45	2A07	61	B05 B04	0 0	A05 A04
30		1B06	14	1A06	30	2B06	46	2A06	62	B03	0 0	A03
0 10 20 30	40 50 55	1B05	15	1A05	31	2B05	47	2A05	63	B02 B01	0 0	A02 A01
Ambient	1 0 J0 J0	1B04	NC	1A04	NC	2B04	NC	2A04	NC	501		AUI
temp.(°C)		1B03	NC	1A03	NC	2B03	NC	2A03	NC			
Derating level		1B02	COM	1A02	NC	2B02	COM	2A02	NC			
		1B01	COM	1A01	NC	2B01	COM	2A01	NC			

9.2.7 64 point DC24V input module (source type)

Spec.	Module type				l	DC Input XGI-E)				
Input point		64 poi	ints			XOIL	7200					
Insulation method		-		insulation	า							
Rated input voltage		DC24	•									
Rated input current		Appro	x. 4 mA									
Voltage range				/ (5% an	d lower ri	pple rate)					
Input derating				elow dera			,					
On voltage / On current	 :			igher / 3r								
Off voltage / Off current				ower / 1.7								
Input resistance		Appro	x. 5.6 kΩ	2								
	Off → On	1ms/3		/10ms/20)ms/70m	s/100ms((Set by C	CPU Para	ameter)			
Response time	$On \rightarrow Off$		3ms/5ms value:3)ms/70m	s/100ms	(Set by 0	CPU Par	ameter)			
Insulation withstand vol	tage	AC56	0V rms/3	3 Cycle (a	altitude 20	000m)						
Insulation resistance		10 ΜΩ	and hig	her by Ins	sulation o	hmmeter	•					
Common method		32 poi	ints / CO	М								
Suitable cable size		0.3 mm	2									
Current consumption(m	A)	60mA	L									
Operation display		LED	On with I	nput On	(32poin	t LED on	by switc	hing)				
External connection me	ethod	40poir	nt conne	ctor × 2								
Weight		0.15 k	g									
Circuit d	iagram	No	Contact	No	Contact	No	Contact	No	Contact			
Phot	ocoupler 🕈 🕈	1B20	0	1A20	16	2B20	32	2A20				
0 1B20 R		1B19	2	1A19	17	2B19	33	2A19	_			١
	★ 【	1B18 1B17	3	1A18 1A17	18 19	2B18 2B17	34 35	2A18 2A17				l
0 0 1A05 S	Internal	1B16	4	1A16	20	2B16	36	2A16				l
DC24V COM	circuit	1B15	5	1A15	21	2B15	37	2A15	-		0 0	
Connector	Outstin a	1B14	6	1A14	22	2B14	38	2A14	54			
number	A C Switching circuit	1B13	7	1A13	23	2B13	39	2A13	55		0 0	
A: displaying P	B ° 00~P31	1B12	8	1A12	24	2B12	40	2A12	56	B12		A12
B: displaying P	1	1B11	9	1A11	25	2B11	41	2A11	57		0 0	l
100		1B10	10	1A10	26	2B10	42	2A10	58			ı
80		1B09	11	1A09	27	2B09	43	2A09	59			ı
On 70 rate(%)0	+ $+$ $+$ $+$ $+$ $+$ $+$ $+$ $+$ $+$ $+$ $+$ $+$	1B08	12	1A08	28	2B08	44	2A08	60			ı
rate(%)0 50 40	DC28.8V	1B07	13	1A07	29	2B07	45	2A07	61		0 0	l
30		1B06	14	1A06	30	2B06	46	2A06	62			
20 10 20 20		1B05	15	1A05	31	2B05	47	2A05	63			
0 10 20 30 Ambient	40 50 55	1B04	NC	1A04	NC	2B04	NC	2A04	NC	DUI		AUI
temp (°C)		1B03	NC	1A03	NC	2B03	NC	2A03	NC			
Derating level		1B02	СОМ	1A02	NC	2B02	СОМ	2A02	NC			
		1B01	COM	1A01	NC	2B01	COM	2A01	NC			


9.2.8 16 point AC110V input module

Cross	Module type	AC Input module				
Spec.		XGI-A12A				
Input point		16 points				
Insulation method	d	Photo coupler insulation				
Rated input volta	ge	AC100-120V(+10/-15%) 50/60 Hz (±3 Hz) (5% and lower distortion)				
Rated input curre	ent	Approx. 8 mA (AC100,60 Hz), approx. 7 mA (AC100,50 Hz)				
Inrush current		Max. 200 mA 1 ms and lower(AC132V)				
Input derating		Refer to the below derating level				
On voltage / On o	current	AC80V and higher / 5 mA and higher(50 Hz,60 Hz)				
Off voltage / Off current		AC30V and higher / 1 mA and lower (50 Hz,60 Hz)				
Input resistance		Approx. 12 kΩ(60 Hz), approx. 15 kΩ(50 Hz)				
Dooponoo timo	$Off \rightarrow On$	15 ms and lower(AC100V 50 Hz,60 Hz)				
Response time	$On \rightarrow Off$	25 ms and lower(AC100V 50 Hz,60 Hz)				
Insulation withsta	and voltage	AC1780V rms/3 Cycle (altitude 2000m)				
Insulation resista	nce	10 ^{MQ} and higher by Insulation ohmmeter				
Common method	d	16 point/ COM				
Suitable cable siz	ze	Stranded cable between 0.3~0.75 mm² (2.8mm and smaller outer dia.)				
Suitable clamped	d terminal	R1.25-3 (Sleeve built-in clamped terminal is not available)				
Current consump	otion(^{mA})	30mA				
Operation display	У	LED On with Input On				
External connect	ion method	18point Terminal strip connector (M3 X 6 screws)				
Weight		0.13 kg				

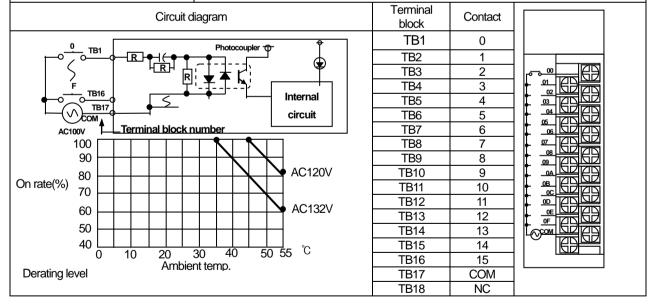

9.2.9 8 point AC220V input module

	Module type	AC input module
Spec.		XGI-A21A
Input point		8 points
Insulation method	d	Photo coupler insulation
Rated input volta	ge	AC100-240V(+10/-15%) 50/60 Hz(±3 Hz) (5% and lower distortion)
Rated input curre	ent	Approx. 17 mA (AC200,60 Hz), approx. 14 mA (AC200,50 Hz)
Inrush current		Max. 500 mA 1 ms and lower(AC264V)
Input derating		Refer to the below derating level
On voltage / On current		AC80V and higher / 5 mA and higher(50 Hz,60 Hz)
Off voltage / Off of	current	AC30V and higher / 1 mA and lower (50 Hz,60 Hz)
Input resistance		Approx. 12 kΩ(60 Hz), approx. 15 kΩ(50 Hz)
Pagagana tima	$Off \rightarrow On$	15 ms and lower(AC200V 50 Hz,60 Hz)
Response time	$On \rightarrow Off$	25 ms and lower(AC200V 50 Hz,60 Hz)
Insulation withsta	ınd voltage	AC2830V rms/3 Cycle (altitude 2000m)
Insulation resista	nce	10 ^{MΩ} and higher by Insulation ohmmeter
Common method	d	8 points / COM
Suitable cable siz	ze	Stranded cable between 0.3~0.75 m² (2.8mm and smaller outer dia.)
Suitable clamped	d terminal	R1.25-3 (Sleeve built-in clamped terminal is not available)
Current consump	otion(mA)	20mA
Operation display	/	LED On with Input On
External connect	ion method	9point Terminal strip connector (M3 X 6 screws)
Weight		0.13 kg

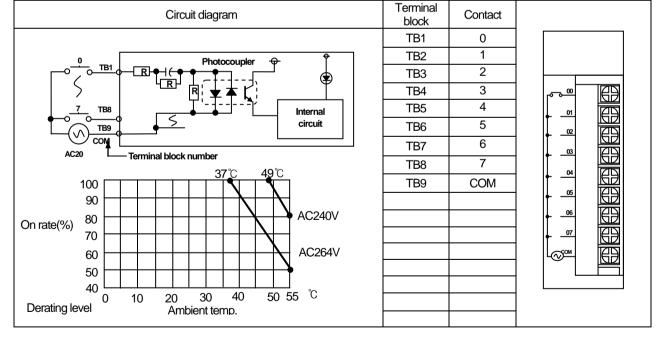

9.3 Digital Output Module Spec.

9.3.1 8 point relay output module

	Module type		Relay	output module						
Spec.			X	GQ-RY1A						
Output point		8 points	8 points							
Insulation metho	od	Relay insulation								
Rated load volta	ge/current	DC24V 2A(resista	DC24V 2A(resistance load) / AC220V 2A(COSΨ = 1)							
Min. load voltage	e / current	DC5V / 1mA								
Max. load voltag	e / current	AC250V, DC125\	/							
Leakage current	at Off	0.1mA (AC220V,	60Hz)							
Max. switching fi	requency	3,600 times/hr								
Surge killer		None								
	Mechanical	20 million and mo	re times							
		Rated load voltage	e/current 100 thousand a	and more times						
Life	EL (* 1	AC200V / 1.5A, A	.C240V / 1A (COSΨ = 0.	7) 100 thousand and mo	re times					
Electrical		AC200V / 1A, AC	AC200V / 1A, AC240V / 0.5A (COSΨ = 0.35) 100 thousand and more times							
		DC24V / 1A, DC1	00V / 0.1A (L / R = 7ms)	100 thousand and more	times					
Response	$Off \rightarrow On$	10 ms and lower	10 ms and lower							
time	$On \rightarrow Off$	12 ms and lower								
Common metho	d	1 point/ 1COM (In	ndependent contact)							
Current consum	ption	260mA (when eve	260mA (when every point is On)							
Operation displa	у	LED On with outp	ut On							
External connec	tion method	18 point Terminal strip connector (M3 X 6 screws)								
Weight		0.13kg								
	(Circuit diagram		Terminal Contact						
		<u>-</u>		block Oorlingt						
			_	TB2 COM						
-	-			TB3 1 TB4 COM						
				TB5 2						
LED (\$\frac{1}{4}\)	<u>'</u>)			TB6 COM						
			∏B1	TB7 3						
Int	ernal	, 	🖳	TB8 COM						
circuit) 🕯	TB2	TB9 4						
				TB10 COM						
			/	TB11 5 TB12 COM						
				TB13 6						
			▲	TB14 COM						
			[」]	TB15 7						
			L—Terminal block	TB16 COM						
			number	TB17 NC						
				TB18 NC						

9.3.2 16 point relay output module

Spec. XGQ-RY2A Output point 16 points Insulation method Relay insulation Rated load voltage/current DC24V 2A(resistance load) / AC220V 2A(COSY = 1) Min. load voltage / current AC250V, DC125V Leakage current at Off 0.1mA (AC220V, 60Hz) Max. switching frequency 3.600 times/hr Surge killer None Rated load voltage/current 100 thousand and more times AC200V/1.5A, AC240V/1A (COSY = 0.7) 100 thousand and more times AC200V/1.1A, AC240V/0.5A (COSY = 0.35) 100 thousand and more times DC24V/1A, DC100V/0.1A (L/R = 7ms) 100 thousand and more times DC24V/1A, DC100V/0.1A (L/R = 7ms) 100 thousand and more times Common method 16 point/ 1COM Current consumption 500mA (when every point is On) Operation display LED On with output On External connection method 18point Terminal strip connector (M3 X 6 screws) Weight O:Trig Time 18point Terminal time of the content of the cont		Module type	R	elay output module						
Relay insulation method Relay insulation Rated load voltage/current DC24V 2A(resistance load) / AC220V 2A(COSΨ = 1)	Spec.									
Rated load voltage/current DC24V 2A(resistance load) / AC220V 2A(COSY = 1)	Output point		16 points							
Min. load voltage / current Max. load voltage / current AC250V, DC125V Leakage current at Off 0.1 mA (AC220V, 60Hz) Max. switching frequency 3.600 times/hr Surge killer Mechanical AC200V / 1.0 None Mechanical Rated load voltage/current 100 thousand and more times AC200V / 1.2 A, AC240V / 1.4 (COSΨ = 0.7) 100 thousand and more times AC200V / 1.4, AC240V / 0.5 A (COSΨ = 0.35) 100 thousand and more times DC24V / 1.4, DC100V / 0.1 A (L / R = 7ms) 100 thousand and more times DC24V / 1.4 DC100V / 0.1 A (L / R = 7ms) 100 thousand and more times Common method 16 point 1COM Current consumption 500mA (when every point is On) Operation display LED On with output On External connection method 18 point Terminal strip connector (M3 X 6 screws) Weight 0.17kg Circuit diagram Terminal block number Tibio 1 T	Insulation meth	nod	Relay insulation							
Max. load voltage / current AC250V, DC125V Leakage current at Off 0.1mA (AC220V, 60Hz) Max. switching frequency 3,600 times/hr Surge killer None Life Mechanical 20 million and more times Ac220V / 1.5A, AC240V / 1A (COS¹Y = 0.7) 100 thousand and more times AC200V / 1.5A, AC240V / 1A (COS¹Y = 0.35) 100 thousand and more times Response time Off → On On → Off 10 ms and lower Common method 16 point/ 1COM Current consumption 500mA (when every point is On) Operation display LED On with output On External connection method 18 point Terminal strip connector (M3 X 6 screws) Weight 0.17kg Terminal block Internal connection method 18 point Terminal strip connector (M3 X 6 screws)	Rated load vol	tage/current	DC24V 2A(resistance load) / AC220	OV 2A(COSΨ = 1)						
Leakage current at Off 0.1mA (AC220V, 60Hz) Max. switching frequency 3,600 times/hr Surge killer None Life Mechanical 20 million and more times Rated load voltage/current 100 thousand and more times AC200V / 1.5A, AC240V / 1.5A, AC240V / 1.5A, AC240V / 1.5A, AC240V / 1.5A, AC250V = 0.35) 100 thousand and more times Response time Dff → On DC4V / 1.5A, AC240V / 1.5A, AC250V = 0.35) 100 thousand and more times Common method 10 ms and lower Common method 15 point/ 1COM Current consumption 500mA (when every point is On) Operation display LED On with output On External connection method 18point Terminal strip connector (M3 X 6 screws) Weight Circuit diagram Terminal circuit Terminal method Internal circuit Terminal method Terminal circuit Terminal method Terminal block number Terminal method Terminal block number Terminal method Terminal block number Terminal method	Min. load volta	ge / current	DC5V / 1mA							
Max. switching frequency 3,600 times/hr Surge killer None Mechanical 20 million and more times Rated load voltage/current 100 thousand and more times AC200V/15A, AC240V/14 (COSY = 0.7) 100 thousand and more times AC200V/1A, AC240V/0.5A (COSY = 0.35) 100 thousand and more times DC24V/1A, DC100V/0.1A (L/R = 7ms) 100 thousand and more times Common method 16 point/ 1COM Current consumption 500mA (when every point is On) Operation display LED On with output On External connection method 18 point Terminal strip connector (M3 X 6 screws) Weight 0.17kg Terminal block number TB1 0 TB2 1 TB8 7 TB9 8 TB10 9 TB11 10 TB12 11 TB13 12 TB14 13 TB15 14 TB16 15 TB16 14 TB16 15 TB17 COM	Max. load volta	age / current	AC250V, DC125V							
Surge killer	Leakage curre	nt at Off	Relay insulation rent DC24V 2A(resistance load) / AC220V 2A(COSΨ = 1) rent DC5V / 1mA rent AC250V, DC125V 0.1mA (AC220V, 60Hz) ncy 3,600 times/hr None nanical 20 million and more times Rated load voltage/current 100 thousand and more times AC200V / 1.5A, AC240V / 1A (COSΨ = 0.7) 100 thousand and more times AC200V / 1A, DC100V / 0.1A (L / R = 7ms) 100 thousand and more times DC24V / 1A, DC100V / 0.1A (L / R = 7ms) 100 thousand and more times On 10 ms and lower Off 12 ms and lower 16 point/ 1COM 500mA (when every point is On) LED On with output On lethod 18point Terminal strip connector (M3 X 6 screws) 0.17kg Circuit diagram Terminal block TB1 0 TB2 1 TB3 2 TB4 3 TB5 4 TB6 5 TB7 6 TB8 7							
Mechanical 20 million and more times	Max. switching	g frequency	3,600 times/hr							
Rated load voltage/current 100 thousand and more times	Surge killer		None							
AC200V / 1.5A, AC240V / 1A (COSΨ = 0.7) 100 thousand and more times	Mechanical		20 million and more times							
Electrical AC200V/1A, AC240V/0.5A (COSΨ = 0.35) 100 thousand and more times DC24V/1A, DC100V/0.1A (L/R = 7ms) 100 thousand and more times Response time On → Off 12 ms and lower Common method 16 point/ 1COM Current consumption 500mA (when every point is On) Operation display LED On with output On External connection method 18point Terminal strip connector (M3 X 6 screws) Weight 0.17kg Circuit diagram Terminal block TB1 0 TB2 1 TB3 2 TB4 3 TB5 4 TB6 5 TB7 6 TB9 8 TB10 9 TB11 10 TB12 11 TB13 12 TB11 10 TB12 11 TB13 12 TB14 13 TB15 14 TB15 15 TB17 COM			Rated load voltage/current 100 thou	sand and more times						
AC200V/1A, AC240V/0.5A (COSY = 0.35) 100 thousand and more times DC24V/1A, DC100V/0.1A (L/R = 7ms) 100 thousand and more times DC24V/1A, DC100V/0.1A (L/R = 7ms) 100 thousand and more t	Life		AC200V / 1.5A, AC240V / 1A (COS	$S\Psi = 0.7$) 100 thousand and more times						
Response time Off → On On → Off 10 ms and lower Common method 16 point/ 1COM Current consumption 500mA (when every point is On) Operation display LED On with output On External connection method 18point Terminal strip connector (M3 X 6 screws) Weight 0.17kg Terminal block TB1 0 TB2 1 TB3 2 TB4 3 TB5 4 TB6 5 TB7 6 TB8 7 TB9 8 TB10 9 TB10 9 TB11 10 TB12 11 TB13 12 TB14 13 TB15 14 TB16 15 TB16 15 TB17 COM		Electrical	AC200V / 1A, AC240V / 0.5A (CC	$OS\Psi = 0.35$) 100 thousand and more times						
time On → Off 12 ms and lower Common method 16 point/ 1COM Current consumption 500mA (when every point is On) Operation display LED On with output On External connection method 18 point Terminal strip connector (M3 X 6 screws) Weight 0.17kg Circuit diagram Terminal block TB1 0 TB2 1 TB3 2 TB4 3 TB5 4 TB6 5 TB7 6 TB7 6 TB8 7 TB9 8 TB9 8 TB10 9 TB11 10 TB12 11 TB13 12 TB13 12 TB14 13 TB15 14 TB15 14 TB16 15 TB16 15 TB16 15 TB16 15 TB16 15 TB16 15 TB17 COM			DC24V / 1A, DC100V / 0.1A (L / R =	= 7ms) 100 thousand and more times						
time On → Off 12 ms and lower Common method 16 point/ 1COM Current consumption 500mA (when every point is On) Operation display LED On with output On External connection method 18point Terminal strip connector (M3 X 6 screws) Weight Circuit diagram Terminal block Contact block TB1 0 TB2 1 TB3 2 1 TB3 3 TB5 4 TB6 5 TB7 6 TB7 6 TB9 8 TB9 8 TB9 8 TB9 9 TB9 8 TB9 9 TB9 10 TB9 TB9 8 TB9 10 TB9	Response	$Off \rightarrow On$	10 ms and lower							
Current consumption 500mA (when every point is On) Operation display LED On with output On External connection method 18point Terminal strip connector (M3 X 6 screws) Weight 0.17kg Circuit diagram Terminal block number 18point 19point 19poin		$On \rightarrow Off$	12 ms and lower							
Operation display External connection method 18point Terminal strip connector (M3 X 6 screws) Weight Circuit diagram Terminal block TB1 TB3 TB5 TB4 TB6 TB7 TB8 TB9 TB9 TB9 TB9 TB9 TB1										
External connection method 18point Terminal strip connector (M3 X 6 screws)	Current consu									
Circuit diagram	Operation disp	olay	LED On with output On	LED On with output On						
Circuit diagram Terminal block TB1 0 TB2 1 TB3 2 TB4 3 TB5 4 TB6 5 TB7 6 TB8 7 TB9 8 TB10 9 TB11 10 TB10 9 TB11 10 TB12 11 TB13 12 TB14 13 TB13 12 TB14 13 TB15 14 TB16 15 TB16 15 TB17 COM	External conne	ection method	18point Terminal strip connector (Ma	3 X 6 screws)						
TB1 0 TB2 1 TB3 2 TB4 3 TB5 4 TB6 5 TB7 6 TB8 7 TB9 8 TB10 9 TB11 10 TB12 11 TB11 10 TB12 11 TB13 12 TB14 13 TB15 14 TB15 14 TB16 15 TB17 COM	Weight		0.17kg							
TB1		C	circuit diagram	I I Contact I						
TB3 2 TB4 3 TB5 4 TB6 5 TB7 6 TB8 7 TB9 8 TB10 9 TB11 10 TB12 11 TB13 12 TB14 13 TB15 14 TB16 15 TB16 15 TB17 COM				TB1 0						
TB4 3 TB5 4 TB6 5 TB7 6 TB8 7 TB9 8 TB10 9 TB11 10 TB12 11 TB13 12 TB14 13 TB13 12 TB14 13 TB15 14 block number TB16 15 TB17 COM										
TB5 4 TB6 5 TB7 6 TB8 7 TB9 8 TB10 9 TB11 10 TB12 11 TB13 12 TB14 13 TB15 14 TB15 14 TB15 14 TB16 15 TB17 COM		Ť								
TB7 6 TB8 7 TB9 8 TB10 9 TB11 10 TB12 11 TB13 12 TB14 13 TB15 14 TB15 14 TB15 14 TB16 15 TB17 COM		\bigoplus		TB5 4						
TB8 7 TB9 8 TB10 9 TB11 10 TB12 11 TB13 12 TB14 13 TB15 14 TB15 14 TB16 15 TB17 COM		<u> </u>	тв1	COSY = 0.7) 100 thousand and more times						
TB9 8 TB10 9 TB11 10 TB12 11 TB13 12 TB14 13 TB15 14 block number TB16 15 TB17 COM		nternal								
TB10 9 TB11 10 TB12 11 TB13 12 TB14 13 TB15 14 block number TB16 15 TB17 COM		★ □v								
TB11 10 TB12 11 TB13 12 TB14 13 TB15 14 block number TB16 15 TB17 COM										
TB17 TB12 11 TB13 12 TB14 13 TB15 14 Dlock number TB16 15 TB17 COM		<u>-</u>	IBIO L							
Terminal			TB17 (TB12 11						
Terminal TB15 14 block number TB16 15 TB17 COM										
block number TB16 15 TB17 COM										
TB17 COM										
			BIOCK HUITI							
				TB18 NC						

9.3.3 16 point relay output module(Surge Killer built-in type)


	Module type		Relay o	utput mod	ule				
Spec.			XG	Q-RY2B					
Output point		16 points							
Insulation me	ethod	Relay insulation							
Rated load vo	oltage/current	DC24V 2A(resista	nce load) / AC220V 2A(C	OSΨ = 1)					
Min. load volt	age / current	DC5V / 1mA							
Max. load vol	tage / current	AC250V, DC125V	1						
Leakage curr	DC5V / 1mA								
Max. switchin	ng frequency	3,600 times/hr							
Surge killer		Varistor (387 ~ 473	3V), C.R absorber						
Insulation method Relay instance Rated load voltage/current DC24V 2 Min. load voltage / current DC5V / 10 Max. load voltage / current AC250V, Leakage current at Off 0.1mA (AI Max. switching frequency 3,600 time Surge killer Varistor (3) Mechanical 20 million Rated load AC200V / AC200V / DC24V / 10 Response time Off → On 10 ms and 12 ms and 14 ms and 15 ms and 16 point / Current consumption 500mA (vicinity of the point		20 million and mor	e times						
		Rated load voltage	e/current 100 thousand ar	nd more times	S				
Life	Flactoinal	AC200V / 1.5A, AC	C240V / 1A (COSΨ = 0.7) 100 thousa	nd and mor	re times			
	Electrical	AC200V / 1A, AC2	240V / 0.5A (COSΨ = 0.3	5) 100 thous	and and mo	ore times			
		DC24V / 1A, DC10	00V / 0.1A (L / R = 7ms) 1	100 thousand	and more	times			
Response	$Off \rightarrow On$	10 ms and lower							
		12 ms and lower							
Common me	thod	16 point/ 1COM	16 point/ 1COM						
Current cons	umption	500mA (when eve	ry point is On)						
Operation dis	splay	LED On with output On							
External conr	nection method	18 point Terminal	strip connector (M3 X 6 so	crews)					
Weight		0.19kg							
		Circuit diagram			Contact				
	tition display LED On with output On 18 point Terminal strip connector (M3 X 6 screws) 10.19kg Circuit diagram Terminal block TB1 0 TB2 1								
	†	AC200V / 1.5A, AC240V / 1A (COS Ψ = 0.7) 100 thousand and more times AC200V / 1A, AC240V / 0.5A (COS Ψ = 0.35) 100 thousand and more times DC24V / 1A, DC100V / 0.1A (L / R = 7ms) 100 thousand and more times \rightarrow On 10 ms and lower 16 point/ 1COM 1500mA (when every point is On) LED On with output On method 18 point Terminal strip connector (M3 X 6 screws) 0.19kg Circuit diagram Terminal block TB1 0 TB2 1 TB3 2 TB4 3 TB5 4 TB6 5 TB7 6 TB8 7 TB9 8 TB10 9 TB11 10 TB10 9 TB11 10 TB10 0 TB10 9 TB11 10 TB10 9 TB11 10 TB10 9 TB11 10 TB10 9 TB11 10 TB11 10 TB11 10 TB11 10							
	(TB5	4				
	On → Off 12 ms and lower non method 16 point/ 1COM nt consumption 500mA (when every point is On) tion display LED On with output On all connection method 18 point Terminal strip connector (M3 X 6 screws) t 0.19kg Circuit diagram Terminal block Contact block TB1 0 TB2 1 TB3 2 TB4 3 TB5 4 TB5 4 TB6 5								
	Internal	7	+						
		鄭 ╣ 孝							
[_		J 1	TR16						
	_								
			TB17						
				TB13	12				
			J	TB14	13				
			Terminal block number	TB15 TB16	14 15				
			Humbel	TB17	COM				
				TB18	NC				
				•					

9.3.4 16 point Triac output module

Triac ou	utput module
XG	Q-SS2A
16 points	
Photo coupler insulation	
AC 100-240V (50 / 60 Hz)	
AC 264V	
0.6A / 1 point, 4A / 1COM	
20 mA	
2.5 mA (AC 220V 60 Hz)	
20A / Cycle and lower	
AC 1.5V and lower (2A)	
Varistor (387 ~ 473V), C.R absorber	
1 ms and shorter	
0.5 Cycle + 1 ms and shorter	
16 point/ 1 COM	
300 mA (when every point is On)	
LED On with output On	
18point Terminal strip connector (M3 X 6 sc	rew)
0.2 kg	
Circuit diagram	Terminal block Contact
TB1 Terminal block number	TB1 0 TB2 1 TB3 2 TB4 3 TB5 4 TB6 5 TB7 6 TB8 7 TB9 8 TB10 9 TB11 10 TB12 11 TB13 12 TB13 12 TB14 13 TB15 14 TB16 15 TB17 COM
	Photo coupler insulation AC 100-240V (50 / 60 Hz) AC 264V 0.6A / 1 point, 4A / 1COM 20 mA 2.5 mA (AC 220V 60 Hz) 20A / Cycle and lower AC 1.5V and lower (2A) Varistor (387 ~ 473V), C.R absorber 1 ms and shorter 0.5 Cycle + 1 ms and shorter 16 point/ 1 COM 300 mA (when every point is On) LED On with output On 18point Terminal strip connector (M3 X 6 sc 0.2 kg Circuit diagram

9.3.5 16 point transistor output module (sink type)

	Module type	Transistor output module					
Spec.		XGQ-TR2A					
Output point		16 points					
Insulation method	d	Photo coupler insulation					
Rated load voltag	je	DC 12/24V					
Operating load vo	oltage range	DC 10.2 ~ 26.4V					
Max. load current		0.5A / 1point, 4A / 1COM					
Leakage current	at Off	0.1mA and lower					
Max. inrush curre	nt	4A / 10 ms and lower					
Max. voltage drop	o at On	DC 0.3V AND LOWER					
Surge killer		Zener diode					
Fuse		4Ax2(not replaceable)(Fuse cap.:50A)					
Fuse disconnection	on display	Yes(If a fuse is burnt out, it transfers a signal to CPU and LED is on) If external power supply is off, fuse status is not detected.					
Response time	$Off \rightarrow On$	1 ms and shorter					
response ume	$On \rightarrow Off$	1 ms and shorter (Rated load, resistance load)					
Common method	d	16 point/ 1COM					
Current consump	otion	70mA (when every point is On)					
External power	Voltage	DC12/24V ± 10% (4 Vp-p and lower ripple voltage)					
supply	Current	10mA and lower (if connected to DC24V)					
Operation display		LED On with output On					
External connecti	on method	18point Terminal strip connector					
Weight		0.11kg					
		Terminal _					

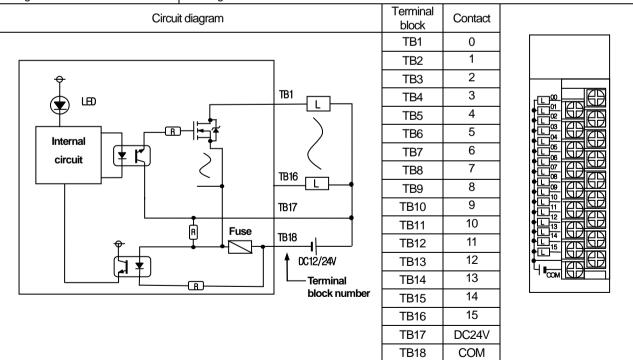

9.3.6 32 point transistor output module(sink type)


Spec. 32 point		Module type			Transi	stor outp	ut mod	lule					
Rated load voltage	Spec.												
Rated load voltage DC 12/24V	Output point		32 point										
Derating load voltage range	Insulation method		Photo coupler	insulation									
Max. load current at Off 0.1mA and lower Max. inrush current 0.7A/10 ms and lower Max. voltage drop at On DC 0.2V and lower Surge killer Zener diode Response time Off → On 1 ms and shorter Common method 32 points/10C0M Current consumption 130mA (when every point is On) External power supply Voltage DC12/24V ± 10% (4 Vp-p and lower ripple voltage) Suitable cable size 0.3 mr/ Weight 0.1 kg Circuit diagram No Contact No B31 2 A18 18 B13 7 A13 23 B14 6 A14 22 B15 5 A15 21 B14 6 A14 22 B15 5 A15 21 B17 7 A13 23 B18 2 A18 81 B15 5 A15 21 B17 7 A13 23 B18 2 A18 81 B17 A1	Rated load voltage	e	DC 12 / 24V										
Leakage current at Off	Operating load vo	tage range	DC 10.2 ~ 26.4V										
Max. inrush current 0.7A / 10 ms and lower Max. voltage drop at On DC 0.2V and lower Surge killer Zener diode Response time Off → On 1 ms and shorter (Rated load, resistance load) Common method 32 points / 1COM Current consumption 130mA (when every point is On) External power supply Voltage DC12/24V ± 10% (4 Vp-p and lower ripple voltage) Supply Current 10mA and lower (if connected to DC24V) Operation display LED On with Input On External connection method 40 Pin Connector Suitable cable size 0.3 mr/l Weight 0.1 kg Circuit diagram No Contact No Contact No Contact No Adv No Contact No Adv No	Max. load current		0.1A / 1point, 2A / 1COM										
Max. voltage drop at On	Leakage current at Off		0.1mA and lower										
Surge killer	Max. inrush currer	nt	0.7A / 10 ms and lower										
Common method 32 points / 1 COM	Max. voltage drop	at On	DC 0.2V and	ower									
Common method 32 points / 1 com	Surge killer		Zener diode										
Common method 32 points / 1 COM Current consumption 130mA (when every point is On) External power supply Voltage DC12/24V ± 10% (4 Vp-p and lower ripple voltage) Current 10mA and lower (if connected to DC24V) Operation display LED On with Input On External connection method 40 Pin Connector Suitable cable size 0.3 mir Weight 0.1 kg Circuit diagram No Contact No C	Doonongo timo	Off → On		rter									
Current consumption	Kesponse ume	$On \rightarrow Off$	1 ms and shorter (Rated load, resistance load)										
External power supply Current 10mA and lower (if connected to DC24V)	Common method		32 points / 1C	OM									
Current 10mA and lower (if connected to DC24V)	Current consumpt	Current consumption		every point is C	n)								
Department of the property o	External power	Voltage	DC12/24V \pm 10% (4 Vp-p and lower ripple voltage)										
Suitable cable size 0.3 mm²	supply	supply Current		10mA and lower (if connected to DC24V)									
Suitable cable size 0.3 mm	Operation display	Operation display LED 0		LED On with Input On									
No Contact No Contact Secondary	External connection	n method	40 Pin Connector										
Circuit diagram No Contact No Contact	Suitable cable size)	0.3 mm²										
B20	Weight		_										
B19		Circuit diag	ram		No	Contact	No	Contact					
B18 2 A18 18 B19 0 0 A19 B18 C A16 A17 A17 A18 B18 C A18 B18 B18 C A19 B18 B18 C A19 B18 B18 C C C A19 B18 B18 C C C A19 B18 B18 C C C C C C C C C						0				\sim			
B20 B38 2 A18 18 B19 0 0 0 A19 B18 B19 0 0 0 A18 B17 3 A17 19 B18 B19 O 0 0 A18 B17 A18 B18 B19 O 0 0 A18 B17 A18 B18 B19 O 0 0 A18 B17 A18 B18 B19 O 0 0 A18 B18 B19 O 0 0 A18 B19 A11 A18 B19 A11 A18 B19 A11 A18 B19 A11 A19 A11 A1									B20	00)	A20		
B16 4 A16 20 B17 O 0 A17										0 0			
B15 5 A15 21 B16 0 0 A15			B20						B18	1 1	A18		
Internal circuit	(*)								B17		A17		
Internal circuit		11—	<u>+</u> ₁						B16		A16		
B13 7 A13 23 B14 0 0 A15 A		┑╶┌─®┤ <u>╄</u>	⊒ *)					B15				
B12 8 A12 24 B11 9 A11 25 B11 9 A11 25 B11 A10 A	internai		፫										
A05	circuit	(<u>† 5</u>))							0 0			
B10 10 A10 26 B10 0 0 A10 A09 A09 A09 A08 A07 A06 A07		_ _ <	- A05	<u> </u>	B11	9	A11	25		1 1			
B01,B02 B09 11 A09 27 B08 12 A08 28 B07 13 A07 29 B06 14 A06 30 B05 15 A05 31 B04 B05 15 A05 31 B04 B05 B05 B06 B05 B06 B07 A06 B07 B08 B08 B07 B08 B08 B07 A08 B08 B07 B08 B08 B07 B08 B07 A08 B08 B07 B08 B08 B07 B08 B07 A08 B08 B08 B07 B08 B08 B07 A08 B08 B08 B07 B08 B08 B07 A08 B08 B08 B07 B08 B08 B07 A08 B08 B08 B09 B08 B08 B07 A08 B09 B08 B08 B09 A08 B00 A08 A08 B00 B00 B00 A08 B00 B00 B00 A08 B00 A08 B00 B00 B00 B00 B00 A08 B00 B00 B00 B00 B00 A08 B00 B00 B00 A08 B00		-	 	─ └┶┘── ∮	B10	10	A10	26		1 1			
B08 12 A08 28 B07 A07 A08 A07 A08 A07 A08 A07 A08 A07 A08 A07 A08 A08 A07 A08			DO 1 DO	₁₀	B09	11	A09	27			A09		
A01,A02				<u>~_</u>	B08	12	A08	28					
MO1, AU2													
DC12/24V B05 15 A05 31 B04 NC A04 NC B03 NC A03 NC B02 DC12/ A02 COM B01 A01 A02 A01 A01 A02 A01 A03 A02 A01 A03 A02 A01 A03 A04 A05 A05			A01,A0	º—↓						1 1			
Connector number B04 NC A04 NC B03 B02 B04 B05			•	DC12/24V						1 1			
number B03 NC A03 NC B02 B01 B02 A01													
B02 DC12/ A02 COM B01 0 A01			L										
				Hullibel		1			1 100		A01		
						-1							

9.3.7 64 point transistor output module (sink type)

Cutput point Cut		Module type				Trans		tput mo	dule				
Photo coupler insulation Rated load voltage DC 12 / 24V	Spec.						XGQ-	TR8A					
DC 12/24V	Output point		64 poin	ts									
Derating load voltage range	Insulation system		Photo	coupler i	nsulation								
Max. load current at Off	Rated load voltage	•	DC 12	2/24V									
Leakage current at Off	Operating load vol	tage range	DC 10).2 ~ 26.4	.V								
Max. inrush current 0.7A / 10 ms and lower Max. voltage drop at On DC 0.2V and lower Surge killer Zener diode Response time Off → On 1 ms and shorter (Rated load, resistance load) Common method 16 point/ 1/COM Current consumption 230mA (when every point is On) Common method 32 points / COM External power supply Voltage DC12/24V ± 10% (4 Vp-p and lower ripple voltage) Current 10mA and lower (if connected to DC24V) Operation display LED On with Input On (32point LED on by switching) External connection method 40 Pin Connector x 2 Suitable cable size 0.15 kg Weight O.15 kg Circuit diagram No Contact No Cont	Max. load current		0.1A/	1point, 2	A/1COM								
Max. voltage drop at On	Leakage current at	Off	0.1m/	0.1mA and lower									
Surge killer	Max. inrush curren	t	0.7A/	0.7A / 10 ms and lower									
Common method 16 point/ 1 COM 1 ms and shorter (Rated load, resistance load)	Max. voltage drop	at On	DC 0.2	2V and lo	wer								
Common method	Surge killer		Zener	diode									
Common method 16 point/ 1COM Current consumption 230mA (when every point is On) Common method 230mA (when every point is On) External power Voltage DC12/24V ± 10% (4 Vp-p and lower ripple voltage) Supply Current 10mA and lower (if connected to DC24V) Operation display External connection method 40 Pin Connector x 2 Suitable cable size 0.3 mr/ Weight Circuit diagram No Contact No Contac		Off → On	1 ms a	and short	er								
Common method 16 point/ 1COM 230mA (when every point is On)	Response time	$On \rightarrow Off$	1 ms and shorter (Rated load, resistance load)										
Current consumption 230mA (when every point is On)	Common method		16 poi	nt/ 1CON	1								
External power supply Current 10mA and lower (if connected to DC24V)	Current consumpti	on	230m	A (when	every poir	nt is On)							
External power supply Current 10mA and lower (if connected to DC24V)	Common method	32 poi	nts / CON	И									
Current 10mA and lower (if connected to DC24V)	External power	Voltage	DC12	/24V ± 10)% (4 Vp- _I	o and low	er ripple	voltage)					
Suitable cable size 0.3 mm²	•	Current	1										
Suitable cable size 0.3 mm²	Operation display		nt 10mA and lower (if connected to DC24V) LED On with Input On (32point LED on by switching) d 40 Pin Connector × 2 0.3 mm²										
No Contact No Contact No Contact No Contact Contact No No No No No No No N		nection method 40 Pin Connector × 2											
Circuit diagram No Contact No Contact No Contact No Contact	Suitable cable size		0.3 mm²										
Circuit diagram No Contact No Contact No Contact No Contact	Weight		0.15 k	g									
1B19	Circu	it diagram	No	Contact	No	Contact	No	Contact	No	Contact			
B18 2			1B20	0	1A20	16	2B20	32	2A20	48			
1817 3 1A17 19 2B17 35 2A17 51 820 0 0 A20 A49			1B19									_	
B10											Doo	00	١
1816	l lib	B20										0 0	
B14 6	🕸									-			
Internal circuit	│										B17	1	A17
B12 8 1A12 24 2B12 40 2A12 56 B14 B13 B11 B10	Internal	~ [편										1	1
B11 9	circuit 🏋 🏋) (0 0	l
Bol.		(A05 📐]											
B01,802 1B09 11 1A09 27 2B09 43 2A09 59 B11 0 0 A10													1
Switching circuit		DO1 DO2									B11	1	A11
Switching circuit		W1,602											1
1806	Switching	404 400								-		1	
Connector number 1B02 12/24 1A02 2B02 12/24 2A02 B01 A02 A01 A02 A01 A03 A03 A02 A01 A04 A04 A05 A04 A05 A04 A05 A05 A04 A05		AU1.AU2								-		1	
1804 NC 1A04 NC 2B04 NC 2A04 NC 804 NC 1B03 NC 1A03 NC 2B03 NC 2A03 NC 804 A04 A04 A03 A02 A05		1/10/19/9/N										1	
Connector number 1B03 NC 1A03 NC 2B03 NC 2A03 NC B03 A02 A01 A03 A02 A03 A02 A01 A03 A02 A03 A02 A01 A03 A02 A03 A03 A02 A03												1	
1B02 12/24 1A02 2B02 12/24 2A02 B01 0 0 0 A02 A01 A02 A02 A01 A02 A02 A01 A02													
A: displaying 0-31 A: displaying 0-31 A: displaying 0-31 A: displaying 0-31				.,,		140		.,,		140			ΔΩ2
A: displaying 0-31 VDC VDC VDC COM2		- number	1B02	12/24	1A02		2B02	12/24	2A02			100	1
	A: displaying 0~31 B: displaying 32~63	tat Off											

9.3.8 16 point transistor output module (source type)

	Module type	Transistor output module						
Spec.		XGQ-TR2B						
Output point		16 points						
Insulation method	k	Photo coupler insulation						
Rated load voltag	je	DC 12/24V						
Operating load vo	oltage range	DC 10.2 ~ 26.4V						
Max. load current		0.5A / 1point, 4A / 1COM						
Leakage current	at Off	0.1mA and lower						
Max. inrush curre	nt	4A / 10 ms and lower						
Max. voltage drop	o at On	DC 0.3V AND LOWER						
Surge killer		Zener diode						
Fuse		4Ax2(not replaceable)(Fuse cap.:50A)						
Fuse disconnection	on display	Yes(If a fuse is burnt out, it transfers a signal to CPU and LED is on)						
Despense time	$Off \rightarrow On$	1 ms and shorter						
Response time	$On \rightarrow Off$	1 ms and shorter (Rated load, resistance load)						
Common method	d	16 point/ 1COM						
Current consump	otion	70mA (when every point is On)						
External power	Voltage	DC12/24V ± 10% (4 Vp-p and lower ripple voltage)						
supply	Current	10mA and lower (if connected to DC24V)						
Operation display		LED On with output On						
External connecti	on method	18point Terminal strip connector						
Weight		0.12kg						
		Terminal						

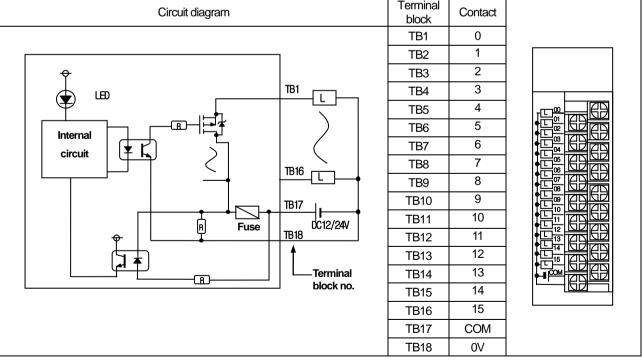

	Module type	T		r output		9						
Spec.			XC	Q-TR4	В							
Output point		32 points										
Insulation method		Photo coupler insulation										
Rated load voltage		DC 12/24V										
Operating load volta	age range	DC 10.2 ~ 26.4V										
Max. load current		0.1A / 1point, 2A / 1COM										
Leakage current at	Off	0.1mA and lower										
Max. inrush current		4A / 10 ms and lower										
Max. voltage drop at On DC 0.3V AND LOWER												
Surge killer		Zener diode										
3-	Off → On	1 ms and shorter										
Response time	$On \rightarrow Off$	1 ms and shorter (Rated load, resistance load)										
Common method		32points / 1COM		,								
Current consumption		130mA (when every point is 0)n\									
	Voltage	DC12/24V ± 10% (4 Vp-p and lower ripple voltage)										
zatoriai povoi		`			ge)							
	Current	10mA and lower (if connected	to DC2	4V)								
Operation display		LED On with Input On										
External connection	n method	40 Pin Connector										
Suitable cable size		0.3 mm²										
Weight		0.1 kg										
	Circuit diagra	m	No	Contact	No	Contact						
			B20	0	A20	16						
			B19	1	A19	17	B20	0 0				
•			B18	2	A18	18	B19 B18	0 0				
Ť		200 004	B17	3	A17	19	B17	0 0				
œ un	•	B02,B01	B16	4	A16	20	B16	0 0				
Y -		DC12/24V	B15	5	A15	21	B15					
[, , , 	-,	A02,A01 DC12/24V	B14	6	A14	22	B14	اه ۱				
Internal			B13 B12	7 8	A13 A12	23	B13 B12	0 0				
circuit	(* 	A05	B11	9	A12 A11	25	B11	10 01				
	」		B10	10	A10	26	B10	0 0				
		<i>)</i>)	B09	11	A10	27	B09					
			B08	12	A08		B08	0 0				
				13		28	B07 B06	0 0				
	'-	B20	B07		A07	29	B05	0 0				
	L		B06	14	A06	30	B04	0 0				
			B05	15 NC	A05 A04	31 NC	B03					
		Connector	B04	NC		NC NC	B02	0 0				
		number	B03	INC	A03	NC	B01					

B02

B01

COM

0V

A02


A01

9.3.10 64 point transistor output module (source type)

	Module type	Transistor output module										
Spec.		XGQ-TR8B										
Output point		64 po	ints									
Insulation method		Photo coupler insulation										
Rated load voltage		DC 12	DC 12/24V									
Operating load voltage	e range	DC 10).2 ~ 26.4	IV								
Max. load current		0.1A/	1point, 2	A/1CO	M							
Leakage current at Of	f	0.1m/	A and low	er								
Max. inrush current		4A / 1	0 ms and	lower								
Max. voltage drop at C	On	DC 0.	3V and lo	ower								
Surge killer		Zener	diode									
Response time	Off → On	1 ms	and short	er								
r tooponios umo	$On \rightarrow Off$	-			d load, re	sistance	load)					
Common method		32poir	nt / 1CON	Л								
Current consumption		230m	A (when	every po	oint is On)							
Common method		32point / COM										
External power	Voltage	DC12/24V \pm 10% (4 Vp-p and lower ripple voltage)										
supply	Current	10mA and lower (if connected to DC24V)										
Operation display		LED (On with In	put On	(32 poir	t LED O	N by swit	tching)				
External connection m	nethod	40 Pin Connector x 2										
Suitable cable size		0.3 mm										
Weight		0.15 k							1	1		
Circuit o	diagram	No	Contact		Contact	No	Contact	No	Contact			
		1B20 1B19	0	1A20 1A19	16	2B20 2B19	32 33	2A20 2A19	48 49			
		1B18	1 2	1A18	17 18	2B18	34	2A19 2A18	50			
		1B17	3	1A17	19	2B17	35	2A17	51	B20	0 0	A20
	B02,B01	1B16	4	1A16	20	2B16	36	2A16	52	B19	0 0	A19
	DC12/24V	1B15	5	1A15	21	2B15	37	2A15	53	B18	0 0	A18
$\Pi = \Pi$		1B14	6	1A14	22	2B14	38	2A14	54	B17 B16	0 0	A17 A16
Internal		1B13	7	1A13	23	2B13	39	2A13	55	B15	0 0	A15
	A02,A01	1B12	8	1A12	24	2B12	40	2A12	56	B14	0 0	A14
circuit		1B11	9	1A11	25	2B11	41	2A11	57	B13	0 0	A13
││	A05	1B10	10	1A10	26	2B10	42	2A10	58	B12	0 0	A12
		1B09	11	1A09	27	2B09	43	2A09	59	B11 B10	0 0	A11 A10
		1B08	12	1A08	28	2B08	44	2A08	60	B09	0 0	A09
	<u> </u>	1B07	13	1A07	29	2B07	45	2A07	61	B08	0 0	A08
Suitabina R		1B06	14	1A06	30	2B06	46	2A06	62	B07	0 0	A07
Switching OA	B20	1B05	15	1A05	31	2B05	47	2A05	63	B06	0 0	A06
circuit B		1B04	NC	1A04	NC	2B04	NC	2A04	NC	B05 B04	0 0	A05 A04
		1B03	NC	1A03	NC	2B03	NC	2A03	NC	B03	0 0	A03
A: displaying 0	~31 Connector	1B02		1A02		2B02		2A02	0).(B02 B01	00	A02 A01
B: displaying 3	2~63 number	1B01	COM	1A01	0V	2B01	СОМ	2A01	0V			

9.4 Digital I/O Combined Module Specifications

		XG	H-DT4A			
		Input				Output
Input point		16 points	Output point			16 points
Insulation r	method	Photo coupler insulation	Insulation m	ethod		Photo coupler insulation
Rated inpu	ıt voltage	DC 24V	Rated load v	oltage		DC 12/24V
Rated inpu	t current	Approx. 4 mA	Operating lo	ad voltage	e range	DC 10.2 ~ 26.4V
Operating	voltage range	DC20.4~28.8V (5% and lower ripple rate)	Max. load cu	ırrent		0.1A / 1point, 1.6A / 1COM
Withstand	voltage	AC560Vrms/3Cycle(altitude2000m)	Leakage cur	rent at Of	f	0.1mA and lower
On voltage	/On current	DC 19V and higher / 3mA and higher	Max. inrush	current		0.7A / 10 ms and lower
Off voltage	Off current	DC 11V and lower / 1.7mA and lower	Surge killer			Zener diode
Input resist	ance	Approx. $5.6 \mathrm{k}\Omega$	Max. voltage drop at On		On	DC 0.2V and lower
Response	Off→ On	1ms/3ms/5ms/10ms/20ms/70ms/ 100ms(set by CPU parameter) Initial value:3ms	Response	Off→ O	n	1 ms and shorter
time	$On \rightarrow Off$	1ms/3ms/5ms/10ms/20ms/70ms/ 100ms(set by CPU parameter) Initial value:3ms	time	On → C	Off	1 ms and shorter (Rated load, resistance load)
Common m	ethod	16 point/ COM	Common method			16 point/ 1COM
Operation d	isplay	LED On with input On	Operation display			LED On with output On
Current con	sumption(^{mA})	110mA (when ever point is on)				
External connection method 40 Pin Connector × 1						
Weight		0.1 kg				
	(Circuit			External	connection
Input 00		Photocoupler + +				
Γ°	- B20 R -		No	Contact	No C	ontact
>			B20	0	A20	16
1	1	T: 3				

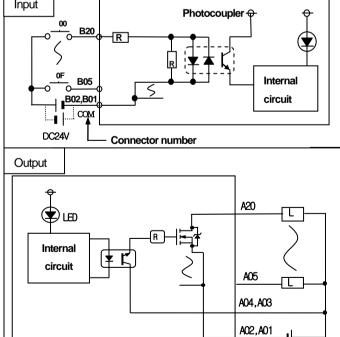

DC12/24V Connector

No	Contact	No	Contact
B20	0	A20	16
B19	1	A19	17
B18	2	A18	18
B17	3	A17	19
B16	4	A16	20
B15	5	A15	21
B14	6	A14	22
B13	7	A13	23
B12	8	A12	24
B11	9	A11	25
B10	10	A10	26
B09	11	A09	27
B08	12	80A	28
B07	13	A07	29
B06	14	A06	30
B05	15	A05	31
B04	NC	A04	DC12
B03	NC	A03	/24V
B02	COM	A02	0)./
B01	COM	A01	0V

B20 B19 B18 B17 B16 B15 B14 B13 B11 B10 B09 B08 B07 B06 B06 B06 B05 B04 B03 B02 B01	(0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	(00000000000000000000000000000000000000	A20 A19 A18 A17 A16 A15 A14 A13 A10 A09 A08 A07 A06 A05 A04 A03 A02 A01
---	---	---	--

9.5 Applications of Smart Link

9.5.1 Modules accessible to Smart Link


From digital I/O modules used for XGI series, the modules accessible to Smart Link are as follows.

Model	Specification	No. of Pins
XGI-D24A/B	DC input 32 point module	40 Pin Connector x 1
XGI-D28A/B	DC input 64 point module	40 Pin Connector x 2
XGQ-TR4A	TR output 32 point module(sink type)	40 Pin Connector x 1
XGQ-TR4B	TR output 32 point module(source type)	40 Pin Connector x 1
XGQ-TR8A	TR output 64 point module(sink type)	40 Pin Connector x 2
XGQ-TR8B	TR output 64 point module(source type)	40 Pin Connector x 2
XGH-DT4A	DC input 16 points/TR output 16 point mixed module	40 Pin Connector × 1

The company prepares smart link products for the convenience of using our products such as easy wiring of connector type I/O module. For further information, please refer to the data sheet contained in a smart link product.

Туре	Product	Specification
Terminal strip board	SLP-T40P	40 Pin Terminal strip
Relay board	SLP-RY4A	32 point relay built in
	SLP-C101-XG	1m cable Ass'y
Cable	SLP-C201-XG	2m cable Ass'y

9.5.2 Smart Link connection

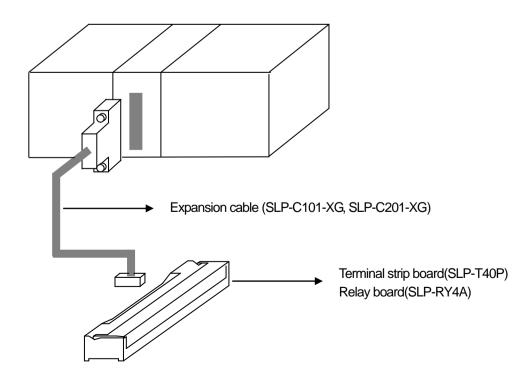

9.5.3 Smart Link Wiring Diagram

- Wiring diagram with SLP-T40P

SLP-T40P terminal block No.	I/O module connector No.		SLP-T40P terminal block No.
B1	B20	A20	A1
B2	B19	A19	A2
B3	B18	A18	A3
B4	B17	A17	A4
B5	B16	A16	A5
B6	B15	A15	A6
B7	B14	A14	A7
B8	B13	A13	A8
B9	B12	A12	A9
B10	B11	A11	A10
B11	B10	A10	A11
B12	B09	A09	A12
B13	B08	A08	A13
B14	B07	A07	A14
B15	B06	A06	A15
B16	B05	A05	A16
B17	B04	A04	A17
B18	B03	A03	A18
B19	B02	A02	A19
B20	B01	A01	A20

- Wiring diagram with SLP-RY4A, SLP-RY4B

SLP-RY4A/B terminal block No.	I/O module connector No.		SLP-RY4A/B terminal block No.
P0	B20	A20	P10
P1	B19	A19	P11
P2	B18	A18	P12
P3	B17	A17	P13
P4	B16	A16	P14
P5	B15	A15	P15
P6	B14	A14	P16
P7	B13	A13	P17
P8	B12	A12	P18
P9	B11	A11	P19
P0A	B10	A10	P1A
P0B	B09	A09	P1B
P0C	B08	A08	P1C
P0D	B07	A07	P1D
P0E	B06	A06	P1E
P0F	B05	A05	P1F
NC	B04	A04	NC
NC	B03	A03	NC
+24V	B02	A02	-24G
+24V	B01	A01	-24G

9.6 Event Input Module Specifications

9.6.1 Event Input Module (Source/Sink type)

Specific	ation			XGF-S	OEA		
Input p	oint	32 point					
Insulation	method	Photo coupler insulation					
Memory	/ size	Records 1Mbit event information (3	00 ever	nt informat	ion per)	XGF-SOE	A module)
Precis	sion	1 ms (±2ms: error between mod	ules)				
Rated inpu	t voltage	DC24V					
Rated inpu	t current	About 4mA					
Used voltaç	ge range	DC20.4 ~ 28.8V (within ripple rate s	5%)				
On voltage/0	On current	DC19V or above /3 mA or above	/e				
Off voltage/ 0	Off current	DC11V or less / 1.7 mA or less					
Input resi	stance	About 5.6 kΩ					
Response	$Off \rightarrow On$	H/W delay (10#s: Normal) + input fi	Iter time	(user sett	ing: 0~1	00ms) + C	CPU scan time delay (50 \(\mu \)S)
time	$On \rightarrow Off$	H/W delay (84 \mu \s: Normal) + input fi		·			
Working \		AC560V rms/3 Cycle (Altitude 2000			-	· · ·	
Insulation re		Insulation resistance 10 MΩ or above	e (DC50	00V)			
COMM n	nethod	32 point / COM					
Current consu	umption (A)						
Operation i	• ` ` `	LED is on when input is on					
External co							
meth	od	40 pin connector					
Size	е	27x98x90					
Weig	jht	0.2 kg					
	Circu	it configuration	No	Contact	No	Contact	
			B20	0	A20	16	
0 B20		Photo coupler PDC5V P	B19	1	A19	17	B20 0 0 A20
$\overline{}$			B18 B17	3	A18 A17	18 19	B19 O O A19
>		□ * ★ []	B16	4	A16	20	B18 0 0 A18
31 A05		internal	B15	5	A15	21	B17 O O A17 B16 O O A16
B02	ļ <u> </u>	_ circuit	B14	6	A14	22	B ₁₅ O O A ₁₅
СОМ	"		B13	7	A13	23	B14 0 0 A14
DC24V	_ Connecte	or No.	B12	8	A12	24	B13 0 0 A13 B12 0 0 A12
•			B11	9	A11	25] R11 0 0 A11
			B10	10	A10	26	B10 0 0 A10
100		DC28.8V	B09	11 12	A09	27	B09 0 0 A09
90			B08 B07	13	A08 A07	28 29	B08 O O A08
On rate 80		 \	B06	14	A07	30	B06 0 0 A06
(%) 70		 	B05	15	A05	31	B05 0 0 A05
60	+++	+++++	B04	NC	A04	NC	B04 O O A04
50	\vdash	 	B03	NC	A03	NC	B02 O O A02
40		20 20 40 50 55 °C	B02	COM	A02	COM	B01 0 A01
	0 10	20 30 40 50 55	1				i

Chapter 10 Base and Expansion Cable

10.1 Specification

10.1.1 Basic base

Power module, CPU module, Ethernet communication module can be inserted into basic base.

XGR-M02P/XGR-M06P uses 5.5A output power module.

Table 1 Specification of basic base

	1 Opodilloation of badio bado	
Name	XGR-M02P	XGR-M06P
The no. of IO module	2 modules	6 modules
Dimension (mm)	238 X 98 X 19	346 X 98 X 19
Distance of hole for panel attachment	218 X 75	326 X 75
Specification of hole for panel attachment	φ 4.5 (M4 screw used)	
Specification of screw for FG connection	(+)PHM 3 X 6 washer(∮ 5)	
Weight (kg)	0.33	0.5

10.1.2 Expansion Base

Power module, expansion driver module, IO module, special module, communication module can be inserted into expansion base.

Table 2 Specification of expansion base

Name Item	XGR-E12P	XGR-E12H
The no. of IO module	12 modules	12 modules
Dimension (mm)	481 X 98 X 19	508 X 98 X 19
Distance of hole for panel attachment	461 X 75	488 X 75
Specification of hole for panel attachment	φ 4.5 (M4 screw used)	φ 4.5 (M4 screw used)
Specification of screw for FG connection	(+)PHM 3 X 6 washer (φ 5)	(+)PHM 3 X 6 washer(φ 5)
Weight (kg) (kg)	0.7	0.71

Chapter 10. Base and Expansion Cable

10.1.3 Sync. Cable

This cable is used for the data synchronization between CPU modules.

Table 3 Specification of Sync. cable

Name	V00 F004	, VOO F504			
Item	XGC-F201	XGC-F501			
Length (m)	2.0	5.0			
Weight (g)	21g	47g			
Connector	LC	LC type			
Optical fiber	00 5/405 - 2/00 5 - 2 5 2 5 2 5				
diameter	62.5/125um(62.5um fiber optio	62.5/125um(62.5um fiber optic core and 125um outer cladding)			
Wave length	13	1300nm			
Attenuation	1.3Db/10	1.3Db/1000m or less			
The quality of the	Multi-Mada Filhar (may 21/m)				
material	iviuiti iviode Fiber (max. 2 km) – s	eparate order for other specifications			

10.1.4 Expansion Cable

This is the cable for connecting the basic and expansion bases. These are Ethernet cables. Electrical and optical cables are provided for use in accordance with the network type.

Especially, since the electrical cables transmit control data by tens of micro, external noise may affect system performance and control seriously.

Therefore, when using electrical cables in the XGR system, the FTP cable is the standard. If the system is subject to serious noise environment, use shielded twisted pair cable, such as STP/FSTP.




- 1) The length of the optical cables should not exceed 2Km.
- 2) The length of the electrical cables should not exceed 100m.

10.1.5 Connector for expansion cable (electrical)


The electrical expansion cables should be shielded twisted pair cables, such as FTP, STP, and SFTP, in order to meet the EMC specification and reduce external noise. To use such shield cables, the plugs and fix housing should be as follows.

(1) Connector Plug

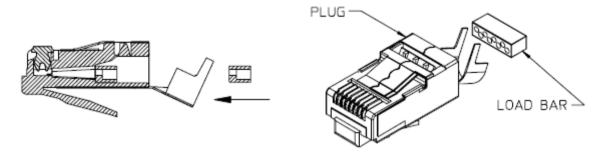

Type: RJ45 PLUG /INDUSTRIAL CAT6(44915-0021)

(2) Plug Housing

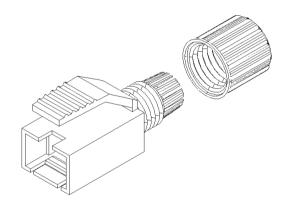


Type (for FTP): RJ45 PLUG protection cover (WRJ45-0702)

Type (for STP/SFTP): RJ45 PLUG protection cover (WRJ45-0701)

10.2 Parts and Names

10.2.1 Basic Base

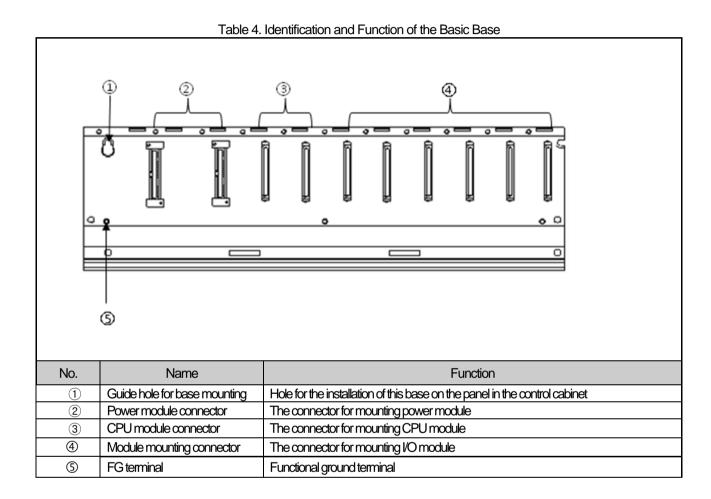

10.2.2 Expansion Base

Table 5. Identification and Function of the Expansion Base No. Name Function 1 Guide hole for base mounting Hole for the installation of this base on the panel in the control cabinet 2 Power module connector The connector for mounting power module (3) Expansion module connector The connector for mounting expansion module 4 Module mounting connector The connector for mounting I/O module (5) FG terminal Functional ground terminal

Chapter 11. Installation and Wiring

11.1 Installation


11.1.1 Installation environment

The system keeps a high reliability, irrespective of the installation environment. However, to guarantee the reliability and stability, make sure to keep the following cautions.

- (1) Environmental conditions
 - (a) Install in a control panel resisting to moisture and vibration.
 - (b) Free of any continuous impact or vibration.
 - (c) Not exposed to direct sunrays.
 - (d) No condensation from sudden temperature fluctuation.
 - (e) Ambient temperature range between 0 ~ 55°C.
 - (f) Relative humidity between 5 ~ 95%.
 - (g) Free of any corrosive gas or flammable gas.
- (2) Installation construction
 - (a) When boring a screw hole or executing wiring construction, any wiring impurities should not be inserted to the PLC.
 - (b) The system should be installed in a place easily accessible.
 - (c) Do not install the system on a same panel of a high voltage device.
 - (d) It should be 50mm and more away from wiring duct or proximate modules.
 - (e) Grounding on a position where noise is lower than the specified level.
- (3) Heat protective design of control panel
 - (a) If installing the PLC in an air-tight control panel, it needs heat-protective(control) design considering the heat from the PLC as well as other devices. If ventilating by vent or fan, inflow of dust or gas may affect the performance of the PLC system.
 - (b) Install a filter or use a closed heat exchanger.

The following shows the calculation of PLC system's power consumption requiring heat protective design.

(4) Power Consumption block diagram of the PLC system

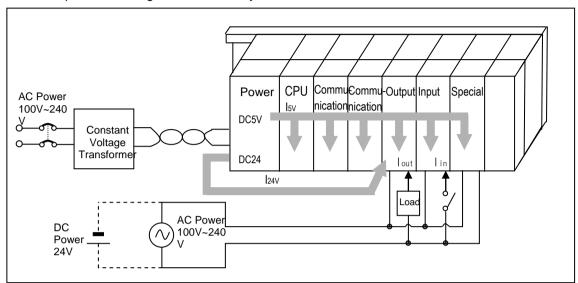

- (5) Power consumption of each part
 - (a) Power consumption of power module

The power conversion efficiency of power module is about 70% and the other 30% is gone with heat; 3/7 of the output power is the pure power consumption. Therefore, the calculation is as follows.

• $W_{pw} = 3/7 \{(15 \lor X 5) + (124 \lor X 24)\} (W)$

lsv: power consumption of each module DC5V circuit(internal current consumption)

l₂₄v: the average current consumption of DC24V used for output module

(current consumption of simultaneous On point)

If DC24V is externally supplied or a power module without DC24V is used, it is not applicable.

(b) Sum of DC5V circuit current consumption

The DC5V output circuit power of the power module is the sum of power consumption used by each module.

- $W_{5V} = I_{5V} X 5 (W)$
- (c) DC24V average power consumption(power consumption of simultaneous On point)

The DC24V output circuit's average power of the power module is the sum of power consumption used by each module.

- W₂₄V = I₂₄V X 24 (W)
- (d) Average power consumption by output voltage drop of the output module (power consumption of simultaneous On point)
 - Wout = lout X Vdrop X output point X simultaneous On rate (W)

☐ lout: output current(actually used current) (A)

Vdrop: voltage drop of each output module (V)

- (e) Input average power consumption of input module(power consumption of simultaneous On point)
 - Win = lin X E X input point X simultaneous On rate (W)

__lin: input current (root mean square value in case of AC) (A)

LE: input voltage (actually used voltage) (V)

- (f) Power consumption of special module power assembly
 - Ws = I₅V X 5 + I₂4V X 24 + I₁00V X 100 (W)

The sum of power consumption calculated by each block is the power consumption of the entire PLC system.

Chapter 11. Installation and Wiring

• $W = W_{PW} + W_{5V} + W_{24V} + W_{out} + W_{in} + W_{s} (W)$

Calculate the heats according to the entire power consumption(W) and review the temperature increase within the control panel.

The calculation of temperature rise within the control panel is displayed as follows.

 $T = W / UA [^{\circ}C]$

W: power consumption of the entire PLC system (the above calculated value)

A: surface area of control panel [m²]

U: if equalizing the temperature of the control panel by using a fan and others - - - 6

If the air inside the panel is not ventilated - - - - - - 4

Note

(1) If the control cabinet is not well ventilated, temperature gradient in the cabinet may be large. Care must be taken that the parts right above heat generating devices may become very hot.

(2) Coefficient U, which can be different according to quantity of material, is general example

Calculation example)

Redundant basic base: 4 communication modules equipped

Expansion base 1: optical expansion drive, 6 Input modules, 6 output modules

Expansion base 2:optical expansion drive, 6 analog input modules, 6 analog output modules.

Structure figure, calculation according to above steps

11.1.2 Cautions for handling

It describes the cautions for handling from unpacking to installation.

- Please do not drop it or apply excessive force on it.
- Please do not separate PCB from the case. It may cause a trouble.
- During wiring, a special attention should be paid so that impurities such as wiring remainder should not be inserted into the top of a module. If impurities are found, immediately remove them.
- (1) Cautions for handling I/O module

It describes the cautions for installing or handling I/O module.

(a) Recheck the I/O module specifications.

The input module may be affected by input voltage while the output module may be subject to breakage, destruction or a fire if the voltage over the max. switching capacity is allowed.

(b) Available cable type

Cable should be selected in consideration of ambient temperature and allowable current; the min. size of cable should be AWG22(0.3mm²) and higher.

(c) Environment

If I/O module wiring is close to heating sources or materials or the wiring is directly contacted with oils for a long time during wiring, it may cause short-circuit, destruction or malfunction.


(d) Polarities

Please make sure to check the polarities of modules of which terminal block is polarized before allowing the power.

- (e) Wiring
 - When I/O wiring is executed with high voltage or power cable, it may cause inductive fault, probably leading to malfunction or trouble.
 - No cable should not be arranged front of I/O operation display(LED)

(I/O display may be hidden, hindering the interpretation)

• If an output module is connected to inductive load, please make sure to connect a surge killer or diode to load in parallel. Please connect the cathode side of a diode to (+) of the power.

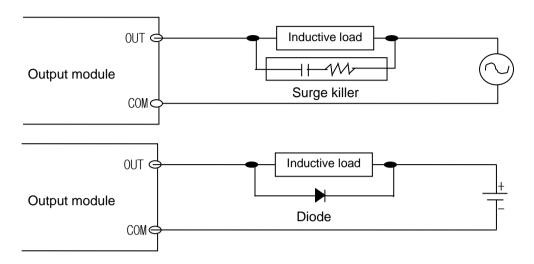

(f) Terminal strip


Please check the tightness of terminal strip and prevent any wiring impurities(remainder) from being inserted into the PLC when processing terminal strip wiring or screw hole making. It may cause malfunction or trouble.


(g) Besides the above, it is prohibited to apply excessive impact on I/O module or separating PCB board from the case.

(2) Cautions for installing the base

It describes the cautions when installing the PLC on the control panel and others.

(a) A proper distance between the top of a module and structure/parts should be secured to facilitate ventilation and module replacement.

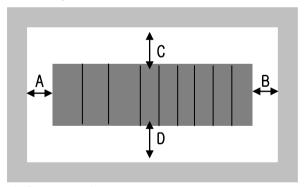

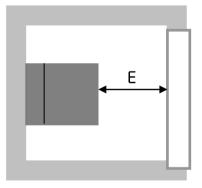

A, B: more than 5 cm

C, D: more than 5 cm for easy attachment/detachment


(more than 3cm with wiring duct. In case of duct height is more than 5cm, keep the distance more than 5cm.) In case using optical communication or maximum load of power module, keep the distance more than 15cm for ventilation.

E: more than 10 cm


- In case of using optical cable, IO module of connector type, more than 8 cm distance necessary
- In case of Ethernet FTP cable, more than 10cm distance necessary
- (b) Please do not install it vertically or horizontally for the ventilation purpose.


Chapter 11. Installation and Wiring

- (c) Please use a different panel or secure a proper distance if there is vibration source from a large electronic contact or no-fuse breaker
- (d) If necessary, please install a wiring duct. However, please keep the following cautions.
 - If installing on the top of PLC, maintain the height of a wiring duct 50mm more than for better ventilation. In addition, maintain the distance from the top of PLC so that the hook on the top of the base can be pressed.
 - If installing on the bottom of it, let optical or coaxial cable be connected and consider the minimum radius of the cable
- (e) Please install the PLC along the well-ventilated direction as presented below for the heat prevention purpose.

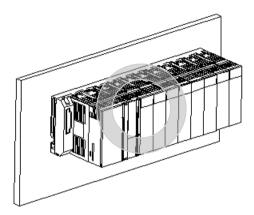


(f) Please do not install it to the direction as presented below.

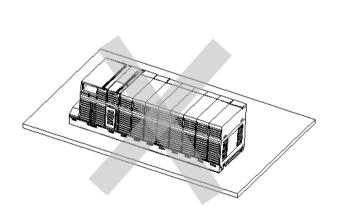

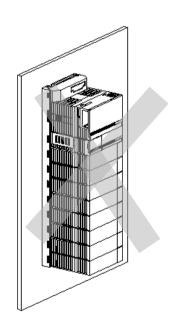


(g) To avoid any influence of radiating noise or heat, please install the PLC and other devices(relay, electronic contact) with a spacing secured as presented below.

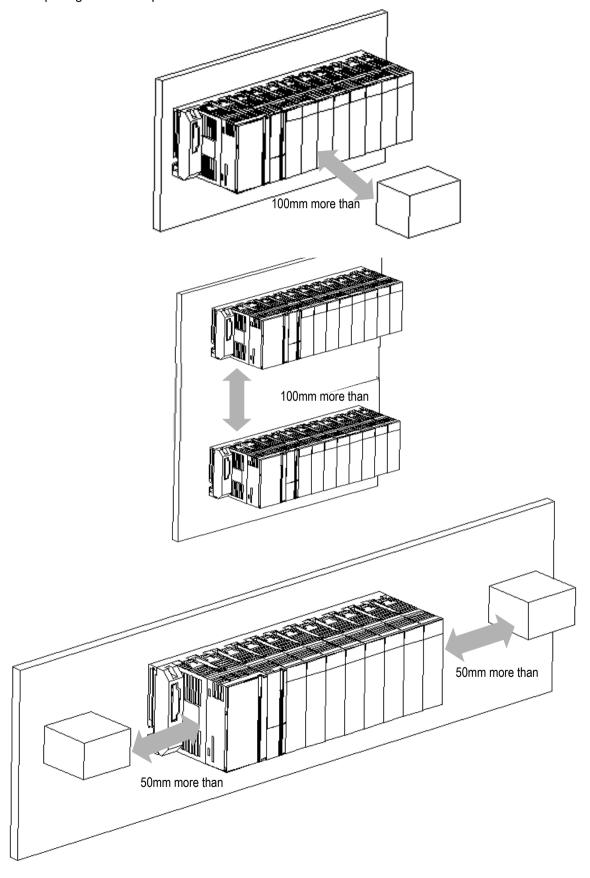

Chapter 11. Installation and Wiring

(h) In a layered-installation of PLCs, the temperature of the base at the top may become very high due to the heat transferred from the lower layers. If the temperature in the control cabinet is high, install a ventilating fan, or provide sufficient distances between the bases.

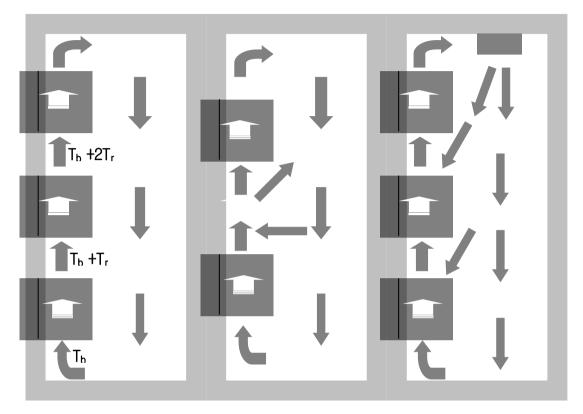

[Closed installation]

[Installation with distance]

[Ventilating fan]



Caution

(1) In case of closed installation, the temperature $(T_b + T_r)$ around the modules right above the optical communication module and power module which generate large heat may be higher than that at other positions by 15℃.

(The temperature of the air near the modules should not exceed 55 °C.)


- Optical communication module: XGR-CPU(optical) module, expansion drive (optical) module, inter-PLC communication (optical) module
- (2) In order to dissipate the heat radiated from PLCs, heat conductivity between the enclosure wall and bases or base chassis should be considered in the design and installation.

11.1.3 Attachment/Detachment of modules

It describes how to attach or detach a module on the base.

(1) Attachment

- Please insert the fixation projection on the bottom of a module to the hole of module installation of the base.
- Please fix it on the base by pushing the top of a module and tight it by using the module fixation screw.
- Please try to pull the top of a module to check whether it is tightly fixed on it.

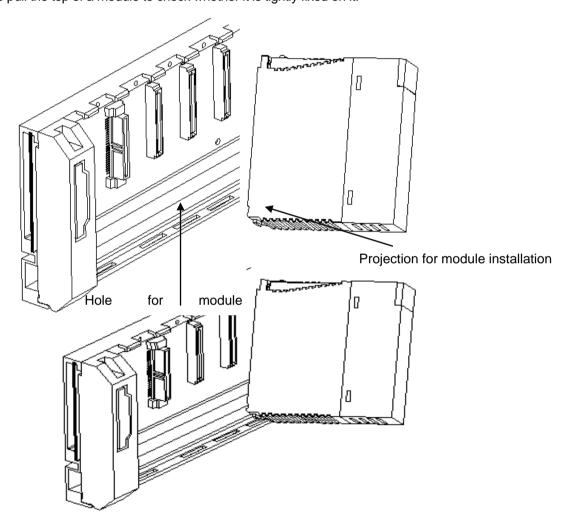




(1) A module should be installed by inserting the projection for module installation to the hole for module installation. If applying an excessive force, a module may be broken.

Chapter 11. Installation and Wiring

(2) Detachment

- Please unscrew the fixation screw on the top of a module.
- Please press the hook for module installation with a module held by both hands.
- Please pull the bottom of a module toward the top while pressing the hook.
- Lifting up the module, please detach the projection for module installation from the hole for module installation.

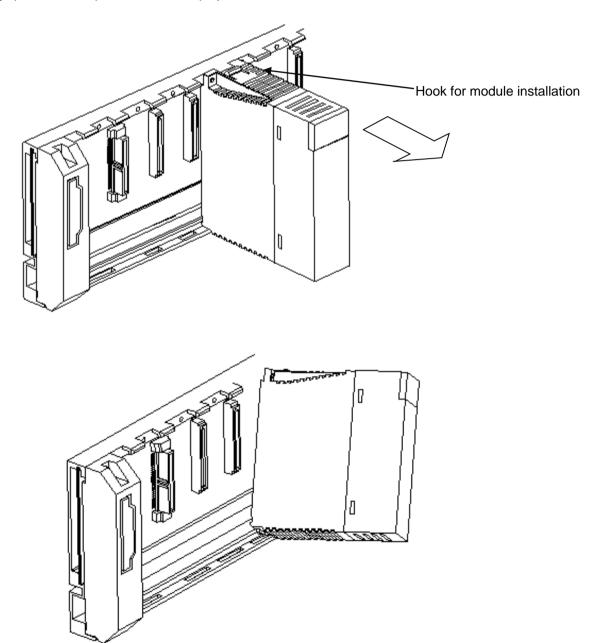



Caution


(1) When detaching a module, please press the hook to detach it from the base and then, isolate the projection for module installation from the hole for module installation. At the moment, if trying to detach it forcibly, the hook or projection may be damaged.

11.2 Wiring


It describes the important information about wiring when using the system.

11.2.1 Power wiring


(1) Connect a constant voltage transformer when the power variance is larger than the specified range.

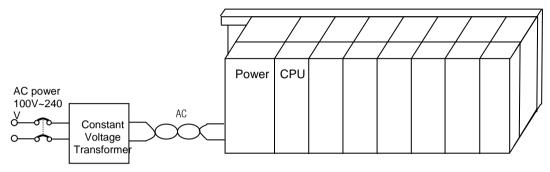

- (2) Connect the power source of which inter-cable or cable-ground noise is small. (If a large one is connected, make sure to connect to an insulation transformer)
- (3) Isolate the PLC power, I/O devices and power devices as follows.

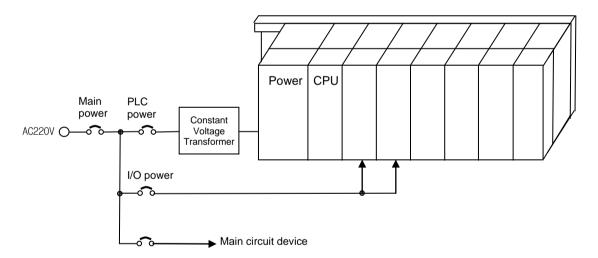

- (4) If using DC24V of the power module
 - Do not connect DC24V of several power modules in parallel. It may cause the destruction of a module.
 - If a power module can not meet the DC24V output capacity, supply DC24V externally as presented below.

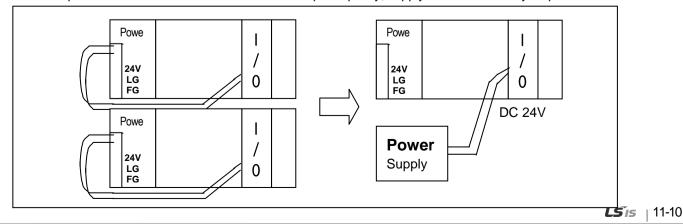


Chapter 11. Installation and Wiring

- (5) AC110V/AC220V/DC24V cables should be compactly twisted and connected in the shortest distance.
- (6) AC110V/AC220V cable should be as thick as possible(2mm²) to reduce voltage drop.

AC110V/ DC24V cables should not be installed close to main circuit cable(high voltage/high current) and I/O signal cable. They should be 100mm away from such cables.

(7) To prevent surge from lightning, use the lightning surge absorber as presented below.

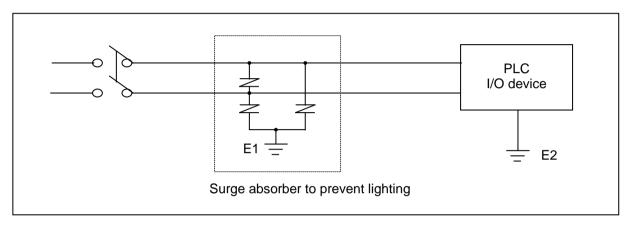




Caution

- (1) Isolate the grounding(E1) of lightning surge absorber from the grounding(E2) of the PLC.
- (2) Select a lightning surge absorber type so that the max. voltage may not the specified allowable voltage of the absorber.
- (8) When noise may be intruded inside it, use an insulated shielding transformer or noise filter.
- (9) Wiring of each input power should be twisted as short as possible and the wiring of shielding transformer or noise filter should not be arranged via a duct.

11.2.2 I/O Device wiring


- (1) The size of I/O device cable is limited to 0.3~2 mm² but it is recommended to select a size(0.3 mm²) to use conveniently.
- (2) Please isolate input signal line from output signal line.
- (3) I/O signal lines should be wired 100mm and more away from high voltage/high current main circuit cable.
- (4) Batch shield cable should be used and the PLC side should be grounded unless the main circuit cable and power cable can not be isolated.

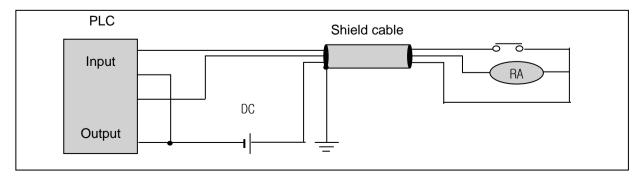


- (5) When applying pipe-wiring, make sure to firmly ground the piping.
- (6) The output line of DC24V should be isolated from AC110V cable or AC220V cable.
- (7) For a long distance wiring over 200m, please refer to 12.4 Cases in Chapter 12 because it is expected that accident may occur due to leakage current due to inter-cable capacity.

11.2.3 Grounding wiring

- (1) The PLC contains a proper noise measure, so it can be used without any separate grounding if there is a large noise. However, if grounding is required, please refer to the followings.
- (2) For grounding, please make sure to use the exclusive grounding. For grounding construction, apply type 3 grounding (grounding resistance lower than 100 Ω)
- (3) If the exclusive grounding is not possible, use the common grounding as presented in B) of the figure below.

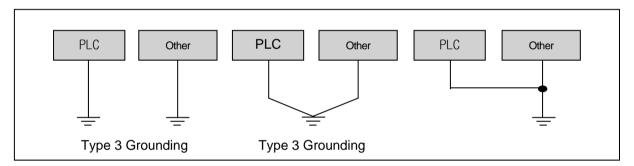

- A) Exclusive grounding: best
- B) common grounding: good
- C) common grounding: defective
- (4) Use the grounding cable more than 2 mm². To shorten the length of the grounding cable, place the grounding point as close to the PLC as possible.
- (5) Separately ground the LG of the power module and the FG of the base board.

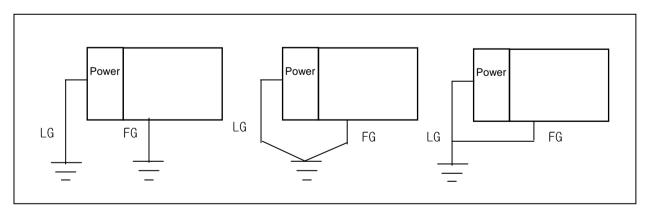

- A) Exclusive grounding: best
- B) common grounding: good C) common grounding: defective
- (6) If any malfunction from grounding is detected, separate the FG of the base from the grounding.

11.2.4 Specifications of wiring cable

The specifications of cable used for wiring are as follows.

Types of external	Cable specification (mm²)		
connection	Lower limit	Upper limit	
Digital input	0.18 (AWG24)	1.5 (AWG16)	
Digital output	0.18 (AWG24)	2.0 (AWG14)	
Analogue I/O	0.18 (AWG24)	1.5 (AWG16)	
Communication	0.18 (AWG24)	1.5 (AWG16)	
Main power	1.5 (AWG16)	2.5 (AWG12)	
Protective grounding	1.5 (AWG16)	2.5 (AWG12)	

Chapter 12 Maintenance

To maintain PLC in the best condition, please execute the following routine and periodic inspections.

12.1 Repairs and Maintenance

The I/O module mainly consists of semiconductor elements, so its life is almost semi permanent. However, such elements may be affected by the environment, so they should be periodically inspected and maintained. Please refer to the following checklist for the items to be checked once or twice every 6 months.

Checklist		Judgment basis	Actions
Power supply		Within the power variance range (less than –15% / +10%)	Adjust the power within the allowable voltage variance range.
I/O power		I/O specifications of each module	Adjust the power within the allowable voltage variance range.
	Temperature	0~+55℃	Adjust the temperature and by width conditions properly
Environment	Humidity	5~95%RH	Adjust the temperature and humidity conditions properly.
	Vibration	None	Use vibration-preventive rubber or other measures.
Shakes of module	es	Should not have shake	Every module should be protected from shaking.
Loose terminal so	rew	No looseness	Tighten any loose screw.
Spare parts		Check whether the amount and conditions of spare parts are proper	Replenish insufficient parts and improve the storage condition.

12.2 Routine Inspection

The following items should be routinely inspected.

Checklist		Check point	Judgment basis	Actions
Attachment o	f the base	Check any loose screw	Screws should be firmly tightened.	Tightening
Attachment of I/O module		Check the screws are firmly tightened Check any separation of module cover	Should be firmly tightened.	Check screw
Attachment of terminal strip and expansion cable		Loosen screw	No looseness	Tightening
		Proximity with clamped terminal	Proper spacing	Calibration
		Connector of expansion cable	Connector should be tightened	Calibration
Power LED RUN LED STOP LED Input LED Output LED	Check whether it is LED ON	LED On (off is error)		
	RUN LED	Check whether it is LED ON in RUN state	LED On (off or blinking is error)	
	STOPLED	Check whether it is LED Off in RUN state	Blinking is error	Please refer to
	Input LED	Check whether LED On or Off	LED On with input ON and	chapter 14.2
	IIIpat LLD		LED Off with input off]
	Output LED Check whether LED On or Off	Check whether LED On or Off	LED On with output ON and	
		LED Off with output off		

Chapter 12. Maintenance

12.3 Periodic Inspection

Please take a measure by checking the following items once or twice every 6 months.

C	Checklist	Check method	Judgment basis	Actions
Environment	Temperature	Measure by	0~55℃	Adjusting according to the general spec.(the environment in panel)
	Humidity	thermometer/hygrometer Measure corrosive gas	5~95%RH	
	Contamination level		Free of corrosive gas	
DI C atatua	Looseness/shake	Try to move each module	Should be firmly attached	Tightening
PLC status	Built-in dust/impurities	Visual inspection	No built-in dust/impurities	-
	Looseness	Tightening with a screwdriver	No loosened screws	Tightening
Connection status	Proximate of clamped terminal	Visual inspection	Proper spacing	Calibration
	Loosened connector	Visual inspection	No looseness	Tightening connector screws
Check power v	oltage	Check the voltage of input terminal by using a tester	AC100~240V:AC85~ 264V DC24V:DC19.2 ~ 28.8V	Change the power supplied
Battery		Check the battery replacement timing and voltage drop	Check the total interruption time and warranty period No battery voltage drop display	A battery should be replaced if it passes the warranty period despite of no display
Fuse		Visual inspection	• No fusing	Regularly replace it because element may be deteriorated by inrush current.

Chapter. 13 EMC Compliance

13.1 Requirements Complying with EMC Specifications

EMC Directions describe "Do not emit strong electromagnetic wave to the outside: Emission" and "Do not have an influence of electromagnetic wave from the outside: Immunity", and the applicable products are requested to meet the directions. The chapter summarizes how to structure a system using XGT PLC to comply with the EMC directions. The description is the data summarized for the requirements and specifications of EMC regulation acquired by the company but it does not mean that every system manufactured according to the description meets the following specifications. The method and determination to comply with the EMC directions should be finally determined by the system manufacturer self.

13.1.1 EMC specifications

The EMC specifications affecting the PLC are as follows.

Table 13-1

Specification	Test items	Test details	Standard value
EN50081-2	EN55011 Radiated noise * 2	Measure the wave emitted from a product.	30~230 MHz QP: 50 dB \(\mu \rangle /m \ * 1 \) 230~1000 MHz QP: 57 dB \(\mu \rangle /m \rangle \)
	EN55011 conducted noise	Measure the noise that a product emits to the power line.	150~500 kHz QP: 79 dB Mean : 66 dB 500~230 MHz QP: 73 dB Mean : 60 dB
EN61131-2	EN61000-4- Electrostatic immunity	Immunity test allowing static electricity to the case of a device.	15 kV Air discharge 8 kV Contact discharge
	EN61000-4-4 Fast transient burst noise	Immunity test allowing a fast noise to power cable and signal cable.	Power line : 2 kV Digital I/O : 1 kV Analogue I/O, signal lines : 1 kV
	EN61000-4-3 Radiated field AM modulation	Immunity test injecting electric field to a product.	10Vm, 26~1000 吨 80% AM modulation@ 1 吨
	EN61000-4-12 Damped oscillatory wave immunity	Immunity test allowing attenuation vibration wave to power cable.	Power line : 1 kV Digital I/O(24V and higher) : 1 kV

^{* 1 :} QP: Quasi Peak, Mean : average value

^{* 2 :} PLC is a type of open device(installed on another device) and to be installed in a panel. For any applicable tests, the system is tested with the system installed in a panel.

13.1.2 Panel


The PLC is a kind of open device(installed on another device) and it should be installed in a panel. It is because the installation may prevent a person from suffering from an accident due to electric shock as the person contacts with the product(XGT PLC) and the panel can attenuates the noise generating from the PLC.

In case of XGT PLC, to restrict EMI emitted from a product, it should be installed in a metallic panel. The specifications of the metallic panel are as follows.

(1) Panel

The panel for PLC should be installed and manufactured as follows.

- (a) The panel should be made of SPCC(Cold Rolled Mild Steel)
- (b) The plate should be 1.6mm and thicker
- (c) The power supplied to the panel should be protected against surge by using insulated transformer.
- (d) The panel should be structured so that electric wave is not leaked outside. For instance, make the door as a box as presented below. The main frame should be also designed to be covered the door in order to restrict any radiating noise generated from the PLC.

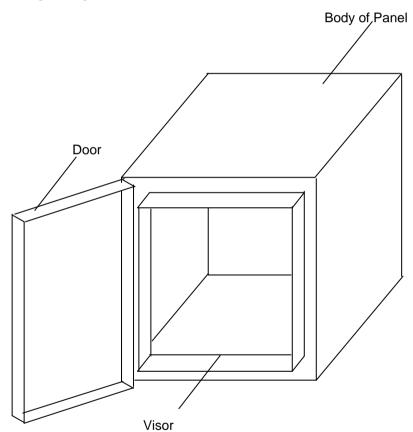

(e) The inside plate of panel should have proper conductivity with a wide surface as possible by eliminating the plating of the bolt used to be mounted on the main frame in order to secure the electric contact with the frame.

(2) Power cable and grounding cable

The grounding/power cable of PLC should be treated as follows.

- (a) The panel should be grounded with a thick wire() to secure a lower impedance even in high frequency.
- (b) LG(Line Ground) terminal and FG(Frame Ground) terminal functionally let the noise inside the PLC flow into the ground, so a wire of which impedance is low should be used.
- (c) Since the grounding cable itself may generate noise, thick and short wiring may prevent it serving as an antenna.

13.1.3 Cable

- (1) Expansion cables can be classified into optical and electrical cables according to the connector type.
 - (a) For the optical cables, use MMF(Multi Mode Fiber) 50/65um LC Type Cable. Use indoor type, outdoor type, or conduit type according to the installation site.



Fig. MMF(LC Type) cable

(b) For the electrical cables, communication can be done with 100Mbit Twisted Pair cables, however, since the data transmission in expansion cables is in tens of micro unit, external noise may affect system performance and control seriously.

Therefore, electrical cables used in XGR systems should, basically, be shielded twisted pair cables such as FTP, STP, or FSTP.

FTP Cable



Fig. FTP Cable

STP Cable



Fig. STP Cable

(2) Fixing a cable in the panel

If the expansion cable of XGT series is to be installed on the metallic panel, the cable should be 1cm and more away from the panel, preventing the direct contact.

The metallic plate of panel may shield noise from electromagnetic wave while it a cable as a noise source is close to the place, it can serve as an antenna. Every fast signal cable as well as the expansion cable needs proper spacing from the panel

13.2 Requirements Complying with Low Voltage Direction

The low voltage direction requires a device that operates with AC50~1000V, DC 75 ~ 1500V to have proper safety. The followings summarize the cautions for installing and wiring PLC of the XGT series to comply with the low voltage directions. The description is the data based on the applicable requirements and specifications as far as we know but it does not mean that every system manufactured according to the description meets the following specifications. The method and determination to comply with the EMC directions should be finally determined by the system manufacturer self.

13.2.1 Specifications applicable to XGT series

XGT series follow the EN6100-1(safety of the device used in measurement/control lab).

XGT series is developed in accordance with the above specifications, even for a module operating at the rated voltage higher than AC50V/DC75V.

13.2.2 Selection of XGT series PLC

(1) Power module

The power module of which rated input voltage is AC110/220V may have dangerous voltage(higher than 42.4V peak) inside it, so any CE mark compliance product is insulated between the primary and the secondary.

(2) I/O module

The I/O module of which rated voltage is AC110/220V may have dangerous voltage(higher than 42.4V peak) inside it, so any CE mark compliance product is insulated between the primary and the secondary. The I/O module lower than DC24V is not applicable to the low voltage directions.

(3) CPU Module, Base unit

The modules use DC5V, 3.3V circuits, so they are not applicable to the low voltage directions.

(4) Special module. Communication module

The modules use the rated voltage less than DC 24V, so they are not applicable to the low voltage directions.

Chapter 14 Troubleshooting

The chapter describes types of potential errors that occur while operating the system, causes of errors, how to detect them and corrective measures.

14.1 Basic Troubleshooting Procedure

To improve the reliability of a system, it is important to take a corrective measure promptly if a trouble occurs as well as to use highly reliable devices. To operate a system immediately, it is the most important to quickly detect potential causes of a trouble and take corrective measures. To troubleshoot the system correctly, make sure to take the following cautions and procedures.

(1) Check by visual inspection

Please check the followings visually.

- Operation status(Stop, Run)
- Power On/Off status
- I/O device status
- Wiring status(I/O wiring, expansion and communication cable)
- Check the status of each display(POWER LED, RUN/STOP LED, I/O LED and etc), connect to peripherals and check the operation condition and program

(2) Check any abnormality

Please observe how a fault changes by executing the followings.

• Move the key switch to STOP and turn it On/Off

(3) Restricting Range

Estimate by which factor a fault occurs by the following methods.

- Is it from the PLC or external factor?
- I/O module or others?
- PLC program?


14.2 Troubleshooting

The above stated detection methods, description for error codes and measures are explained by phenomenon.

Trouble	
If Power LED is Off	Measures taken when Power LED is Off
If WAR. LED is On	Measures taken when WAR/ LED is On
If Err. LED is On	Measures taken when Error LED is On
If Run/Stop LED is Off	Measures taken when Run/Stop LED is Off
If I/O module does not work properly	Measures taken when I/O module does not work properly
If writing a program is not possible	Measures taken when writing program is not possible
If Sync. cable is not properly installed	Measures taken when Sync. cable is not properly installed
If master switching occurs	Measures taken when master switching occurs
If redundant operation does not work when adding CPU	Measures taken when redundant operation does not work when adding CPU
If master switching fails	Measures taken when master switching fails


14.2.1 Action when POWER LED is off

The paragraph describes the orders of taking a measure if POWER LED is Off when turning it on or during operation.

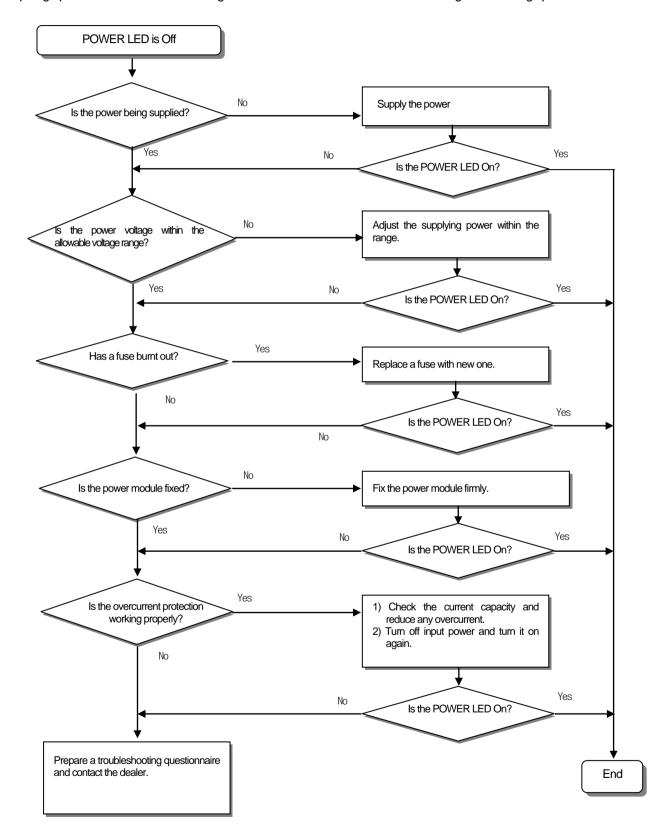

14.2.2 Action when WAR. (Warning) LED is on.

The paragraph describes the orders of taking a measure if WAR.. LED is On when turning it on, starting operation or operating.

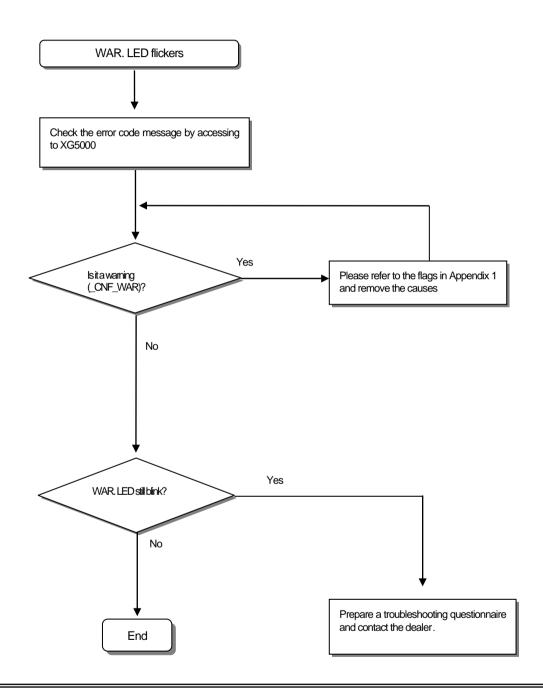




If warning error occurs, the PLC system does not stop but it is necessary to check the error message and take a corrective measure. Or it may cause an error.


It describes measure when WAR LED is on because redundant system runs in single or configured b Line mode. Connecti XG5000 and execitue [Monitor]-[System Monitor] and select [PLC]-[System Configuration] to check.



[Figure 14.2.1] System configuration menu

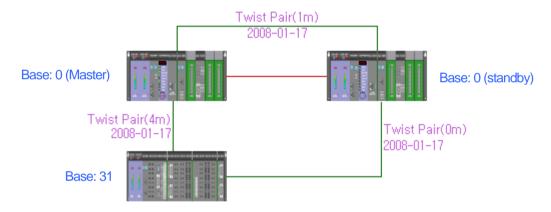


[Figure 14.2.2] system configuration (in case of Ring configuration)

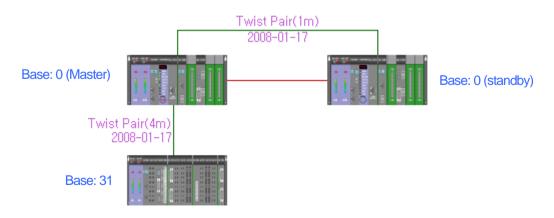


[Figure 14.2.3] System configuration (in case of line configuration)

In case system is configured as ring, basic base and expansion base is displayed by ring like [Figure 14.2.2]. In case system is configured as line, disconnection between bases is displayed like [Figure 14.2.3]. This can be checked by LED. In case system starts with line topology, RING LED turns off. In case it starts with ring topology and it changes the topology to line, RING LED flickers

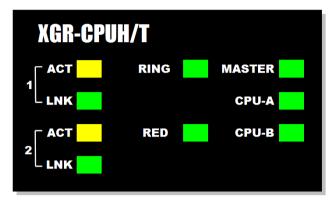

[Figure 14.2.4] CPU module LED

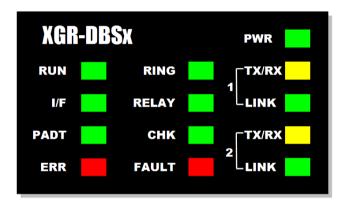


[Figure 14.2.5] Expansion drive LED



Caution


Since optical cable consists of two couples unlike electrical cable, TX and RX can be changed in case of installation. Make sure that direction of TX and RX does not change. (TX should be connected with RX, and RX with TX.)

The paragraph describes the orders of taking a measure if RING LED is off or flickers when turning it on, starting operation or operating.

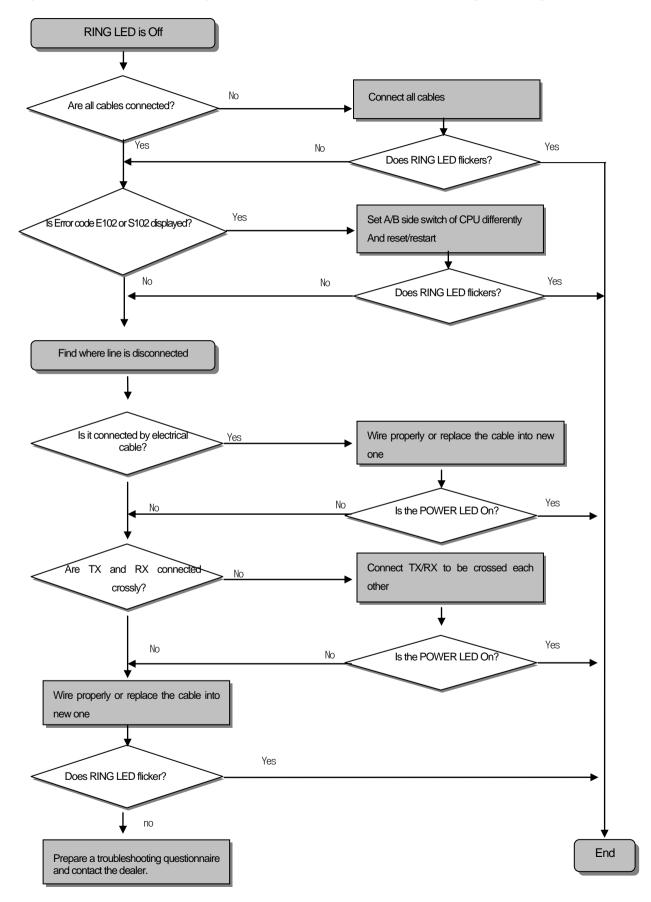

14.2.3 Action when ERR. LED is on

The paragraph describes the orders of taking a measure if ERR. LED flickers when turning PLC on or starting operation

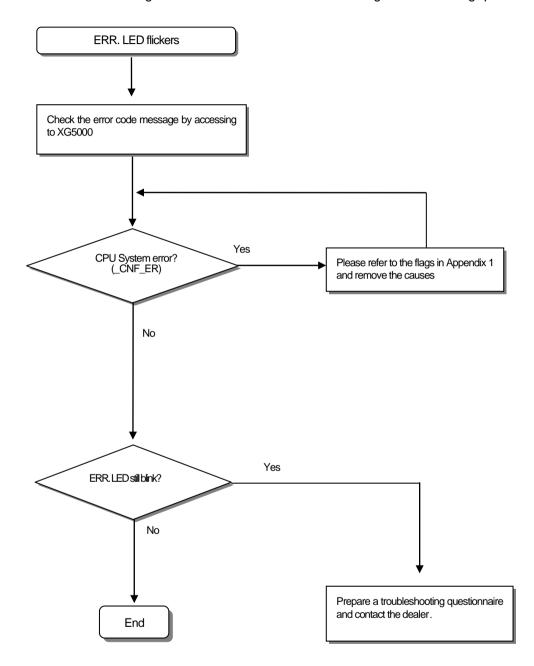




If warning error occurs, the PLC system does not stop but it is necessary to check the error message and take a corrective measure. Or it may cause an error.


14.2.4 Action when RUN/STOP LED is off


The paragraph describes the orders of taking a measure if RUN/STOP LED is Off when turning it on, starting operation or operating.

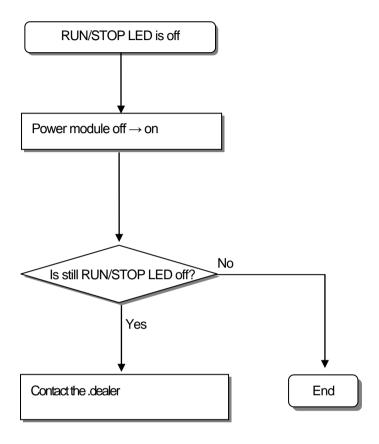


14.2.5 Acton when I/O module does not work properly

For the orders of taking measures when I/O module does not properly work during operation, the paragraph explains it with the following illustration.

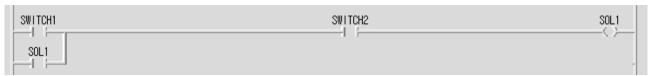


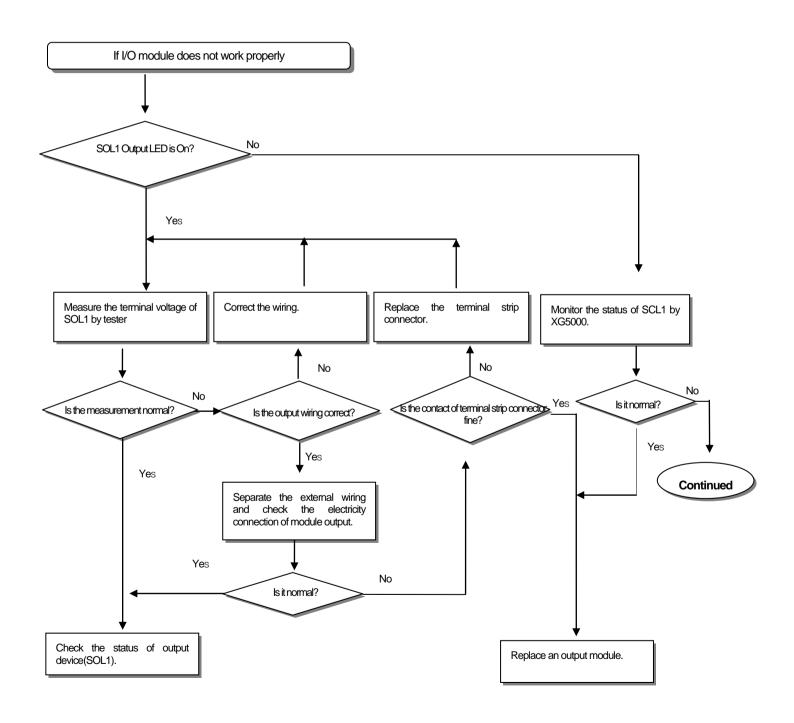

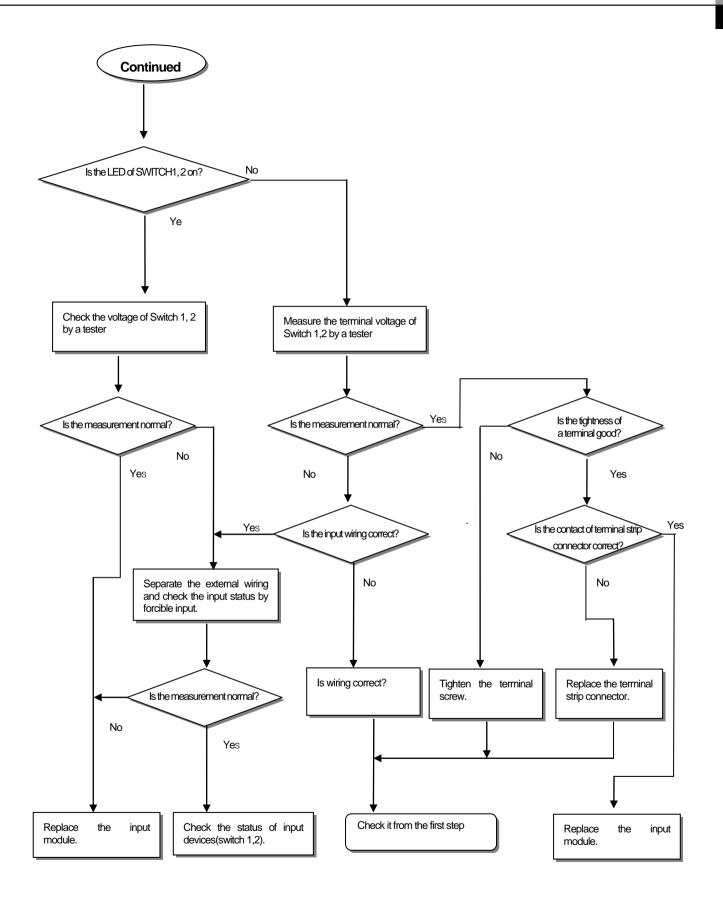


14.2.6 Action when writing program is not possible

It describes the orders of taking a measure when writing a program into the CPU Module is not possible.

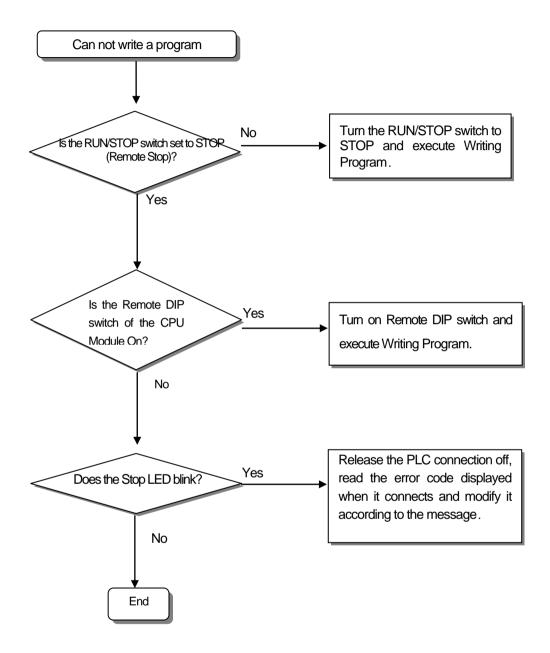

14.2.7 Action when Sync. cable is not installed properly


If there is a problem in Sync. Cable, redundant operation is not possible. It describes action when Sync. Cable is not installed properly.

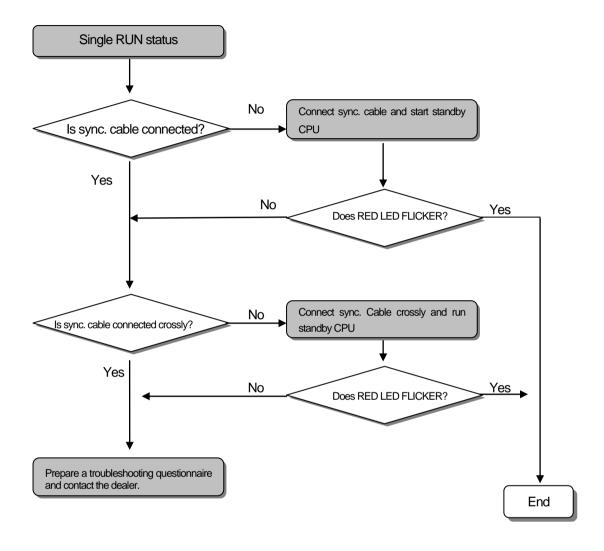

Chapter 14 Troubleshooting

14.2.8 When undesirable master switching occurs


In case switching occurs, it is displayed by MASTER LED at front part. If the revelent is acting as master, MASTER LED is on and if it is acting as standby CPU, MASTER LED off. It switching the user does not want occurs, see the following steps.

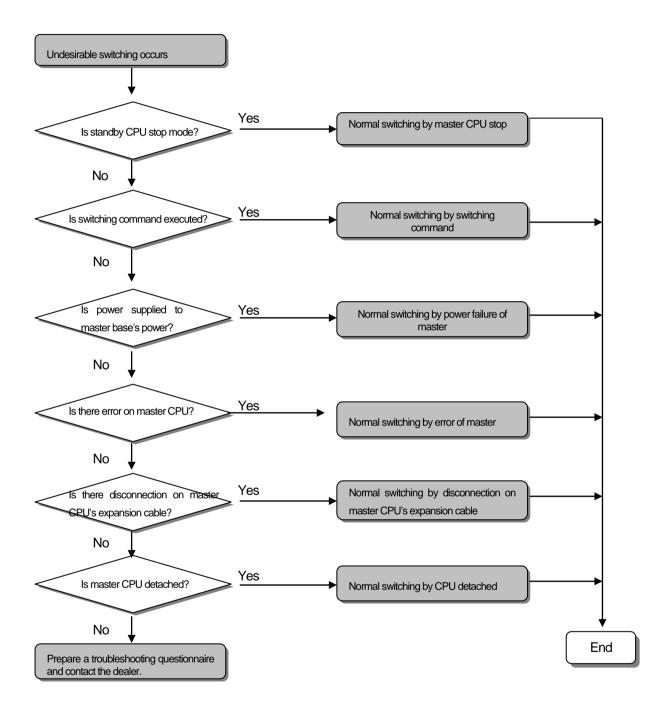

14.2.9 When newly added CPU does not join redundant operation

In case of adding new CPU to the previous system, it should act as standby CPU if normal.Before starting, check the Sync. Cable and expansion cable. To join reduntdunt operation, version of new CPU should be same with previous CPU. If not, error occurs because of version. Contact near dealer and get update of new OS.

If you have a problem when adding new CPU, see the following steps.

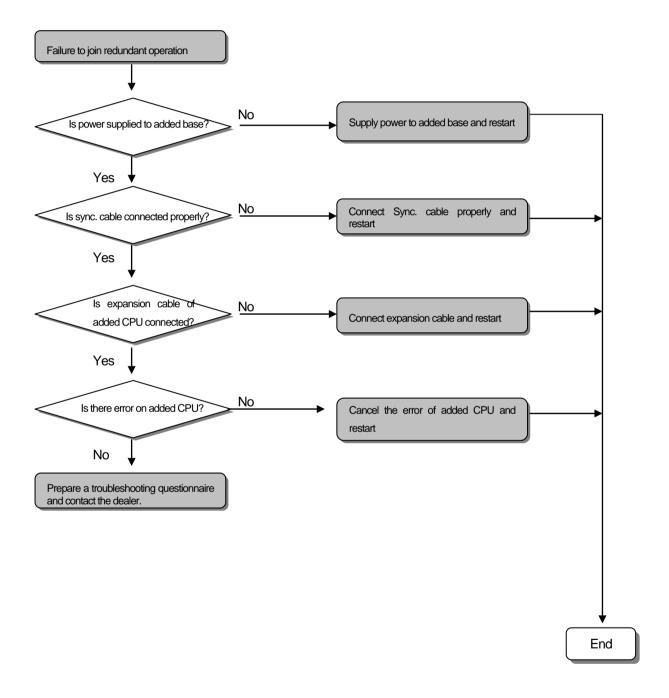


Chapter 14 Troubleshooting

14.2.10 When failing to switch master

If system is not redundancy status, switching may fail. Before switching, check the redundant ring configuration, RUN status of master/standby CPU, connection status of Sync. Cable.


In case you try to switch but fail, see the following steps.

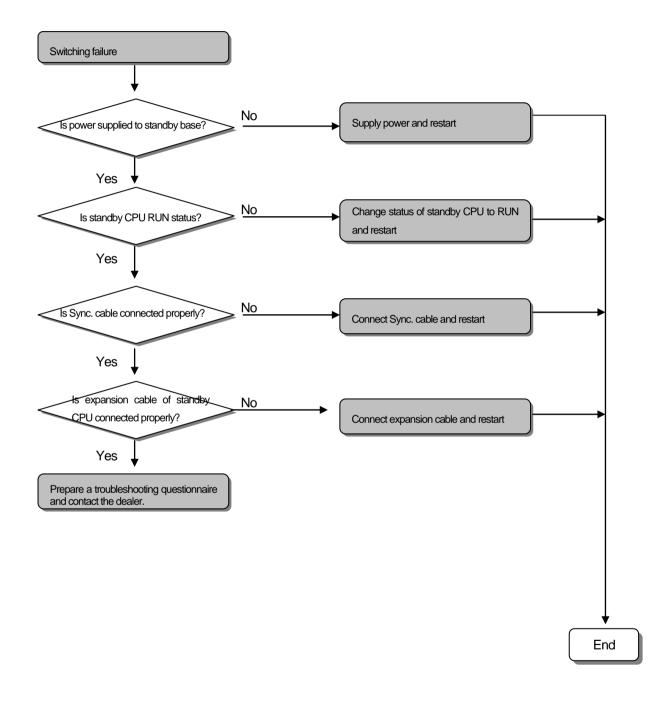

14.2.11 When expansion cable is disconnected


In case two expansion cables are disconnected, cable disconnection error occurs or system except disconnected expansion base operates normally.

- Cable disconnection error(E036): In case fault mask is not set→

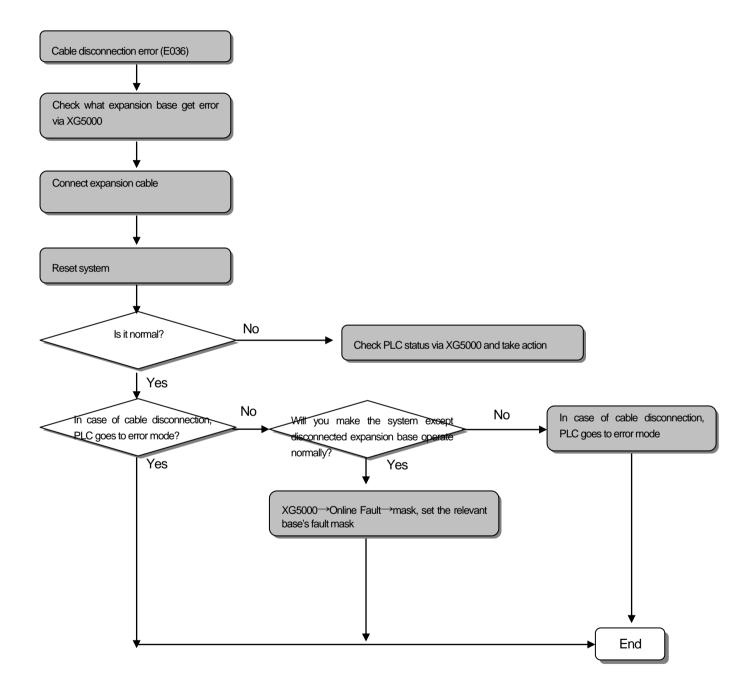

Chapter 14 Troubleshooting


(2) system except disconnected expansion base operates normally: in case fault mask is set

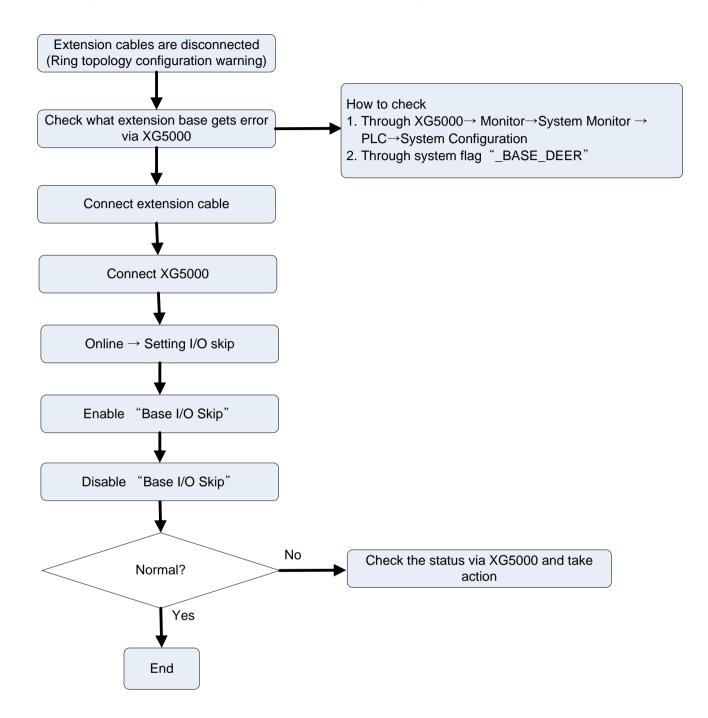


14.2.12 When expansion driver gets error

In case expansion driver is detached (or get error), cable disconnection error occurs or system except disconnected expansion base operates normally.

(1) Expansion base detach error (E036): In case fault mask is not set

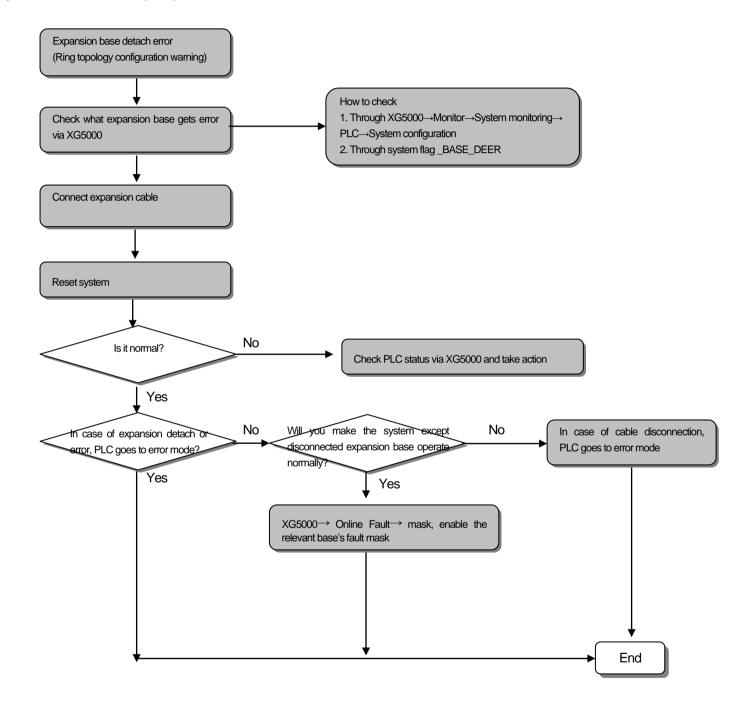

(2) system except detached expansion base operates normally: in case of enabling fault mask

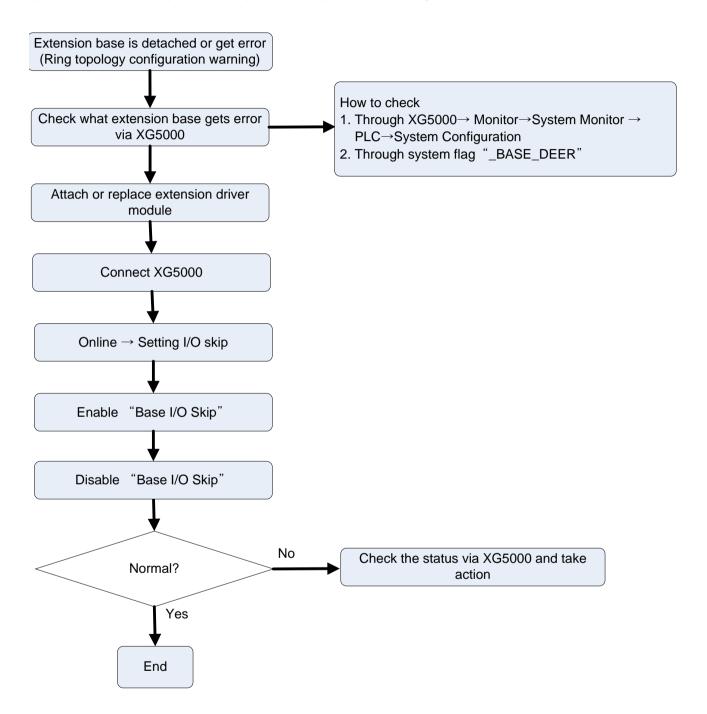

14.3 Troubleshooting Questionnaires

If any trouble is found while using the XGI series, please fill out the form and call to fax it to us.

• For an error relating to special/communication modules, fill out the questionnaires attached in the user's manual of the product.

Customer's Contact Number:	TEL)	_
	FAX)	
2. Model:	()	
3. Details of the Product		
– Details of the CPU module :	- OS version (),	- Product's serial number ()
- XG5000 Version number used for	orogram compiling : ()
4. Brief description of a device and system	n:	
5. Modules using the CPU module :		
Operation by key switch (), — Operation by XG5000 or	r Communication ()
 Memory module operation ()	
6. STOP LED On of the CPU module?	Yes(), No()
7. Error message generated from the XG	5000 :	
8. Measures taken against the error code	in the above 7:	
9. Other troubleshooting measures again	st the error :	
10. Features of the error		
• Reiterative(): Periodic(), Relating to a specific sequen	ce level()
Relating to the environment()	
• Intermittent(): Approx. interva	al of the error occurrence :	
11. Detail description for the erroneous ph	enomena:	
12. Configuration of the applied system:		

14.4 Cases

It describes trouble types and measures for circuits.

14.4.1 Trouble types and measures of input circuit

The followings describe the examples and measures of troubles.


Phenomena	Causes	Measures
Input signal can not be off	Leakage current of an external device (if operating by proximate switch and others) AC input External device	Connect a proper resistance or capacitor so that the voltage between terminals of input module is below the return voltage. AC input
Input signal can not be off(neon lamp could be still on)	Leakage current of an external device(operation by a limit switch with neon lamp) AC input External device	 CR value is determined by the value of leakage current. Recommended value C: 0.1 ~ 0.47uF R: 47 ~ 120 Ω (1/2W) Or, separate a circuit completely and install another display circuit.
Input signal can not be off	leakage current from the capacity between wires of wiring cable AC input Leakage current External device	Install the power on an external device as presented below. AC Input External device
Input signal can not be off	Leakage current of an external device(operation by a switch with LED mark) DC input External device	Connect a proper resistance so that the voltage between input module terminal and common terminal is higher than off voltage as presented below. DC Input D
Input signal can not be off	Circulating current by using plural different power sources DC Input If E1 > E2, it circulates.	Change plural to singular power Connecting to a circulating current preventive diode(figure below) DC Input

14.4.2 Trouble types and measures of output circuit

The followings describe the examples and measures of troubles.

Phenomena	Causes	Measures
	If load contains half-wave rectification(solenoid valve	• Connect a dozens ~ several hundreds $k\Omega$ resistor to a
Excessive	may have it)	load in parallel.
voltage is	• If the polarity is ←, C is charged while the voltage +	
allowed to	power voltage charged to C is allowed to both ends of	
load when	diode(D). when the polarity is ↑. The max. voltage is	
output	approx. 2√2. —	
contact is off	C D C D C C C C C C	Load C
	Note) when using it as the above, the output element	
	does not have any problem but the performance of	
	diode(D) in load may be reduced, probably causing a	
	trouble.	
	Leakage current from surge absorbing circuit	$ullet$ Connect a dozens of $k\Omega$ resistor or CR of which
Load can not	connected to an output element in parallel	impedance is equal to the resistance to load in parallel.
be off	Output	Note) If the length of wiring from output module to load is
	Load	long, it may have leakage current from capacity of
	Leakage current	cables.
		Load
	Leakage current from surge absorbing circuit	Operate the C-R type timer by mediating a relay.
Abnormal	connected to an output element in parallel.	Use other one but a C–R type timer.
time when	Output	Note) A timer's internal circuit may have half-wave
load is a C-R	Load Load	rectification
type timer		
	Leakage current	Output


Chapter 14 Troubleshooting

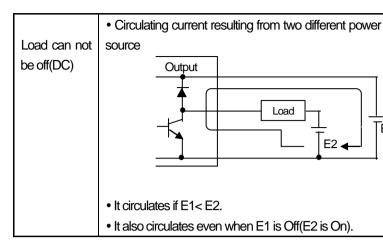


• Adjusting plural to singular power source.

below)

• Connecting to circulating current preventive diode(figure

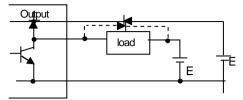

Note) If load is relay and others, it needs connecting a counter voltage absorbing diode as a dotted line in the figure.

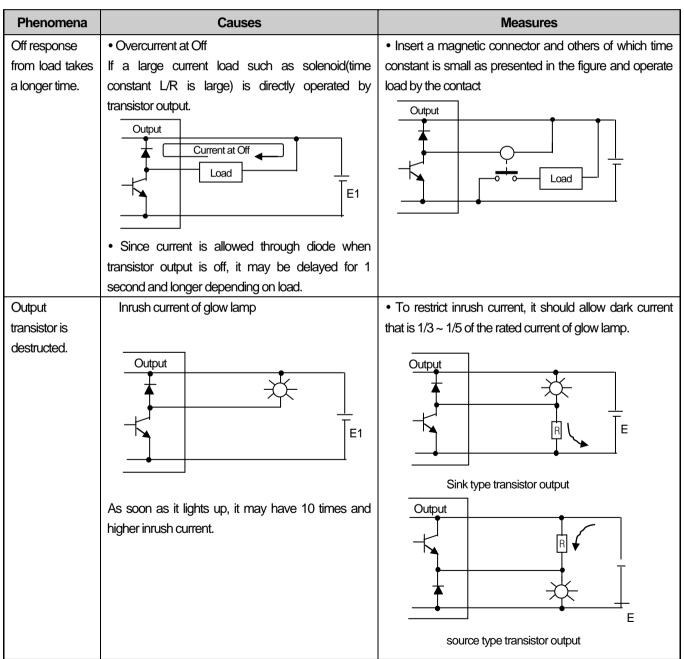

14.5 Error Codes List

14.5.1 Error codes during CPU operation

Code	Error causes	Measures	Operation status	LED status	Diagnostic timing		
13	Abnormal base information	Contact A/S service if it still exists after turning it on again	S013	Turning it on Converting to RUN mode			
23	If a program to execute is not normal	Operate after downloading program again (Cold) Replace a battery in case of abnormal battery (Cold) After a program is reloaded, check the storage condition and if any fault is found, replace the CPU module. (Cold)	E023	Converting to RUN mode			
24	Abnormal I/O parameter	Check I/O parameter and the installed module Set I/O parameter to be same with installed module and download	STOP	E024	Converting to RUN mode		
25	Abnormal basic parameter	Restart after basic parameter is reloaded Replace a battery in case of defective battery After basic parameter is reloaded, check the storage condition and if any fault is found, replace the CPU module.	STOP	E025	Converting to RUN mode		
28	Abnormal Redundancy parameter	Start after loading redundancy parameter again (Doesn't check in case of downloading during Run)	STOP	E028	Turning it on, Loading program		
29	Abnormal special parameter	Start after loading special parameter again (Doesn't check in case of downloading during Run)	STOP	E029	Turning it on, Loading program		
30	The module set in parameter and the actually installed module do not coincide	Check the wrong slot position by XG5000, modify a module or parameter and then, restart. Reference flag: module type inconsistence error flag (_IO_TYER, _IO_TYER_N, _IO_TYERR[n])	STOP, RUN	E030	Turning it on, Loading program Converting to RUN mode		
31	Module detachment or module addition during operation	Check any detached/added slot position by XG5000, modify the installment and restart (according to parameter) Reference flag: module detachment error flag (_IO_DEER,_IO_DEER_N,_IO_DEERR[n])	STOP, RUN	E031	scan ends		
32	Fuse of a module holding a fuse is burnt out during operation	Check the position of a slot of which fuse is burnt out by XG5000, replace a fuse and restart (according to parameter) Reference flag: fuse disconnection error flag (_FUSE_ER,_FUSE_ER_N,_FUSE_ERR[n])	STOP, RUN	E032	scan ends		

Chapter 14 Troubleshooting

Code	Error causes	Measures(restart mode after the measure)	Operation status	LED status	Diagnostic timing
36	Expansion base detach error	Check the detachment of expansion base	STOP, RUN	E036	turning it on, Scan end, Executing program
39	CPU abnormal end or trouble	Contact A/S service if it still exists after turning it on again	-	E039	turning it on, Scan end, Executing program
40	The scan time of a program exceeds the scan delay watchdog time designated by parameter during operation	Check the scan delay watchdog time designated by parameter, modify parameter or program and restart (cold)	STOP	E040	Executing program
41	Program execution code error	Download program again and restart	STOP	E041	turning it on,
43	Duplicated base number	Check the duplicated base number	STOP	E043	Executing program
45	Base power error	Two power module are off Check attachment of power module	STOP RUN	E045	turning it on,
48	Module position error	Module that can't be installed has bee installed For more detail, refer to error history	STOP RUN	E048	turning it on, Loading program Switching to RUN mode
50	Error of external device is detected by a user program during operation	Repair a fault device by referring to error detection flag of external device and restart(according to parameter) (_ANNUN_ER,_ANC_ERR[n])	STOP RUN	E050	When scan ends
101	CPU position error	CPU is installed at wrong position Position CPU correctly	STOP	S101	turning it on,
102	Duplicated CPU ID error	Set the A/B side switches of Master CPU and Standby CPU differently	STOP	S102	turning it on,
103	Base abnormal error	Configure expansion cable as Ring Topology and position detached base correctly. For information of detached base, refer to CPU error log	STOP, RUN	E103	Executing program
104	System configuration error	 Check redundancy configuration Check redundancy drive module station no. Check O/S version of extension drive module and extension manager 	STOP	E104	turning it on, Scan end
300	Redundancy system synchronous operating error	During redundancy operating, synchronization error occurs	STOP	E300	Switching to redundancy operation, operating

Code	Error causes	Measures(restart mode after the measure)	Operation status	LED status	Diagnostic timing
301	Standby CPU failed to operate as redundancy because of error of Master CPU	Restart as redundancy operation • set operation mode of standby CPU as STOP • Cancel the error of master CPU and restart • Change standby CPU into RUN Restart standby CPU as single operation • Disable master CPU (STOP mode or power cut) • restart standby CPU through reset switch or changing operation mode from STOP to RUN	STOP	E301	Starting standby operation
501	RTC data error	If there is no error in battery, reset RTC data via XG5000	RUN	E501	turning it on, scan end
502	Low battery voltage	Replace battery while power in on	RUN	E502	turning it on, scan end
bxx	Expansion base error	Check the power of expansion base Check the expansion cable	RUN	Ebxx	Operating

Note

- (1) Error No. 2 through 13 from "Error Codes during CPU Operation" can be checked in our A/S Service Center.
- (2) The other errors of which number is 22 and lower can be checked by using the error log of XG5000.

Appendix 1.1 User Flag

1. User flag

Address	Flag name	Туре	Writable	Contents	Description
%FX6144	_T20MS	BOOL	-	20ms cycle clock	Clock signal used in user program reverses On/Off per a half cycle
%FX6145	_T100MS	BOOL	-	100ms cycle clock	Please use more enough long clock signal than PLC scan time.
%FX6146	_T200MS	BOOL	-	200ms cycle clock	Clock signal starts from Off condition when initialization program starts or scan program starts.
%FX6147	_T1S	BOOL	-	1s cycle clock	_T100ms clock example
%FX6148	_T2S	BOOL	-	2s cycle clock	50ms 50ms
%FX6149	_T10S	BOOL	-	10s cycle clock	
%FX6150	_T20S	BOOL	-	20s cycle clock	
%FX6151	_T60S	BOOL	-	60s cycle clock	
%FX6153	_ON	BOOL	-	Ordinary time On	Always On state flag, used when writing user program.
%FX6154	_OFF	BOOL	-	Ordinary time Off	Always Off state flag, used when writing user program.
%FX6155	_1ON	BOOL	-	1'st scan On	Only 1'st scan On after operation start
%FX6156	_10FF	BOOL	-	1'st scan Off	Only 1'st scan Off after operation start
%FX6157	_STOG	BOOL	-	Reversal every scan (scan toggle)	On/Off reversed flag per every scan when user program is working. (On state for first scan)
%FX6163	_ALL_OFF	BOOL	-	All output Off	On in case all outputs are off
%FX30720	_RTC_WR	BOOL	Available	Writing data to RTC	Write data to RTC and Read
%FX30721	_SCAN_WR	BOOL	Available	Initialize scan value	Initialize scan value
%FX30722	_CHK_ANC_ERR	BOOL	Available	Request for detecting heavy fault of external device	Flag that requests detecting heavy fault of external
%FX30723	_CHK_ANC_WAR	BOOL	Available	Request for detecting light fault of external device	Flag that requests detecting light fault (warning) of external
%FX30724	_MASTER_CHG	BOOL	Available	Master/Standby switching	Flag used when switching master/standby
%FW3860	_RTC_TIME_USER	ARRAY[07] OF BYTE	Available	Time to set	Flag for user to set time (year, month, hour, minute, second, day, century available)

Appendix 1.2 System Error Representative Flag

1. Master CPU system error representative flag

Address	Flag name	Туре	Bit position	Contents	Description
%FD65	_CNF_ER	DWOR D	Represent ative flag	System error (heavy fault error)	Handles error flags about non-operation fault error as below.
%FX2081	_IO_TYER	BOOL	BIT 1	Error when Module type mismatched	Representative flag displayed when I/O configuration parameter for each slot is not matched with practical module configuration or a specific module is applied in the wrong location. (Refer to "_IO_TYER_N, _IO_TYER[n]")
%FX2082	_IO_DEER	BOOL	BIT 2	Module detachment error	Representative flag displayed when the module configuration for each slot is changed while running. (Refer to "_IO_DEER_N, _IO_DEER[n]")
%FX2083	_FUSE_ER	BOOL	BIT 3	Fuse cutoff error	Representative flag displayed when the fuse of module is cut off. (Refer to "_FUSE_ER_N, _FUSE_ER[n]")
%FX2086	_ANNUM_ER	BOOL	BIT 6	Heavy fault detection error in external device	Representative flag displayed when heavy fault error detected by user program is recorded in "_ANC_ERR[n]".
%FX2088	_BPRM_ER	BOOL	BIT 8	Basic parameter error	Basic parameter doesn't match CPU type.
%FX2089	_IOPRM_ER	BOOL	BIT 9	I/O parameter error	It is abnormal to the I/O configuration parameter.
%FX2090	_SPPRM_ER	BOOL	BIT 10	Special module parameter error	It is abnormal to the special module parameter.
%FX2091	_CPPRM_ER	BOOL	BIT 11	Communication module parameter error	It is abnormal to the communication module parameter.
%FX2092	_PGM_ER	BOOL	BIT 12	Program error	Indicates that there is problem with user-made program.
%FX2093	_CODE_ER	BOOL	BIT 13	Program code error	Indicates that while user program is running, the program code can't be interpreted.
%FX2094	_SWDT_ER	BOOL	BIT 14	CPU abnormal ends.	Displayed when the saved program gets damages by an abnormal end of CPU or program cannot work.
%FX2095	_BASE_POWE R_ER	BOOL	BIT 15	Abnormal base power	Base power off or power module error
%FX2096	_WDT_ER	BOOL	BIT 16	Scan watchdog error	Indicates that the program scan time exceeds the scan watchdog time specified by a parameter.
%FX2097	_BASE_INFO_E R	BOOL	BIT 17	Base information error	Base information is abnormal
%FX2102	_BASE_DEER	BOOL	BIT 22	Extension base detachment error	Extension base is detatched
%FX2103	_DUPL_PRM_E R	BOOL	BIT 23	Redundant parameter error	Abnormal Redundant parameter
%FX2104	_INSTALL_ER	BOOL	BIT 24	Module attachment position error	The module which can't be inserted into main base is inserted in to main base or The module which can't be inserted into extension base is inserted in to extension base

Address	Flag name	Туре	Bit position	Contents	Description
%FX2105	_BASE_ID_ER	BOOL	BIT 25	Overlapped extension base number	extension base number is overlapped
%FX2106	_DUPL_SYNC_ ER	BOOL	BIT 26	Redundant operation Sync. error	Synchronization between master and standby CPU is abnormal
%FX2107	_AB_SIDEKEY_ ER	BOOL	BIT 27	A/B SIDE key overlap error	A,B side key of master, standby CPU are overlapped. They should be different.
%FX2110	_BASE_AB_ER	BOOL	BIT 30	Base abnormal configuration	Configure extension cable as Ring Topology and position detached base correctly. For information of detached base, refer to CPU error log
%FX2111	_SYS_CON_ER	BOOL	BIT 31	System configuration error	Abnormal system configuration Ex) - Master/Standby One ring or line configuration - Duplicated station number of extension base or Station number more than specification - Different station number in same base

2. Standby CPU System error representative flag

Address	Flag name	Туре	Bit position	Contents	Description
%FD129	_SB_CNF_ER	DWOR D	Represent ative flag	System error (heavy fault error)	Handles error flags about non-operation fault error as below.
%FX4129	_SB_IO_TYER	BOOL	BIT 1	Module type mismatch error	Attached module is different with I/O parameter or some module which can't be inserted into some slot is inserted some slot. Representative flag that detects them and displays (refer to _SB_IO_TYER_N, _SB_IO_TYERR)
%FX4130	_SB_IO_DEER	BOOL	BIT 2	Module detachment error	Representative flag displayed when the module configuration for each slot is changed while running. (refer to _SB_IO_DEER_N,_SB_IO_DEERR]
%FX4131	_SB_FUSE_ER	BOOL	BIT 3	Fuse cutoff error	Representative flag displayed when the fuse of module is cut off.
%FX4134	_SB_ANNUM_ER	BOOL	BIT 6	Heavy fault detection error in external device	Representative flag displayed when heavy fault error detected by user program is recorded in "_ANC_ERR[n]".
%FX4136	_SB_BPRM_ER	BOOL	BIT 8	Basic parameter error	Basic parameter doesn't match CPU type.
%FX4137	_SB_IOPRM_ER	BOOL	BIT 9	I/O parameter error	It is abnormal to the I/O configuration parameter
%FX4138	_SB_SPPRM_ER	BOOL	BIT 10	Special module parameter error	It is abnormal to the special module parameter.
%FX4139	_SB_CPPRM_ER	BOOL	BIT 11	Communication module parameter error	It is abnormal to the communication module parameter.
%FX4141	_SB_CODE_ER	BOOL	BIT 13	Program code error	Indicates that while user program is running, the program code can't be interpreted.
%FX4142	_SB_SWDT_ER	BOOL	BIT 14	CPU abnormal ends.	Displayed when the saved program gets damages by an abnormal end of CPU or program cannot work.
%FX4143	_SB_BASE_POW ER_ER	BOOL	BIT 15	Abnormal base power	Base power off or power module error
%FX4144	_SB_WDT_ER	BOOL	BIT 16	Scan watchdog error	Indicates that the program scan time exceeds the scan watchdog time specified by a parameter.
%FX4145	_SB_BASE_INFO _ER	BOOL	BIT 17	Base information error	Base information is abnormal
%FX4150	_SB_BASE_DEE R	BOOL	BIT 22	Extension base detachment error	Extension base is detached.
%FX4151	_SB_DUPL_PRM _ER	BOOL	BIT 23	Abnormal redundant parameter	Redundant parameter is Abnormal
%FX4152	_SB_INSTALL_E R	BOOL	BIT 24	Module attachment position error	The module which can't be inserted into main base is inserted in to main base or The module which can't be inserted into extension base is inserted in to extension base

Address	Flag name	Туре	Bit position	Contents	Description
%FX4153	_SB_BASE_ID_E R	BOOL	BIT 25	Overlapped extension base number	extension base number is overlapped
%FX4154	_SB_DUPL_SYN C_ER	BOOL	BIT 26	Redundant operation Sync. error	Synchronization between master and standby CPU is abnormal
%FX4156	_SB_CPU_RUN_ ER	BOOL	BIT 28	Standby CPU run error	Standby CPU fails to join redundant operation when MASTER CPU is error
%FX4158	_SB_BASE_AB_E R	BOOL	BIT 30	Base abnormal configuration	Configure extension cable as Ring Topology and position detached base correctly. For information of detached base, refer to CPU error log

Appendix 1.3 System Error Detail Flag

1. Master CPU system error detail flag

Address	Flag name	Туре	Writable	Contents	Description
%FW424	_IO_TYERR	ARRAY[031] OF WORD	-	Module type mismatch error	Indicates slot and base where module mismatch error occurs
%FW456	_IO_DEERR	ARRAY[031] OF WORD	-	Module detachment error	Indicates slot and base where module detachment error occurs
%FW488	_FUSE_ERR	ARRAY[031] OF WORD	-	Fuse cutoff error	Indicates slot and base where fuse cutoff error occurs
%FD83	_BASE_DEERR	DWORD	-	Extension base detachment error	Indicates base where extension base is detached
%FD574	_BASE_POWER _FAIL	DWORD	-	Information of base where power module error occurs	Indicates base where power module error occurs
%FW416	_IO_TYER_N	WORD	-	Module type mismatch slot number	Indicates slot number where module type mismatch error occurs. When two or more occurs, first slot is indicated
%FW417	_IO_DEER_N	WORD	-	Module detachment slot number	Indicates slot number where module detachment error occurs. When two or more occurs, first slot is indicated
%FW418	_FUSE_ER_N	WORD	-	Fuse cutoff slot number	Indicates slot number Fuse cutoff error occurs. When two or more occurs, first slot is indicated
%FW1922	_ANC_ERR	WORD	Available	Heavy fault information of external device	Classifies the type of user defined error and writes value except 0. If detection of heavy fault is requested, it develops an external heavy fault detection error. By monitoring this flag, the user can know a reason of heavy fault.
%FX10849	_IO_ER_PMT	BOOL	-	Status of Ignoring IO module error	On when set to ignore IO module error
%FX10851	_CP_ER_PMT	BOOL	-	Status of Ignoring communication module error	On when set to ignore communication module error
%FX10850	_SP_ER_PMT	BOOL	-	Status of Ignoring special module error	On when set to ignore special module error
%FX10848	_FUSE_ER_PMT	BOOL	-	Status of Ignoring fuse error	On when set to ignore fuse module error

2. Standby CPU system error detail flag

Address	Flag name	Туре	Writable	Contents	Description
%FD147	_SB_BASE_DEERR	DWORD	-	Extension base detachment error	Indicates base where extension base is detached
%FW588	_SB_IO_TYERR	WORD	-	Module type mismatch error	Indicates slot and base where module mismatch error occurs
%FW589	_SB_IO_DEERR	WORD	-	Module detachment error	Indicates slot and base where module detachment error occurs

Appendix 1.4 System Warning Representative Flag

1. MASTER CPU System warning representative flag

Address	Flag name	Туре	Bit position	Contents	Description
%FD66	_CNF_WAR	DWORD	Representative flag	System warning	Representative flag displayed the system warning state
%FX2112	_RTC_ER	BOOL	BIT 0	RTC error	Indicates that RTC data is abnormal
%FX2114	_BASE_EXIST_WAR	BOOL	BIT 2	Not joined base	Warns there is base which doesn't join operation
%FX2115	_AB_SD_ER	BOOL	BIT 3	Stop by operation error	Stopped by abnormal operation
%FX2116	_TASK_ER	BOOL	BIT 4	Task collision	It is collided to the task
%FX2117	_BAT_ER	BOOL	BIT 5	Battery error	It is to the error in the battery state
%FX2118	_ANNUM_WAR	BOOL	BIT 6	External device fault	Indicates that the light fault in the external device is detected.
%FX2120	_HS_WAR	BOOL	BIT 8	High speed link	Abnormal HS parameter
%FX2121	_REDUN_WAR	BOOL	BIT 9	Redundant configuration warning	It is not single CPU RUN mode and redundant configuration is not configured
%FX2122	_OS_VER_WAR	BOOL	BIT 10	O/S version mismatch	OS versions between CPUs, extension managers, extension drive modules are different
%FX2123	_RING_WAR	BOOL	BIT 11	Ring topology configuration warning	Configure an extension cable as the Ring topology
%FX2132	_P2P_WAR	BOOL	BIT 20	P2P parameter	Abnormal P2P parameter
%FX2138	_SYS_CON_WAR	BOOL	BIT 26	System configuration warning	Extension redundancy system configuration warning -Master/standby ring changes into line -Master normal but standby error
%FX2140	_CONSTANT_ER	BOOL	BIT 28	Fixed cycle error	Fixed cycle error
%FX2141	_BASE_POWER_WAR	BOOL	BIT 29	Power module error warning	One or two power module is error
%FX2142	_BASE_SKIP_WAR	BOOL	BIT 30	Base skip cancelation warning	In case of canceling the base skip, base is different with IO parameter
%FX2143	_BASE_NUM_OVER_WAR	BOOL	BIT 31	Base number setting error	Base number of extension drive module is not 1~31

2. Standby CPU System warning representative flag

Address	Flag name	Туре	Bit position	Contents	Description
%FD130	_SB_CNF_WAR	DWORD	Represent ative flag	System warning	Representative flag displayed the system warning state
%FX4160	_SB_RTC_ER	BOOL	BIT 0	RTC error	Indicates that RTC data is abnormal
%FX4162	_SB_BASE_EXIST_ WAR	BOOL	BIT 2	Not joined base	Warns there is base which doesn't join operation
%FX4163	_SB_AB_SD_ER	BOOL	BIT 3	Stop by operation error	Stopped by abnormal operation
%FX4164	_SB_TASK_ER	BOOL	BIT 4	Task collision	It is collided to the task
%FX4165	_SB_BAT_ER	BOOL	BIT 5	Battery error	It is to the error in the battery state
%FX4166	_SB_ANNUM_WAR	BOOL	BIT 6	External device fault	Indicates that the light fault in the external device is detected.
%FX4168	_SB_HS_WAR	BOOL	BIT 8	High speed link	Abnormal HS parameter
%FX4170	_SB_OS_VER_WAR	BOOL	BIT 10	O/S version mismatch	OS versions between CPUs, extension managers, extension drive modules are different
%FX4171	_SB_RING_WAR	BOOL	BIT 11	Ring topology configuration warning	Configure an extension cable as the Ring topology
%FX4180	_SB_P2P_WAR	BOOL	BIT 20	P2P parameter	Abnormal P2P parameter
%FX4188	_SB_CONSTANT_E	BOOL	BIT 28	Fixed cycle error	Fixed cycle error
%FX4189	_SB_BASE_POWER _WAR	BOOL	BIT 29	Power module error warning	One or two power module is error
%FX4190	_SB_BASE_SKIP_W AR	BOOL	BIT 30	Base skip cancelation warning	In case of canceling the base skip, base is different with IO parameter
%FX4191	_SB_BASE_NUM_O VER_WAR	BOOL	BIT 31	Base number setting error	Base number of extension drive module is not 1~31

Appendix 1.5 System Warning Detail Flag

1. Master CPU system warning detail flag

Address	Flag name	Туре	Writab le	Contents	Description
%FX2624	_HS_WARN	ARRAY[011] OF BOOL	-	Abnormal HS parameter	Relevant flag is on in case Hs parameter is abnormal
%FX2640	_P2P_WARN	ARRAY[07] OF BOOL	-	Abnormal P2P parameter	Relevant flag is on in case P2P parameter is abnormal P2P
%FD587	_BASE_ACPF_W AR	DWORD	-	Instantaneous power cutoff occurrence warning information	Indicates base where Instantaneous power cutoff occurs
%FW164	_HS_WAR_W	WORD	-	Abnormal HS parameter	Indicates abnormal HS link number by bit
%FW165	_P2P_WAR_W	WORD	-	Abnormal P2P parameter	Indicates abnormal P2P link number by bit
%FW1923	_ANC_WAR	WORD	-	Light fault information external device	Classifies the type of user defined error and writes value except 0. If detection of heavy fault is requested, it develops an external light fault detection error. By monitoring this flag, the user can know a reason of light fault.
%FW601~ %FW631	_BASE_INFO[0]~ _BASE_INFO[31]	WORD	-	Abnormal base power module	Indicates abnormal redundancy power module Ex) error in left power module on expansion base 16#010C: 01 → left power module 0C → 12-slot expansion base

2. Standby CPU system warning detail flag

Address	Flag name	Туре	Writable	Contents	Description
%FX4672	_SB_HS_WA	ARRAY[011] OF	-	Abnormal HS parameter	Relevant flag is on in case Hs parameter is abnormal
	RN	BOOL			D. 1. 1. 1. DOD 1. 1.
%FX4688	_SB_P2P_WA RN	ARRAY[07] OF BOOL	-	Abnormal P2P parameter	Relevant flag is on in case P2P parameter is abnormal P2P
%FW292	_SB_HS_WA	WORD	-	Abnormal HS parameter	Indicates abnormal HS link number by bit
%FW293	_SB_P2P_WA	WORD	-	Abnormal P2P parameter	Indicates abnormal P2P link number by bit

Appendix 1.6 System Operation Status Information Flag

1. Master CPU system operation status information flag

Address	Flag name	Туре	Bit position	Contents	Description
%FD64	_SYS_STATE	DWORD	Representat ive flag	PLC Mode and operation state	Indicates PLC mode and operation state of system.
%FX2048	_RUN	BOOL	BIT 0	RUN	
%FX2049	_STOP	BOOL	BIT 1	STOP	Indicates CDI I's an austion status
%FX2050	_ERROR	BOOL	BIT 2	ERROR	Indicates CPU's operation status
%FX2051	_DEBUG	BOOL	BIT 3	DEBUG	
%FX2052	_LOCAL_CON	BOOL	BIT 4	Local control	Indicates operation mode changeable state only by the Mode key and XG5000.
%FX2054	_REMOTE_CON	BOOL	BIT 6	Remote Mode On	It is Remote control mode
%FX2058	_RUN_EDIT_DON	BOOL	BIT 10	Editing during Run completed	Indicates completion of editing during Run
%FX2059	_RUN_EDIT_NG	BOOL	BIT 11	Editing during Run abnormally completed	Edit is ended abnormally during Run
%FX2060	_CMOD_KEY	BOOL	BIT 12	Operation mode change by key	Indicates Operation mode change by key
%FX2061	_CMOD_LPADT	BOOL	BIT 13	Operation mode change by local PADT	Indicates operation mode change by local PADT
%FX2062	_CMOD_RPADT	BOOL	BIT 14	Operation mode change by remote PADT	Indicates operation mode change by remote PADT
%FX2063	_CMOD_RLINK	BOOL	BIT 15	Operation mode change by remote communication module	Indicates operation mode change by remote communication module
%FX2064	_FORCE_IN	BOOL	BIT 16	Forced Input	Forced On/Off state about input contact
%FX2065	_FORCE_OUT	BOOL	BIT 17	Forced Output	Forced On/Off state about output contact
%FX2066	_SKIP_ON	BOOL	BIT 18	Input/Output Skip	I/O Skip on execution
%FX2067	_EMASK_ON	BOOL	BIT 19	Fault mask	Fault mask on execution
%FX2069	_USTOP_ON	BOOL	BIT 21	Stopped by STOP function	Stopped after scan completion by 'STOP' function while RUN mode operation.
%FX2070	_ESTOP_ON	BOOL	BIT 22	Stopped by ESTOP function	Instantly stopped by 'ESTOP' function while RUN mode operation.
	0. 00 1/55	ARRAY[031]		O/S version of extension	Indicates O/S version of extension drive module
%FW192	_SL_OS_VER	OF WORD	-	drive module	malactes 6/6 version of extension and module
%FW600	_BASE_INFO	ARRAY[031] OF WORD	-	Base information	Indicates how many base is installed
%FB12	_RTC_TIME	ARRAY[07] OF BYTE	-	Current clock	Indicates current clock
%FX2072	_INIT_RUN	BOOL	-	Initialization task on execution	User defined Initialization program on execution.

Address	Flag name	Туре	Bit position	Contents	Description
%FX2074	_AB_SIDE	BOOL	-	CPU position	CPU position (A-SIDE: ON, B-SIDE: OFF)
%FX2076	_PB1	BOOL	-	Program Code 1	Program code 1 is selected
%FX2077	_PB2	BOOL	-	Program Code 2	Program code 1 is selected
%FX30736	_INIT_DONE	BOOL	writable	Initialization task execution completion	If this flag is set by user's initial program, it is started to execution of scan program after initial program completion.
%FW584	_RTC_DATE	DATE	-	RTC's current date	Indicates RTC's current date
%FD67	_OS_VER	DWORD	-	O/S version	Indicates CPU O/S version
%FD68	_OS_DATE	DWORD	-	O/S data	Indicates CPU O/S data
%FD69	_CP_OS_VER	DWORD	-	Extension manager O/S version	Indicates extension manager O/S version
%FD573	_OS_TYPE	DWORD	-	For PLC classification	Whether it is provided to other division
%FW1081	_FALS_NUM	INT	-	FALS number	Indicates FALS number
%FD293	_RTC_TOD	TIME_OF_DA Y	-	RTC's current clock	Indicates RTC's current clock RTC. (ms unit)
%FD582	_RUN_EDIT_CNT	UDINT	-	The no. of editing during Run	Indicates the no. of editing during Run
%FW140	_AC_F_CNT	UINT	-	The no. of instantaneous power cutoff	Indicates the no. of instantaneous power cutoff
%FW158	_POWER_OFF_C	UINT	-	The no. of power cutoff	Indicates the no. of power cutoff
%FW386	_SCAN_MAX	UINT	writable	Max. scan time	Indicates max. scan time after(unit: 0.1ms)
%FW387	_SCAN_MIN	UINT	writable	Min. scan time	Indicates min. scan time after Run
%FW388	_SCAN_CUR	UINT	writable	Current scan time	Indicates current scan time (unit 0.1ms)
%FW585	_RTC_WEEK	UINT	-	RTC's current day	Indicates RTC's current day
%FW141	_CPU_TYPE	WORD	-	CPU ID (XGR - 0xA801)	Indicates CPU type
%FW633	_RBANK_NUM	WORD	-	Currently used block no.	Indicates currently used block no.
%FD125	_BASE_SKIP_INF	DWORD	-	Base skip information	Indicates base skip information
%FD124	_BASE_EMASK_I	DWORD	-	Base fault mask information	Indicates base fault mask information
%FW1372	_SLOT_EMASK_I	ARRAY[031] OF WORD	-	Slot fault mask information	Indicates slot fault mask information
%FW1404	_SLOT_SKIP_INF	ARRAY[031] OF WORD	-	Slot skip information	Indicates slot skip information
%FW1752	_CYCLE_TASK_SC AN_TIME	ARRAY[031, 02] OF WORD	-	Fixed cycle task scan time	Indicates max./min./current scan time of fixed cycle task
]				

Address	Flag name	Туре	Bit position	Contents	Description
%FX19040	_HS_ENABLE_STAT E	ARRAY[011] OF BOOL	-	-	HS link enable/disable current state
%FX31520	_HS_REQ	ARRAY[011] OF BOOL	-	-	HS link enable/disable request
%FX31536	_HS_REQ_NUM	ARRAY[011] OF BOOL	-	-	HS link enable/disable setting
%FX19072	_P2P_ENABLE_STA TE	ARRAY[07] OF BOOL	-	-	P2P enable/disable current state
%FX31552	_P2P_REQ	ARRAY[07] OF BOOL	-	-	P2P enable/disable request
%FX31568	_P2P_REQ_NUM	ARRAY[07] OF BOOL	-	-	P2P enable/disable setting
%FW1436	_SOE_LOG_CNT	WORD	-	-	No. of SOE event
%FW1437	_SOE_LOG_ROTAT E	WORD	-	-	SOE event rotation information
%FW1456	_SOE_READ_LOG_ CNT	WORD	-	-	No. of SOE event read by user
%FW1457	_SOE_READ_LOG_ ROTATE	WORD	-	-	Rotation information of SOE event read by user
%FX2111	_SYS_CON_ER	BOOL	-	-	System configuration error
%FX2138	_SYS_CON_WAR	BOOL	-	-	System configuration warning
%FX2137	_REF_WAR	BOOL	-	-	PLC CPU refresh error warning
%FX30729	_REF_WAR_CLR	BOOL	-	-	PLC CPU refresh error warning clear
%FD197	_REF_NG_CNT	DWORD	-	-	PLC CPU refresh NG counter
%FD196	_REF_OK_CNT	DWORD	-	-	PLC CPU refresh OK counter

2. Standby CPU system operation status information flag

Address	Flag name	Туре	Bit position	Contents	Description
%FD128	_SB_SYS_STATE	DWOR D	Represent ative flag	System information	Handles system information
%FX4096	_SB_RUN	BOOL	BIT 0	RUN	
%FX4097	_SB_STOP	BOOL	BIT 1	STOP	Indicates CPU's operation status
%FX4098	_SB_ERROR	BOOL	BIT 2	ERROR	
%FX4100	_SB_LOCAL_CON	BOOL	BIT 4	Local control	Local control mode
%FX4102	_SB_REMOTE_CO	BOOL	BIT 6	Remote mode On	Remote control mode
%FX4106	_SB_RUN_EDIT_D ONE	BOOL	BIT 10	Editing during Run completed	Indicates completion of editing during Run
%FX4107	_SB_RUN_EDIT_N	BOOL	BIT 11	Editing during Run abnormally completed	Edit is ended abnormally during Run
%FX4108	_SB_CMOD_KEY	BOOL	BIT 12	Operation mode change by key	Indicates Operation mode change by key
%FX4109	_SB_CMOD_LPAD	BOOL	BIT 13	Operation mode change by local PADT	Indicates operation mode change by local PADT
%FX4110	_SB_CMOD_RPAD	BOOL	BIT 14	Operation mode change by remote PADT	Indicates operation mode change by remote PADT
%FX4111	_SB_CMOD_RLINK	BOOL	BIT 15	Operation mode change by remote communication module	Indicates operation mode change by remote communication module
%FX4112	_SB_FORCE_IN	BOOL	BIT 16	Forced Input	Forced On/Off state about input contact
%FX4113	_SB_FORCE_OUT	BOOL	BIT 17	Forced Output	Forced On/Off state about output contact
%FX4114	_SB_SKIP_ON	BOOL	BIT 18	Input/Output Skip	I/O Skip on execution
%FX4115	_SB_EMASK_ON	BOOL	BIT 19	Fault mask	Fault mask on execution
%FX4117	_SB_USTOP_ON	BOOL	-	Stopped by STOP function	Stopped after scan completion by 'STOP' function while RUN mode operation.
%FX4118	_SB_ESTOP_ON	BOOL	-	Stopped by ESTOP function	Instantly stopped by 'ESTOP' function while RUN mode operation.
%FD131	_SB_OS_VER	DWOR D	-	O/S version	Indicates CPU O/S version
%FD132	_SB_OS_DATE	DWOR D	-	O/S data	Indicates CPU O/S data
%FD133	_SB_CP_OS_VER	DWOR D	-	O/S version of extension drive module	Indicates O/S version of extension drive module

Address	Flag name	Туре	Bit position	Contents	Description
%FW286	_SB_POWER_OFF	UINT	-	The no. of power cutoff	Indicates the no. of power cutoff
%FW269	_SB_CPU_TYPE	WORD	-	CPU ID (XGR - 0xA801)	Indicates CPU type
%FW632	_SB_BASE_INFO	WORD	-	Base information	Indicates how many base is installed.

Appendix 1.7 Redundant Operation Mode Information Flag

1. Redundant operation mode information

Address	Flag name	Туре	Bit position	Contents	Description
%FD0	_REDUN_STATE	DWOR D	Represent ative flag	Redundant operation information	Representative flag that indicates Redundant operation information
%FX0	_DUAL_RUN	BOOL	BIT 0	Redundant operation	Now Redundant operation CPU A, CPU B are normal
%FX1	_RING_TOPOLO	BOOL	BIT 1	Ring topology status	Extension base is configure as ring
%FX2	_LINE_TOPOLO	BOOL	BIT 2	Line topology status	Extension base is configure as line
%FX4	_SINGLE_RUN_	BOOL	BIT 4	A-SIDE single Run mode	Indicates A-SIDE single Run mode
%FX5	_SINGLE_RUN_ B	BOOL	BIT 5	B-SIDE single Run mode	Indicates B-SIDE single Run mode
%FX6	_MASTER_RUN_ A	BOOL	BIT 6	A-SIDE is master Run mode (Incase standby CPU exists)	Indicates A-SIDE is master Run mode
%FX7	_MASTER_RUN_	BOOL	BIT 7	B-SIDE is master Run mode (Incase standby CPU exists)	Indicates B-SIDE is master Run mode
%FX2016	_EXT_REDUN	BOOL	-	-	Extension redundancy system
%FX2017	_SB_EXT_REDUN	BOOL	-	-	Standby: extension redundancy system
%FW1458	_SL_OS_VER_B	ARRAY[031] OF WORD	-	-	Extension drive module OS version (B-side)
%FX4080	_SB_RING_TOPOL OGY	BOOL	-	-	Standby: ring topology state
%FX4081	_SB_LINE_TOPOL OGY	BOOL	-	-	Standby: line topology state

Appendix1.8 Operation Result Information Flag

1. Operation Result Information Flag

Address	Flag name	Туре	Writable	Contents	Description
%FX672	_ARY_IDX_ERR	BOOL	Writable	Index range excess error in case of using array	In case of using array, index is out of setting value's range
%FX704	_ARY_IDX_LER	BOOL	Writable	Index range excess error latch in case of using array	Error occurred when index is out of setting value's range, in case of using array, is kept and the user erases this by program
%FX6160	_ERR	BOOL	Writable	Operation error flag	As an operation error flag by unit of operation function (FN) or function block (FB), it is renewed every operation
%FX6165	_LER	BOOL	Writable	Operation error latch flag	Operation error latch flag by program block (PB) unit. Error is kept until relevant program ends and the user erases this by program

Appendix 1.9 Operation mode Key Status Flag

1. Operation mode key status flag

Address	Flag name	Туре	Writable	Contents	Description
				Remote key status	CPU key position status information- (remote: off, not
%FX291	_REMOTE_KEY	BOOL	-	information	remote: On)
%FX294	_STOP_KEY	BOOL	-	Stop key status information	CPU key position status information- (Stop: off, not stop: On)
%FX295	_RUN_KEY	BOOL	-	Run key status information	CPU key position status information- (Run: off, not Run: On)

Appendix 1.10 Link Flag (L) List

It describes data link (L) flag

[Table 1.10.1] Communication Flag List according to High speed link no. (High speed link no. 1 ~ 12)

				ling to High speed link no. (High speed link no. 1 ~ 12)
Item	Keyword	Type	Content	Description
			High speed link parameter "n" normal operation of all station	Indicates normal operation of all station according to parameter set in High
	_HSn_RLINK	Bit		speed link, and On under the condition as below.
				1. In case that all station set in parameter is RUN mode and no error,
				2. All data block set in parameter is communicated normally, and
				3. The parameter set in each station itself is communicated normally.
				Once RUN_LINK is On, it keeps On unless stopped by LINK_DISABLE.
		Bit	Abnormal state after _HSn_RLINK ON	In the state of _HSmRLINK flag On, if communication state of the station
				set in the parameter and data block is as follows, this flag shall be On.
				1. In case that the station set in the parameter is not RUN mode, or
	_HSn_LTRBL			2. There is an error in the station set in the parameter, or
				3. The communication state of data block set in the parameter is not good.
				LINK TROUBLE shall be On if the above 1, 2 & 3 conditions occur, and if the condition return to the normal state, it shall be Off again.
	_HSn_STATE[k] (k=000~127)	Bit Array	High speed link parameter "n", k block general state	Indicates the general state of communication information for each data
				block of setting parameter.
HS link				block of Setting parameter.
IIIIII				HS1STATEk=HS1MODk&_HS1TR X k&(~_HSnERRk)
				Indicates an autism as also of station and in It date blook of managements.
	_HSn_MOD[k] (k=000~127)	Bit Array	High speed link parameter "n", k block station RUN	Indicates operation mode of station set in k data block of parameter.
	,		operation mode	
	_HSn_TRX[k] (k=000~127)	Bit Array	Normal communication with High speed link parameter	Indicates if communication state of k data of parameter is communicated smoothly according to the setting.
				smootily according to the setting.
			"n", k block station High speed link	Indicates if the error occurs in the communication state of k data block of
	_HSn_ERR[k] (k=000~127)	Bit Array	parameter "n", k	parameter.
			block station operation error	
			mode	Indicates whether or not to set k data block of parameter.
	_HSn_SETBLOCK[k]	bit Array	High speed link	maississ most of not to out to data proof of paramotor.
			parameter "n", k block setting	
			NOOK SEMING	

Notes			
High Speed Link no.	L area address	Remarks	
1	L000000~L00049F	Comparing with High speed link 1 from [Table 1], the flag address of different	
2	L000500~L00099F	high speed link station no. is as follows by a simple calculation formula. * Calculation formula : L area address =	
3	L001000~L00149F		
4	L001500~L00199F	L000000 + 500 x (High speed link no. – 1)	
5	L002000~L00249F	In case of using high speed line flag for Program and monitoring, you can use	
6	L002500~L00299F	the flag map registered in XG5000 conveniently.	
7	L003000~L00349F	and mag map regional arrives and solutionary.	
8	L003500~L00399F		
9	L004000~L00449F		
10	L004500~L00499F		
11	L005000~L00549F		

k means block no. and appears 8 words by 16 per 1 word for 128 blocks from 000~127.

For example, mode information (_HS1MOD) appears from block 0 to block 15 for L00010, and block 16~31, 32~47, 48~63, 64~79, 80~95, 96~111, 112~127 information for L00011, L00012, L00013, L00014, L00015, L00016, L00017. Thus, mode information of block no. 55 appears in L000137.

[Table 2] Communication Flag List according to P2P Service Setting

P2P parameter no.(n): 1~8, P2P block(xx): 0~63

No.	Keyword	Туре	Contents	Description
	_P2Pn_NDRxx	Bit	P2P parameter n, xx	Indicates P2P parameter n, xx Block service normal end
			Block service normal	
			end	
	_P2Pn_ERRxx	Bit	P2P parameter n, xx	Indicates P2P parameter n, xx Block service abnormal end
			Block service abnormal	
			end	
	_P2Pn_STATUSxx	Word	P2P parameter n, xx	halianta amananda in anna af DOD arangatan an Dhala
P2P			Block service abnormal	Indicates error code in case of P2P parameter n, xx Block service abnormal end
			end error Code	
	_P2Pn_SVCCNTxx	Double word	P2P parameter n, xx	
			Block service normal	Indicates P2P parameter n, xx Block service normal count
			count	
	_P2Pn_ERRCNTxx	Double word	P2P parameter n, xx	
			Block service abnormal	Indicates P2P parameter n, xx Block service abnormal count
			count	

Appendix 1.11 Communication Flag (P2P) List

Link Register List according to P2P No.

P2P Parameter No. (n): 1~8, P2P Block(xx): 0~63

No.	Flags	Туре	Contents	Description
NO.	riays	Type	Contents	•
N00000	_PnBxxSN	Word	P2P parameter n, xx block another station no	Saves another station no. of P2P parameter 1, 00 block. In case of using another station no. at XG-PD, it is possible to edit during RUN by using P2PSN command.
N00001 ~ N00004	_PnBxxRD1	Device structure	Area device 1 to read P2P parameter n, xx block	Saves area device 1 to read P2P parameter n, xx block.
N00005	_PnBxxRS1	Word	Area size 1 to read P2P parameter n, xx block	Saves area size 1 to read P2P parameter n, xx block.
N00006 ~ N00009	_PnBxxRD2	Device structure	Area device 2 to read P2P parameter n, xx block	Saves area device 2 to read P2P parameter n, xx block.
N00010	_PnBxxRS2	Word	Area size 2 to read P2P parameter n, xx block	Saves area size 2 to read P2P parameter n, xx block.
N00011 ~ N00014	_PnBxxRD3	Device structure	Area device 3 to read P2P parameter n, xx block	Saves area device 3 to read P2P parameter n, xx block.
N00015	_PnBxxRS3	Word	Area size 3 to read P2P parameter n, xx block	Saves area size 3 to read P2P parameter n, xx block.
N00016 ~ N00019	_PnBxxRD4	Device structure	Area device 4 to read P2P parameter n, xx block	Saves area device 4 to read P2P parameter n, xx block.
N00020	_PnBxxRS4	Word	Area size 4 to read P2P parameter n, xx block	Saves area size 4 to read P2P parameter n, xx block.
N00021 ~ N00024	_PnBxxWD1	Device structure	Area device 1 to save P2P parameter n, xx block	Saves area device 1 to save P2P parameter n, xx block.
N00025	_PnBxxWS1	Word	Area size 1 to save P2P parameter n, xx block	Saves area size 1 to save P2P parameter n, xx block.
N00026 ~ N00029	_PnBxxWD2	Device structure	Area device 2 to save P2P parameter n, xx block	Saves area device 2 to save P2P parameter n, xx block.
N00030	_PnBxxWS2	Word	Area size 2 to save P2P parameter n, xx block	Saves area size 2 to save P2P parameter n, xx block.
N00031 ~ N00034	_PnBxxWD3	Device structure	Area device 3 to save P2P parameter n, xx block	Saves area device 3 to save P2P parameter n, xx block.
N00035	_PnBxxWS3	Word	Area size 3 to save P2P parameter n, xx block	Saves area size 3 to save P2P parameter n, xx block.
N00036 ~ N00039	_PnBxxWD4	Device structure	Area device 4 to save P2P parameter n, xx block	Saves area device 4 to save P2P parameter n, xx block.
N00040	_PnBxxWS4	WORD	Area size 4 to save P2P parameter n, xx block	Saves area size 4 to save P2P parameter n, xx block.

Notes

N area shall be set automatically when setting P2P parameter by using XG-PD and available to modify during RUN by using P2P dedicated command.

N area has a different address classified according to P2P parameter setting no., block index. The area not used by P2P service as address is divided, can be used by internal device.

Appendix 1.12 Reserved Word

The reserved words are predefined words to use in the system. Therefore, it is impossible to use them as the identifier.

Reserved Words
ACTION END_ACTION
ARRAY OF
AT
CASE OF ELSE END_CASE
CONFIGURATION END_CONFIGURATION
Name of Data Type
DATE#, D#
DATE_AND_TIME#, DT#
EXIT
FOR TO BY DO END_FOR
FUNCTION END_FUNCTION
FUNCTION_BLOCK END_FUNCTION_BLOCK
Names of Function Block
IF THEN ELSIF ELSE END_IF
OK
Operator (IL Language)
Operator (ST Language)
PROGRAM
PROGRAM END_PROGRAM
REPEAT UNTIL END_REPEAT
RESOURCE END_RESOURCE
RETAIN
RETURN
STEP END_STEP
STRUCTURE END_STRUCTURE
T#
TASK WITH
TIME_OF_DAY#, TOD#
TRANSITION FROM TO END_TRANSITION
TYPE END_TYPE
VAR END VAR
VAR_INPUT END_VAR
VAR_OUTPUT END_VAR
VAR_IN_OUT END_VAR
VAR_EXTERNAL END_VAR VAR ACCESS END_VAR
VAR_ACCESS END_VAR VAR GLOBAL END VAR
WHILE DO END WHILE
_
WITH

Warranty

1. Warranty Period

The product you purchased will be guaranteed for 18 months from the date of manufacturing.

2. Scope of Warranty

Any trouble or defect occurring for the above-mentioned period will be partially replaced or repaired. However, please note the following cases will be excluded from the scope of warranty.

- (1) Any trouble attributable to unreasonable condition, environment or handling otherwise specified in the manual,
- (2) Any trouble attributable to others' products,
- (3) If the product is modified or repaired in any other place not designated by the company,
- (4) Due to unintended purposes
- (5) Owing to the reasons unexpected at the level of the contemporary science and technology when delivered.
- (6) Not attributable to the company; for instance, natural disasters or fire
- 3. Since the above warranty is limited to PLC unit only, make sure to use the product considering the safety for system configuration or applications.

Environmental Policy

LSIS Co., Ltd supports and observes the environmental policy as below.

LSIS considers the environmental preservation as the preferential management subject and every staff of LSIS use the reasonable endeavors for the pleasurably environmental preservation of the earth. About Disposal LSIS' PLC unit is designed to protect the environment. For the disposal, separate aluminum, iron and synthetic resin (cover) from the product as they are reusable.



LSIS values every single customers.

Quality and service come first at LSIS.

Always at your service, standing for our customers.

http://eng.lsis.biz



10310001059

■ HEAD OFFICE

LS tower, Hogye-dong, Dongan-gu, Anyang-si, Gyeonggi-do 1026-6, Korea http://eng.lsis.biz

Tel: (82-2)2034-4870/Fax: 82-2-2034-4648 e-mail: cshwang@lsis.biz

■ LSIS Tokyo Office _ Tokyo, Japan

Address: 16FL. Higashi-Kan. Akasaka Twin Tower 17-22, Akasaka.Monato-ku Tokyo 107-8470. Japan

Tel: 81-3-3582-9128/Fax: 81-3-3582-2667 e-mail: jschuna@lsis.biz

■ LSIS (ME) FZE _ Dubai, U.A.E.

Address : Jafza View Tower Lob 19, Room 205 Along Sheikh Zayed Road Jebel Aali Free Zone Dubai, United Arab Emirates

Tel: 971-4-886-5360/Fax: 971-4-886-5361 e-mail: jungyongl@lsis.biz

■ LSIS Shanghai Office _ Shanghai, China

Address: Room E-G. 12FL Hiamin Empire Plaza. No.726. West. Yan'an Road Shanghai 200050. P.R. China e-mail: liyong@lsis.com.cn Tel: 86-21-5237-9977(609)/Fax: 89-21-5237-7189

■ LSIS Beijing Office _ Beijing, China

Address: B-Tower 17FL. Beijing Global Trade Center B/D. No. 36.
East BeisanHuan-Road. DongCheng-District. Beijing 100013. P.R. China
Tel: 86-10-5825-6027(666)/Fax: 86-10-5825-6028 e-mail: xunmi@lsis.com.cn

■ LSIS Guangzhou Office _ Guangzhou, China

Address: Room 1403.14FL. New Poly Tower. 2 Zhongshan Liu Road.Guangzhou.P.R China

Tel: 86-20-8328-6754/Fax: 86-20-8326-6287 e-mail: chenxs@lsis.com.cn

■ LSIS Chengdu Office _ Chengdu, China

Address : 12FL. Guodong Buiding. No.52 Jindun

Road Chengdu.610041. P.R. China

Tel: 86-28-8612-9151(9226)/Fax: 86-28-8612-9236 e-mail: comysb@lsis.biz

■ LSIS Qingdao Office _ Qingdao, China

Address : YinHe Bldg. 402 Room No. 2P Shandong Road,

Qingdao-City, Shandong-province 266071, P.R. China

Tel: 86-532-8501-6068/Fax: 86-532-8501-6057 e-mail: wangzy@lsis.com.cn

■ LSIS Europe B.V., Netherlands

Address: 1st. Floor, Tupolevlaan 48, 1119NZ, Schiphol-Rijk, The Netherlands Tel: +31 (0)20 654 1420/Fax: +31 (0)20 654 1429 e-mail: junshickp@lsis.biz

■ Wuxi LSIS Co., Ltd _ Wuxi, China

Address: 102-A. National High & New Tech Industrial Development Area.

Tel: 86-510-8534-6666/Fax: 86-510-8534-4078 e-mail: caidx@lsis.com.cn

■ Dalian LSIS Co., Ltd. _ Dalian, China

Address: No. 15. Liaohexi 3-Road. Economic and Technical Development zone. Dalian 116600. China

Tel: 86-411-273-7777/Fax: 86-411-8730-7560 e-mail: cuibx@lsis.com.cn

X LSIS constantly endeavors to improve its product so that information in this manual is subject to change without notice.

X and X and X are a constantly endeavors to improve its product so that information in this manual is subject to change without notice.

X and X are a constantly endeavors to improve its product so that information in this manual is subject to change without notice.

X and X are a constantly endeavors to improve its product so that information in this manual is subject to change without notice.

X and X are a constantly endeavors to improve its product so that information in this manual is subject to change without notice.

X and X are a constantly endeavors to improve its product so that information in this manual is subject to change without notice.

X and X are a constantly endeavors to improve its product so that information in this manual is subject to change without notice.

X and X are a constantly endeavors to improve its product so that it is not information in this manual is subject to change without notice.

X and X are a constantly endeavors to improve its product so that it is not information in the constantly endeavors.

X are a constantly endeavors to improve its product so that it is not information in the constantly endeavors.

X and X are a constantly endeavors to improve its product so the constantly endeavors to improve its product so the constantly endeavors.

X and X are a constantly endeavors to improve its product so the constantly endeavors to improve its produ

© LSIS Co., Ltd 2011 All Rights Reserved.